D-Link Quick Installation Guide

This product can be set up using any current Web browser, i.e., Internet Explorer 6 or Netscape Navigator 6.2.3 or later.



DWL-7200AP D-Link AirPremier™ AG Tri-mode Dualband Wireless Access Point

Before You Begin

The default IP address for the DWL-7200AP is **192.168.0.50** with a subnet mask of **255.255.255.0**. For the purpose of configuring the DWL-7200AP you will need to assign your computer a static IP address within the same range as the DWL-7200AP's IP address. See the Manual on the CD-ROM if you need assistance in assigning a static IP address for your network adapter.

Check Your Package Contents



If any of the above items are missing, please contact your reseller.

©2004 D-Link Systems, Inc. All rights reserved. Trademarks or registered trademarks are the property of their respective holders. Software and specifications subject to change without notice. DWL-7200AP. 09102004



Front Panel







Connecting The DWL-7200AP To Your Network

There are two methods of powering the DWL-7200AP. The power adapter can plug directly into the unit or plug into the PoE (Power over Ethernet) base unit. To connect power directly to the DWL-7200AP, please follow the steps on this page. To use the PoE base unit, please follow the steps on the next page.

Connecting Power Directly to the DWL-7200AP

- A. Connect the power adapter to the **receptor** on the back panel of the DWL-7200AP. Connect the power cord to the power adapter. Plug the other end of the power cord into a wall outlet or power strip. The Power LED will turn **ON** to indicate proper operation.
- B. Insert an Ethernet cable into the LAN port on the back panel of the DWL-7200AP and an available Ethernet port on the network adapter in the computer you will use to configure the DWL-7200AP. The Link LED for the LAN Port will illuminate to indicate a proper connection.
- C. Computers with 802.11a/b/g wireless adapters can connect to the DWL-7200AP. The DWL-AG660 AirPremier™ AG Wireless Cardbus Adapter and the DWL-AG530 AirPremier™ AG Wireless PCI Adapter will connect with the DWL-7200AP, out of the box, using the default settings.



Connecting The DWL-7200AP To Your Network (continued)

Connecting PoE (Power over Ethernet) to the DWL-7200AP

- Step 1: Connect one end of an Ethernet cable (included with your package) to the LAN port on the DWL-7200AP and the other end of the Ethernet cable to the port labeled P+DATA OUT on the PoE base unit.
- Step 2: Connect another Ethernet cable from the DATA IN port on the PoE base unit to your router/switch or to a PC.
- **Step 3**: Attach the power adapter to the connector labeled **POWER IN** on the PoE base unit. Attach the power cord to the power adapter and into an electrical outlet.





Connecting The DWL-7200AP To Your Network (continued)

When you have completed the steps in this *Quick Installation Guide*, your connected network should look similar to this:





Using The Setup Wizard

Open your Web browser and type **http://192.168.0.50** into the URL address box. Then press the **Enter** or **Return** key.

é	🕘 D-Link Systems, Inc Microsof						
E	ile	<u>E</u> dit	⊻iew	F <u>a</u> vorit	es 🔅	<u>T</u> ools	
	9	Back 👻	\bigcirc	- 🗙	2		
A	<u>d</u> di	855	http:/	//192.168	.0.50]	

 The logon pop-up screen will appear.
 Connect to 192.168.0.50
 Image: Connect to 192.168.0.50

 Type admin for the User name and leave the Password field blank.
 DW.7200AP

 User name: @ admin
 @ admin

 Password:
 @ admin

 Click OK
 OK







	🖆 DWL-7200AP - Microsoft Internet Explorer 📃 🔲 🔛			
Set Password	D-Link DWL-7200AP Setup Wizard			
You have the option to establish a password.	Set Password You may change the password by entering a new password. Click Next to continue. Password Verify Password			
Click Next	G D Back Next Exit			

DWL-7200AP - Microsoft Internet Explorer Set Wireless LAN 802.11a **D**-Link **DWL-7200AP Setup Wizard** Connection Set Wireless LAN 802.11a Connection The default wireless settings are: SSID = default Enter the SSID name and Channel number to be used for the Wireless LAN 802.11a Connection. Click Next to continue. Channel = 52 SSID: default You can change these settings to Channel 52 🗸 match an existing wireless network.

Click Next

WEP Encryption for 802.11a

The DWL-7200AP is capable of 64-bit, 128-bit, and 152-bit encryption. Keys may be entered in HEX (0-9, A-F) or ASCII format. Select the key type and size you wish to use and enter the key in the field provided. By default, WEP is **Disabled**.



2 Using The Setup Wizard (continued)

Set Wireless LAN 802.11g Connection

The default wireless settings are: SSID = default Channel = 6 You can change these settings to match an existing wireless network.



Click Next

WEP Encryption for 802.11g

The DWL-7200AP is capable of 64-bit, 128-bit, and 152-bit encryption. Keys may be entered in HEX (0-9, A-F) or ASCII format. Select the key type and size you wish to use and enter the key in the field provided. By default, WEP is **Disabled**.



Click Next

Click Restart





You will be returned to the Home tab.





Your Setup is Complete!

For additional settings or information, refer to the **Advanced**, **Tools**, or **Status** tabs on the web-management interface; or to the manual located on the CD-ROM.



For managing several DWL-7200AP's, please utilize the D-Link *Air*Premier[™]AG Access Point Manager. For the latest version of the firmware or AP manager, please go to http://support.dlink.com

Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our website, or by phone.

Tech Support for customers within the United States:

D-Link Technical Support over the Telephone:

(877) 453-5465 Monday to Friday, 6:00am to 6:00pm PST

D-Link Technical Support over the Internet: http://support.dlink.com email:support@dlink.com

Tech Support for customers within Canada:

D-Link Technical Support over the Telephone: (800) 361-5265 Monday to Friday, 7:30am to 12:00am EST

D-Link Technical Support over the Internet: http://support.dlink.ca email:support@dlink.ca

