

User Manual

WLAN ADSL2+ Router



INDEX

1.0 About This Manual	1
1.1 Document Objectives	1
1.2 Product Overview	1
1.3 Product Description	1
2.0 Specification.....	2
2.1 LED Meaning	3
2.2 Connectors	4
2.3 Factory Default Settings	5
3.0 Hardware Requirements.....	6
3.1 Setting up the Hardware Environment	6
3.2 Powering on WLAN ADSL2+ Router	6
4.0 System Requirements	7
4.1 Package Contents	7
4.2 Installation & Setup.....	8
5.0 Configuration Procedures.....	10
6.0 WLAN ADSL2+ Router Configuration.....	18
7.0 Technology Glossary	25
8.0 Introduction of the Web Configuration	28
8.1 Web Configuration Overview.....	28
8.2 Accessing WLAN ADSL2+ Router Web Configuration.....	28
9.0 Universal Plug-and-Play (UPnP)	57
9.1 Universal Plug and Play Overview	57
9.2 How do I know if I'm using UPnP?	57
9.3 NAT Traversal	57
9.4 Cautions with UPnP.....	57
9.5 Configuring UPnP	58
9.6 Installing UPnP in Windows Example.....	59
9.7 Installing UPnP in Windows Me.....	59
9.8 Installing UPnP in Windows XP	61
9.9 Using UPnP in Windows XP Example.....	63
9.10 Auto-discover Your UPnP-enabled Network Device.....	63
10.0 Web Configuration Easy Access	65
11.0 Troubleshooting	67
A.1 Using LEDs to Diagnose Problems.....	67
A.1.1 Power LED	67
A.1.2 LAN LED	67
A.1.3 DSL LED (ACT & LINK).....	67
A.2 Telnet.....	67
A.3 Web Configuration.....	68
A.4 Login Username and Password.....	68
A.5 LAN Interface	68
A.6 WAN Interface	68
A.7 Internet Access.....	69
A.8 Remote Node Connection.....	69

1.0 About This Manual

This manual is developed for users, system managers, network managers, and contains installation, configuration, and operation of the WLAN ADSL2+ Router.

1.1 Document Objectives

The objectives of this manual are to describe all the initial hardware installation and basic configuration procedure for the WLAN ADSL2+ Router. After completing the installation and basic configuration procedures, you can then use the appropriate contents to more completely configure your system.

1.2 Product Overview

This section provides an overview of the WLAN ADSL2+ Router. It also describes the general applications available with the WLAN ADSL2+ Router.

Note! This section documents general product features available in the WLAN ADSL2+ Router product series. Please refer to the release notes for a current list of upgraded hardware and software specifications.

1.3 Product Description

WLAN ADSL2+ Router is a low cost, high performance and high-speed device that provides a full rate ADSL2+ Router with the superb reliability and a complete solution for home and office router. WLAN ADSL2+ Router can have a maximum downstream data rate of up to 24Mbps and an upstream of up to 1Mbps. When configured as a DHCP server, it will assign IP address to every connected PC and acts as the only externally recognized Internet device on your local area network. With build-in NAT, WLAN ADSL2+ Router serves as an Internet firewall, protecting your network from being accessed by outside users. You can safely enjoy the new generation broadband Internet with WLAN ADSL2+ Router.

2.0 Specification

ADSL Standards supported

- Compliant to ITU-T G.992.1 (G.dmt), G.992.2 (G.lite), G.992.3 (ADSL2), G.992.4 (splitterless ADSL2), G.992.5 (ADSL2+) for Annex A, B
- G.lite (G.992.2) with line rate support of up to 1.5Mbps downstream and 512Kbps upstream.
- Supports Multi-Mode standard (ANSI T1.413, Issue 2; G.dmt (G.992.1); G.994.1 and G.996.1(for ISDN only); G.991.1;G.lite (G992.2)).
- Supports OAM F4/F5 loop-back, AIS and RDI OAM cells.
- ATM Forum UNI 3.1/4.0 PVC.
- Supports up to 8 PVCs (UBR, CBR, VBR).
- Multiple Protocols over AAL5 (RFC 1483).
- PPP over AAL5 (RFC 2364).
- PPP over Ethernet (RFC 2516).

Wireless Ethernet 802.11g

With built-in 802.11g access point for extending the communication media to WLAN while providing the WEP and WPA for securing your wireless networks.

Network Address Translation (NAT)

Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network (for example a private IP address used in a local network) to a different IP address known within another network (for example a public IP address used on the Internet).

Universal Plug and Play (UPnP)

Using the standard TCP/IP protocol, the WLAN ADSL2+ Router and other UPnP enabled devices can dynamically join a network, obtain an IP address and convey its capabilities to other devices on the network.

10/100M Auto-negotiation Ethernet / Fast Ethernet Interface

This auto-negotiation feature allows the WLAN ADSL2+ Router to detect the speed of incoming transmissions and adjust appropriately without manual intervention. It allows data transfer of either 10 Mbps or 100 Mbps in either half-duplex or full-duplex mode depending on your Ethernet network.

Dynamic DNS Support

With Dynamic DNS support, you can have a static hostname alias for a dynamic IP address,

Multiple PVC (Permanent Virtual Circuits) Support

Your WLAN ADSL2+ Router supports up to 8 PVC's.

DHCP Support

DHCP (Dynamic Host Configuration Protocol) allows individual clients (computers) to obtain TCP/IP configuration at start-up from a centralized DHCP server. The WLAN ADSL2+ Router has built-in DHCP server capability enabled by default. It can assign IP addresses, an IP default gateway and DNS servers to DHCP clients. The WLAN ADSL2+ Router can now also act as a surrogate DHCP server (DHCP Relay) where it relays IP address assignment from the actual real DHCP server to the clients.

2.1 LED Meaning

Your WLAN ADSL2+ Router has indicator lights on the front side. Please see below for an explanation of the function of each indicator light.



Power indicator



Wireless Active indicator



ADSL Link indicator



Ethernet Active indicator



Internet Active indicator

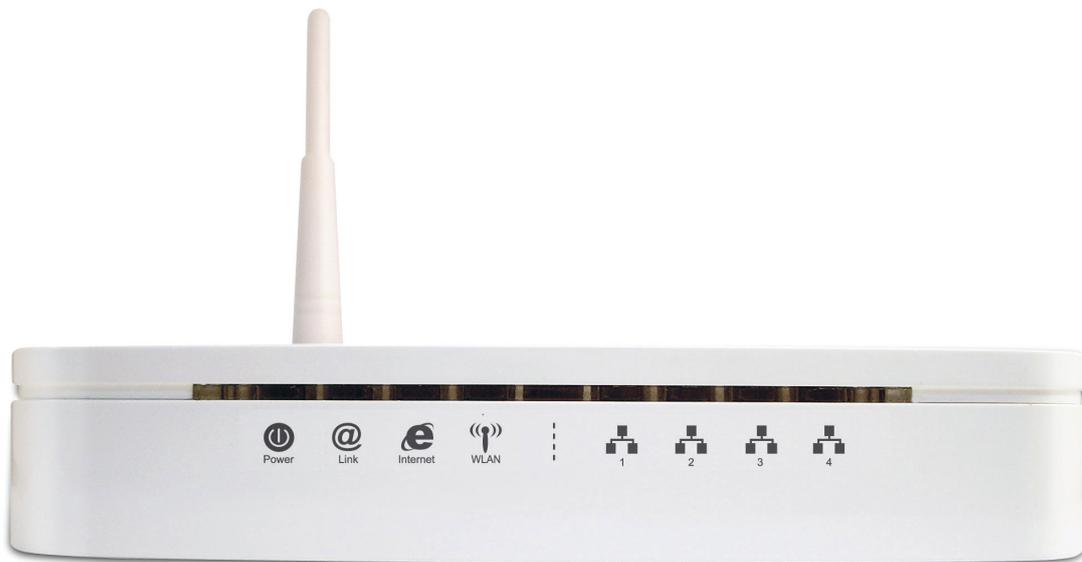


Table 1. LED function

Label	Color	On	Flash	Off
 Power	Green	Ready	Waiting for device ready	Power Off
 Link	Green	Connect to DSLAM	Disconnect to DSLAM	N/A
 Internet	Green	The device has a WAN IP address from ISP	Transmit / Receive Data	N/A
 WLAN	Green	WLAN Ready	Transmit / Receive Data	WLAN Off
 1	Green	Ethernet Connected	Transmit / Receive Data	Ethernet Disconnected

**The icons appear on the products are for application indication only.
The trademark or intellectual property is belonging to their respective owners.**

2.2 Connectors

Table 2 shows the function of each connector and switch of the device.

Table 2. Function / Description of Connectors

Connector	Description
SWITCH	Power Switch
POWER	Connects to your WLAN ADSL2+ Router 12Vac power adaptor
LAN1~4	RJ-45 Jack (Ethernet Cable) connection to your PC, or HUB
LINE	Connects to your ADSL2+ line – for ADSL2+ Line input
RESET	Reset button. RESET the WLAN ADSL2+ Router to its default settings. Press this button for at least 6 full seconds to start to reset it to its default settings.

Figure1. Rear View of the WLAN ADSL2+ Router


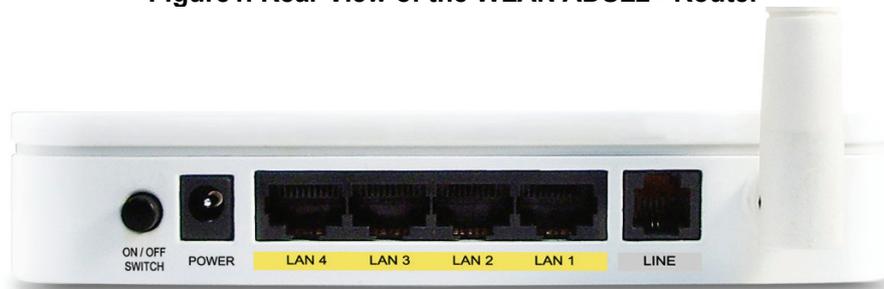


Figure2. RESET button

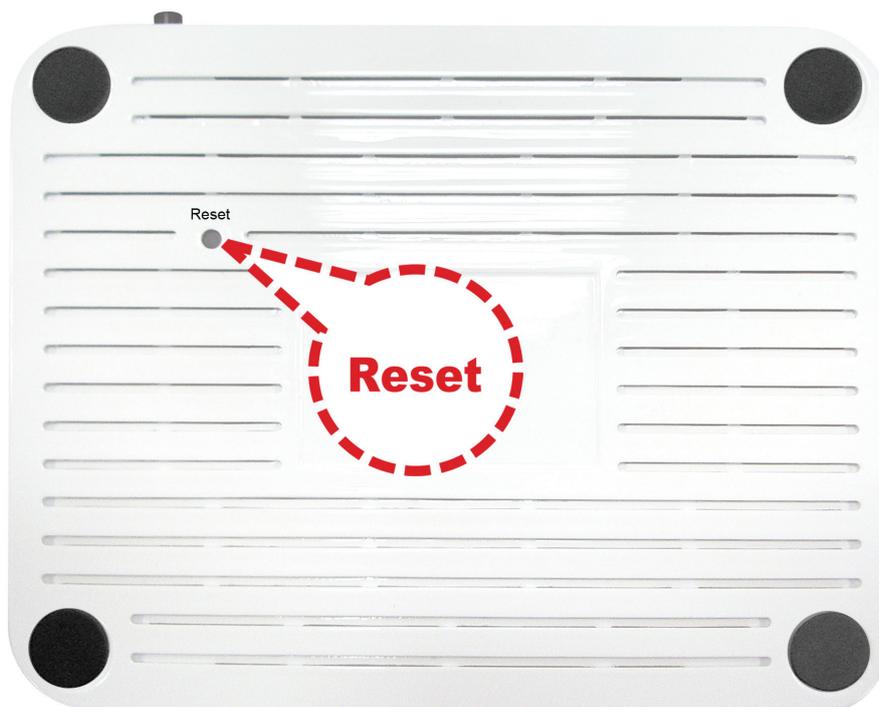

2.3 Factory Default Settings

Before configuration, please refer to following default settings,

Web interface:

Username: admin

Password: 1234

LAN IP Settings:

IP Address: 192.168.1.1

Subnet Mask: 255.255.255.0

DHCP:

DHCP Server: Enable

3.0 Hardware Requirements

To use WLAN ADSL2+ Router, please have following hardware / accessories ready.

A PC with Pre-installed Ethernet Adapter (Required)
12Vac power adaptor (Included in the package)
RJ-45 Ethernet cable (Included in the package)
RJ-11 cable (Included in the package)

3.1 Setting up the Hardware Environment

Note! Be sure that you are well insulated from any power source to avoid electricity shock.

Please kindly refer to chapter 4.2 “Installation & Setup”

3.2 Powering on WLAN ADSL2+ Router

Note! Use only the manufacturer-approved power supply that shipped with the WLAN ADSL2+ Router.

1. Connect the power to the WLAN ADSL2+ Router by plugging the power supply into an appropriate electrical outlet.
2. If the Power LED is off, refer to “**Troubleshooting**” for information.

Please kindly refer to chapter 4.2 “Installation & Setup”

4.0 System Requirements

1. Pentium 200MHZ processor or above
2. Windows 98SE / Windows Me / Windows 2000 / Windows XP / Windows Vista and Windows 7
3. 64MB of RAM or above
4. 25MB free disk space

4.1 Package Contents

For Annex-B WLAN ADSL2+ Router

1. WLAN ADSL2+ Router
2. CD-ROM (Software & Manual)
3. Quick Installation Guide
4. 1 x Telephone Cable (RJ-11)
5. Ethernet Cable (RJ-45)
6. Power Adaptor
7. Annex-B Splitter (Optional, with an extra RJ-11 Telephone cable)

For Annex-A WLAN ADSL2+ Router


1. WLAN ADSL2+ Router
2. CD-ROM (Software & Manual)
3. Quick Installation Guide
4. 1 x Telephone Cable (RJ-11)
5. Ethernet Cable (RJ-45)
6. Power Adaptor
7. Annex-A Splitter (Optional, with an extra RJ-11 Telephone cable)

4.2 Installation & Setup

Follow each STEP carefully and only go to the next step once you have completed the previous STEP.


Connection of WLAN ADSL2+ Router

If you have an ISDN telephone line connect the modem router as shown below:

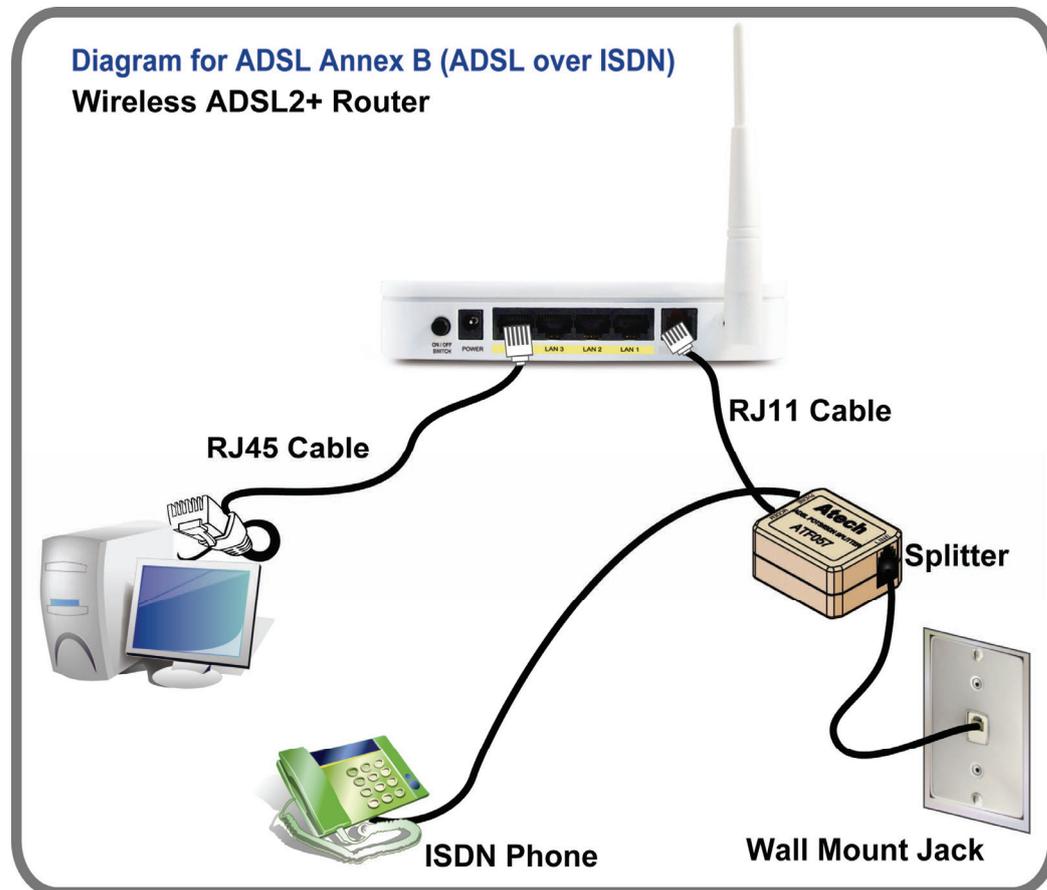

1. Connect the supplied RJ45 Ethernet cable from your PC's Ethernet port to any of the 4 WLAN ADSL2+ Router's LAN Ports.
2. Connect the supplied RJ11 telephone cable from your home's telephone jack to the "LINE" port of the supplied splitter. Connect another RJ11 telephone cable to the "MODEM" port of the splitter and connect the other end of this cable to the LINE port of your WLAN ADSL2+ Router. (If there is no option Splitter, please connect the supplied RJ11 telephone cable from your home's telephone jack to the "LINE" port of your WLAN ADSL2+ Router.)
3. Connect a RJ11 telephone cable to the "PHONE" port of the splitter and connect the other end to your telephone.
4. Connect the power adapter to the power inlet "POWER" of the WLAN ADSL2+ Router and turn the "ON/OFF SWITCH" switch of your WLAN ADSL2+ Router on.

If you have a PSTN telephone line (normal analog line) connect the router as shown below:

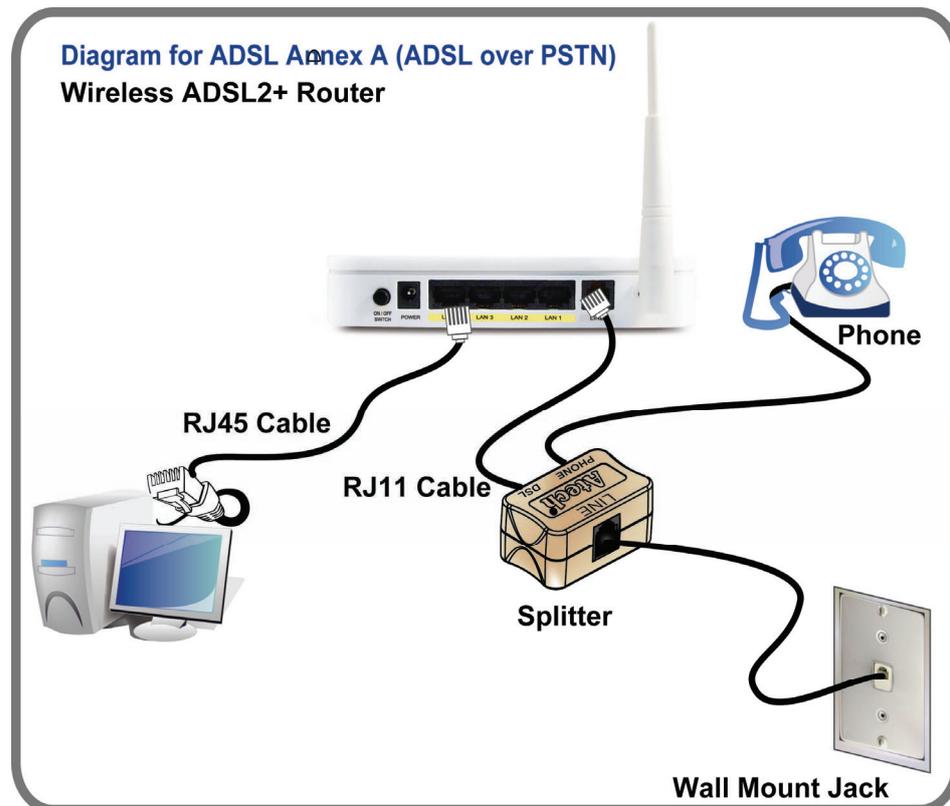


1. Connect the supplied RJ45 Ethernet cable from your PC's Ethernet port to any of the 4 WLAN ADSL2+ Router's LAN Ports.
2. Connect the supplied RJ11 telephone cable from your home's telephone jack to the "**LINE**" port of the supplied splitter. Connect the other supplied RJ11 telephone cable to the "**DSL**" port of the splitter and connect the other end of this cable to the "**LINE**" port of your WLAN ADSL2+ Router. (If there is no option Splitter, please connect the supplied RJ11 telephone cable from your home's telephone jack to the "**LINE**" port of your WLAN ADSL2+ Router.)
3. Connect a RJ11 telephone cable to the "**PHONE**" port of the splitter and connect the other end to your telephone.
4. Connect the power adapter to the power inlet "**POWER**" of the WLAN ADSL2+ Router and turn the "**ON/OFF SWITCH**" switch of your WLAN ADSL2+ Router on.

5.0 Configuration Procedures


Before starting the WLAN ADSL2+ Router configuration, please kindly configure the PC computer as below, to have automatic IP address / DNS Server.

For Windows 98SE/ME/2000/XP


1. Click on **“Start” -> “Control Panel” (in Classic View)**. In the Control Panel; double click on **“Network Connections”** to continue.

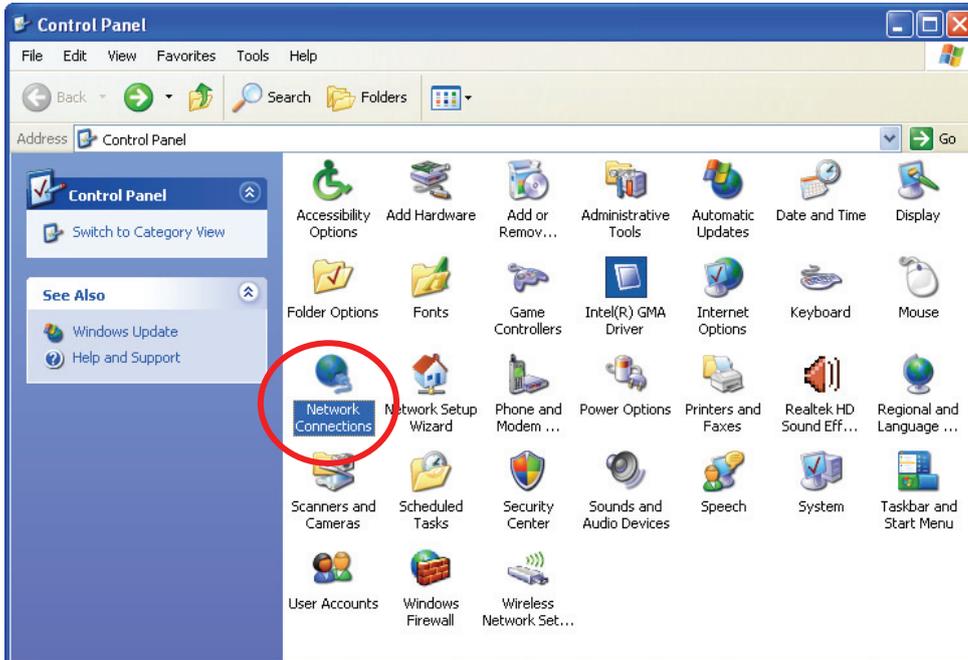


2. Single RIGHT click on **“Local Area connection”**, then click **“Properties”**.

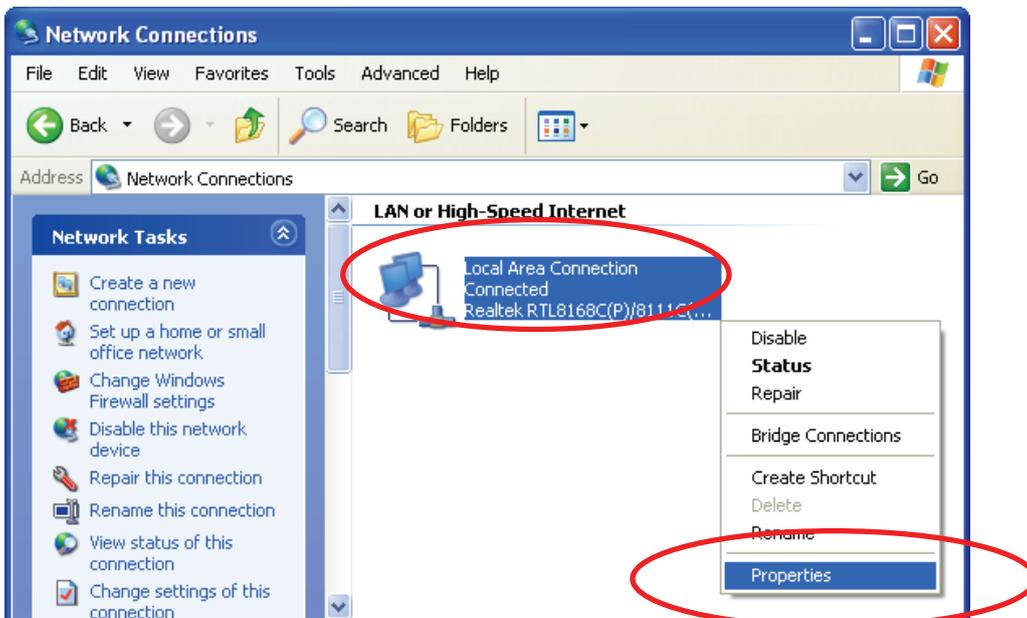

3. Double click on “Internet Protocol (TCP/IP)”.

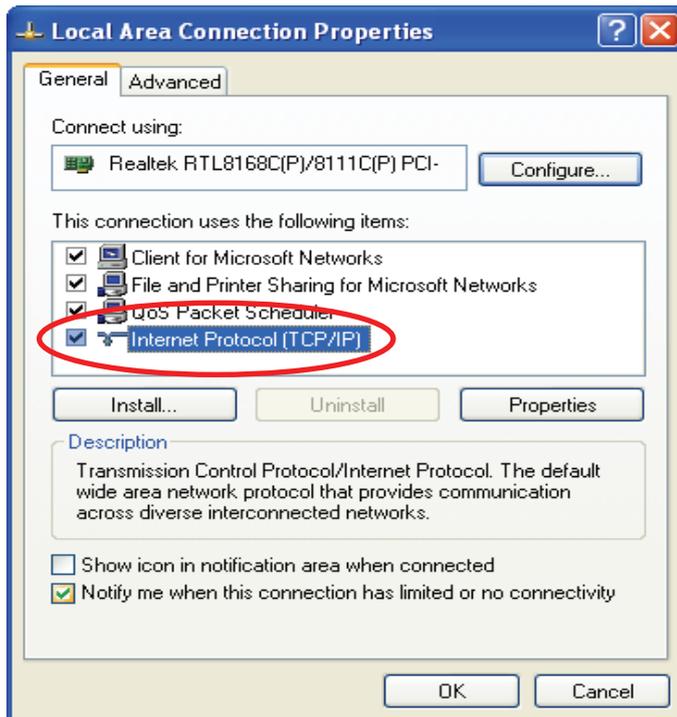


4. Check “Obtain an IP address automatically” and “Obtain DNS server address automatically” then click on “OK” to continue.

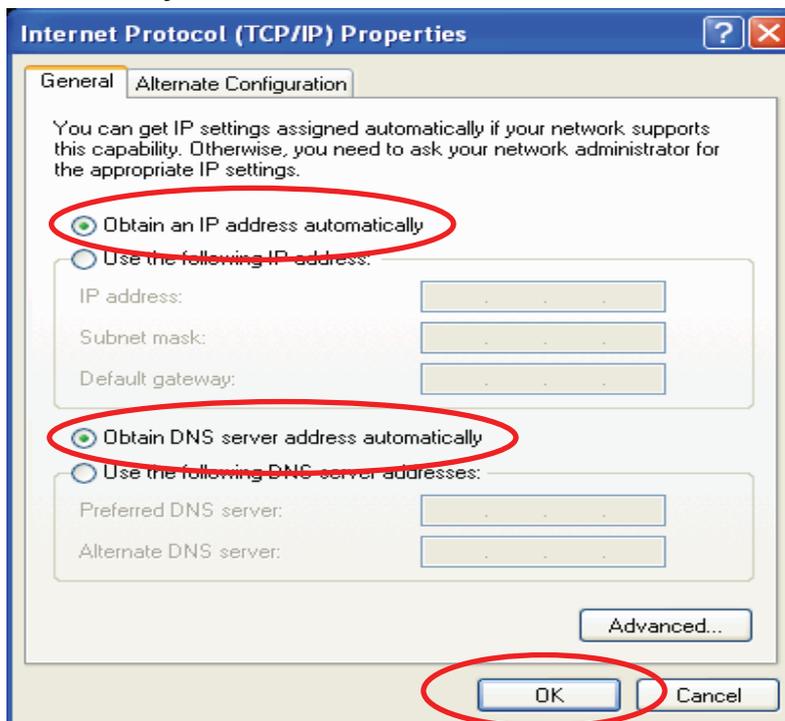


5. Click “Show icon in notification area when connected” (see screen image in 3. above) then click on “OK” to complete the setup procedures.

For Windows Vista-32/64


1. Click on “Start” -> “Control Panel” -> “Network and Sharing Center”.

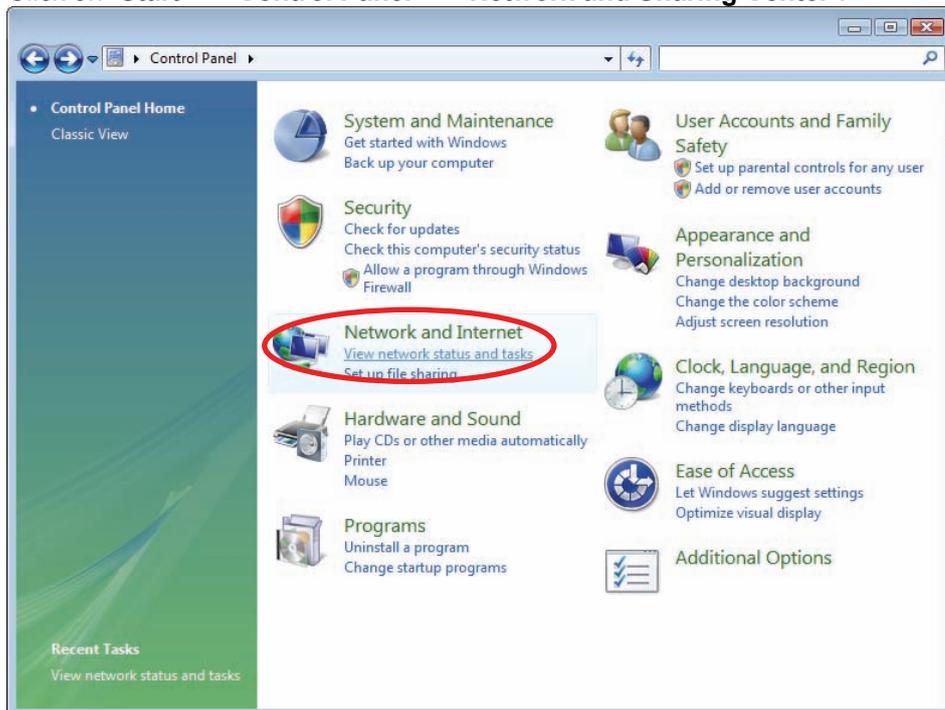


2. In the Manage network connections, click on “**Manage network connections**” to continue.

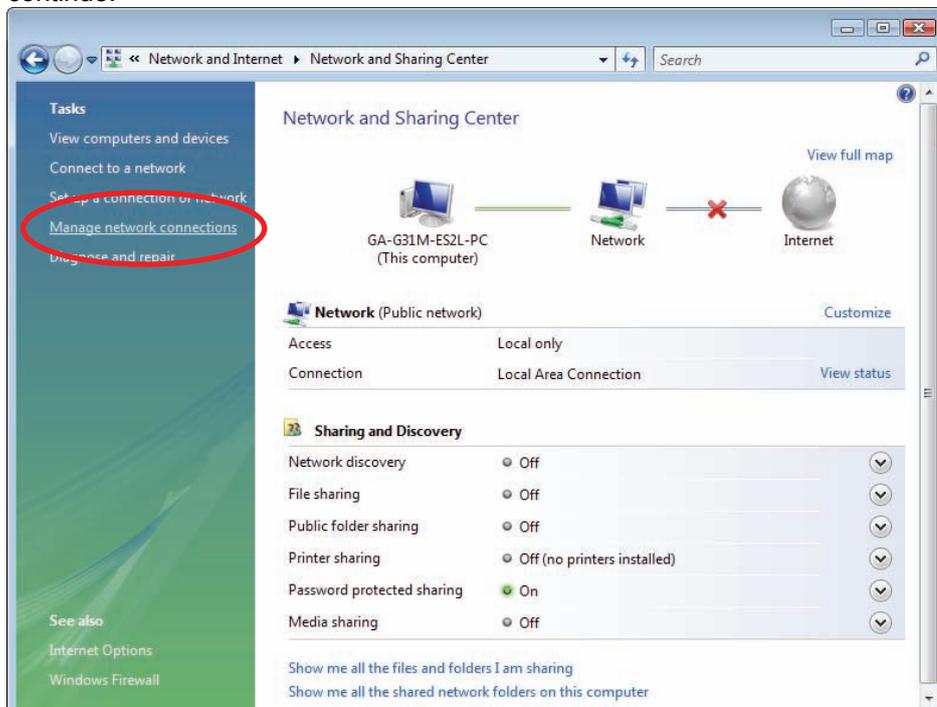


3. Single RIGHT click on “**Local Area connection**”, then click “**Properties**”.

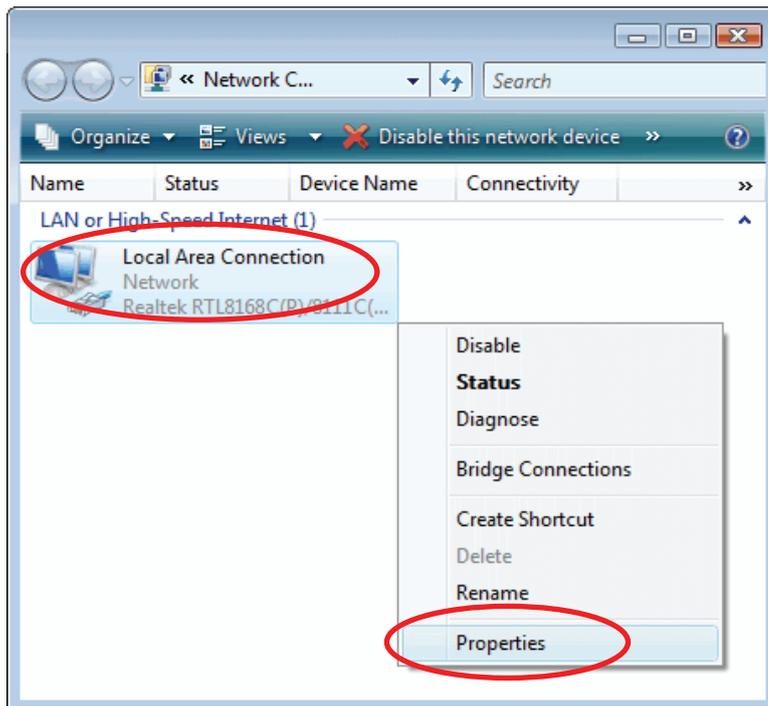

4. The screen will display the information “**User Account Control**” and click “**Continue**” to continue.
5. **Double** click on “**Internet Protocol Version 4 (TCP/IPv4)**”.

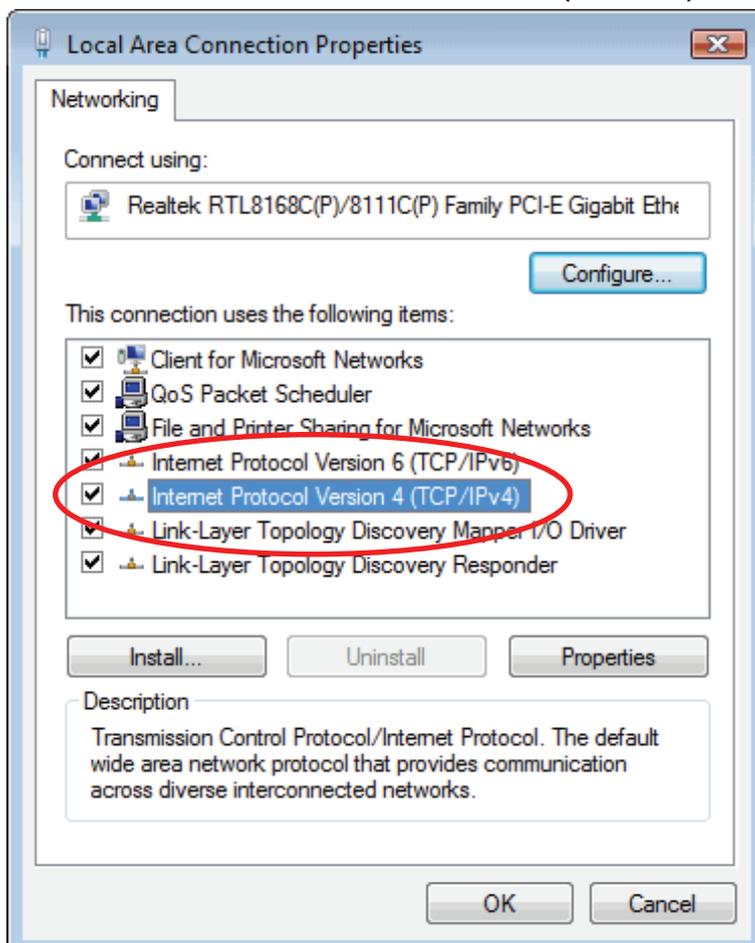


6. Check **“Obtain an IP address automatically”** and **“Obtain DNS server address automatically”** then click on **“OK”** to continue.

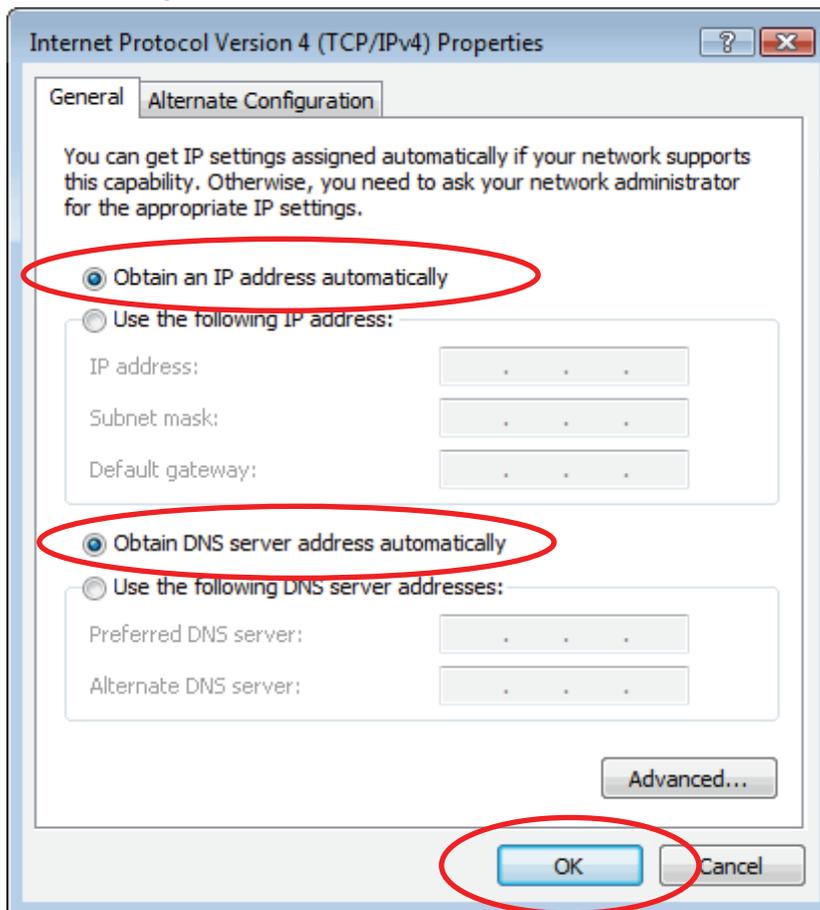


For Windows 7-32/64


1. Click on “Start” -> “Control Panel” (in **Category View**) -> “View network status and tasks”.

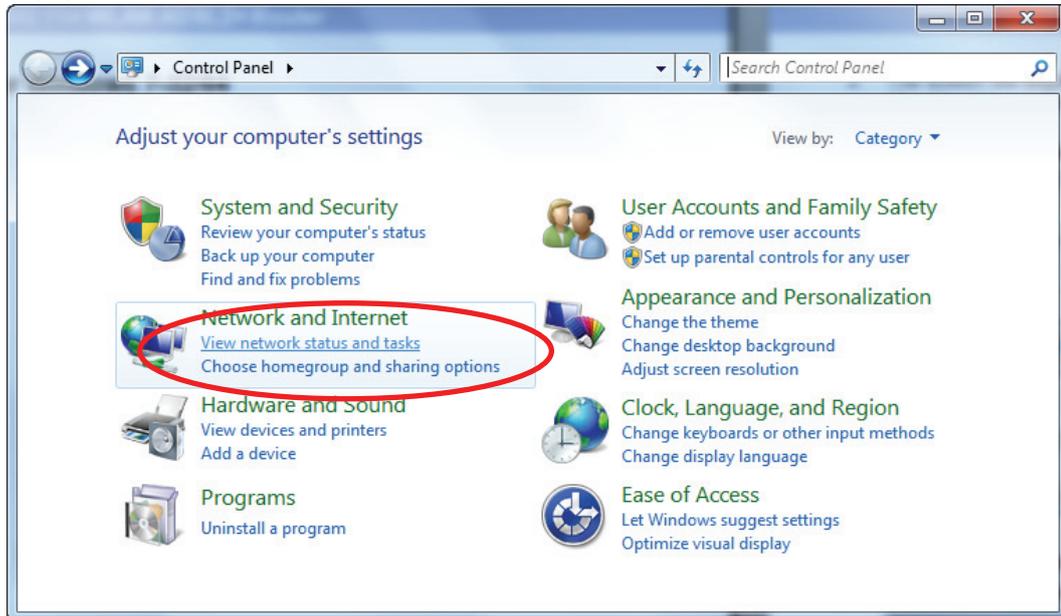


2. In the **Control Panel Home**, click on “Change adapter settings” to continue.

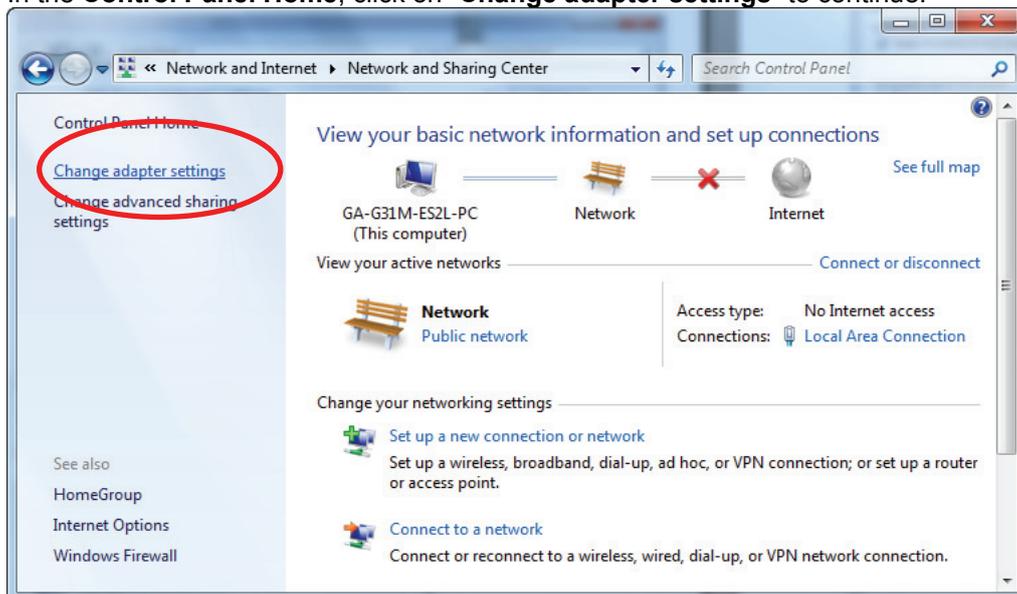


3. Single RIGHT click on “**Local Area Connection**”, then click “**Properties**”.

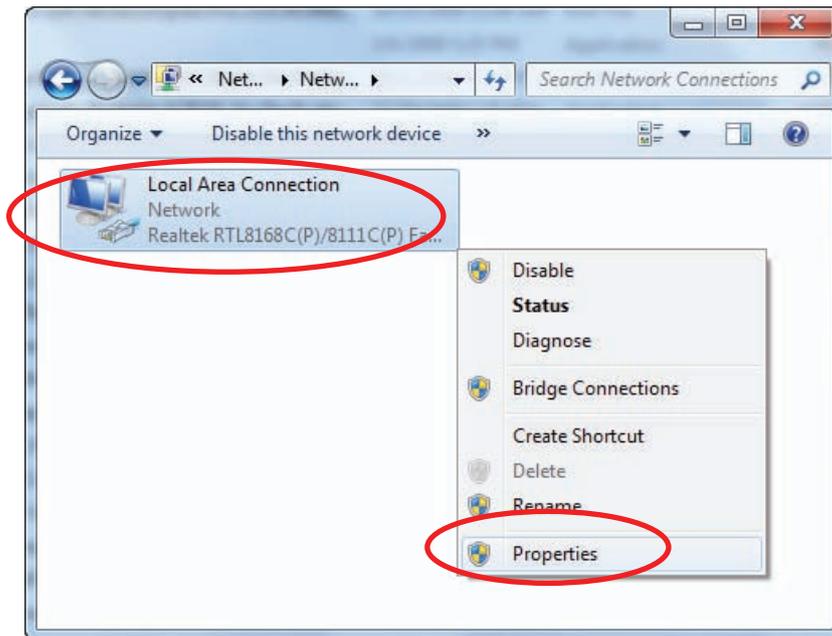

4. Double click on “**Internet Protocol Version 4 (TCP/IPv4)**”.

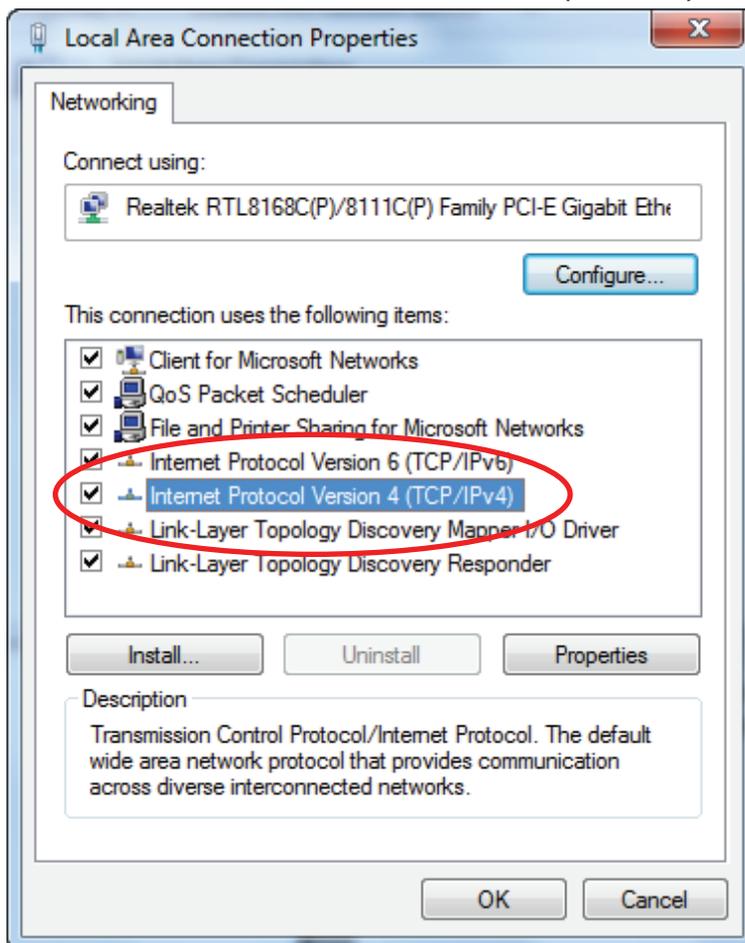


5. Check **“Obtain an IP address automatically”** and **“Obtain DNS server address automatically”** then click on **“OK”** to continue.

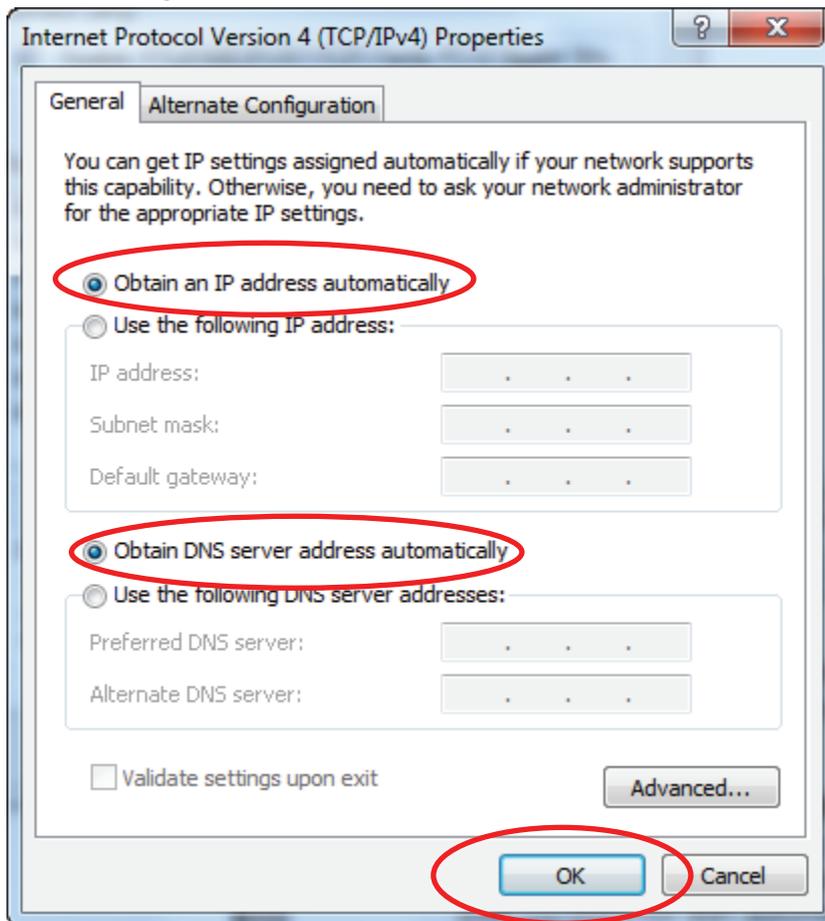

6.0 WLAN ADSL2+ Router Configuration

1. Please insert the supplied CD into your CD-ROM drive.
2. The CD should auto-start, displaying the window shown in 3. below. If your CD does not start automatically, go to Windows Explorer, Select your CD drive and double click "autorun.exe".
3. To configure the device, please click "Easy Configuration".

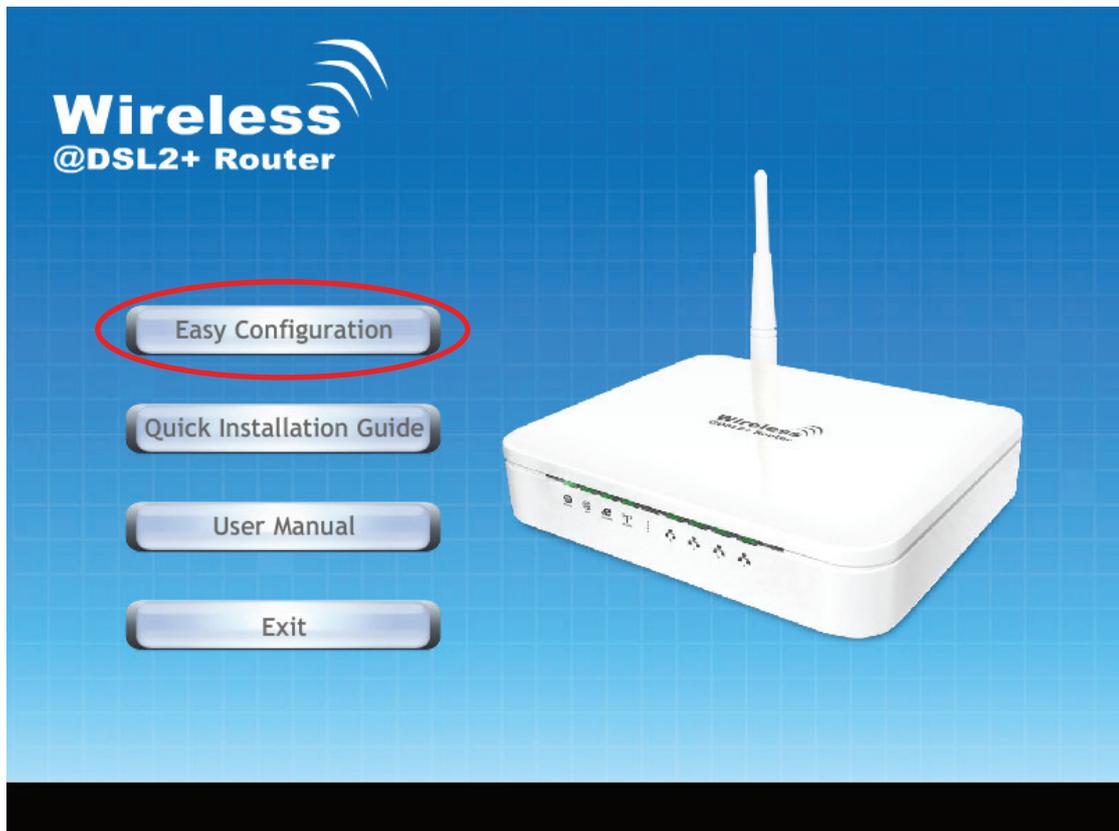

4. Enter the VPI, VCI, Username and Password your ISP (Internet Services Provider) provided, and Protocol mode. Then press **“Next”**.

EASY SETUP 1.0 STANDARD

Wireless @DSL2+ Router

Set Internet Connection

The information from your Internet Service Provider. (ISP)

Please base on your environment to select one of following protocol.

Protocol modes :

VPI / VCI : VPI VCI

Please enter your ADSL Username and Password.

Username :

Password :

Show characters of Password

Next **Exit**

5. Please enter the “**ESSID**” and Wireless “**Default Channel**” if you want to change (the default settings **Network= Enable, ESSID = TW263R4, Default Channel=6**).
6. Choose the Encryption type if necessary, as **Off – No Encryption (Default)** / 64 Bit Encryption / 128 Bit Encryption / Wi-Fi Protected Access (TKIP) / Wi-Fi Protected Access2 (AES-CCMP) and WPA Mixed Mode. For example, you choose the WPA Mixed Mode type and configure Passphrase.
7. Please click “**Setup**” button, when the procedure is completed, it will start to configure the device for a while.

EASY SETUP 1.0 STANDARD



Wireless Configuration

Select the Wireless Network enable or disable.

Wireless Network :

Select the Default Channel from your Internet Service Provider (ISP), or allow to automatically select the best channel.

Default Channel :

Select the shared name that with all of Wireless PCs in your Wireless Network.

ESSID :

Select the protective encryption.

Encryption :

Select the key for Wireless Network authentication.


Passphrase :

(Passphrase should be at least 8 characters.)


Show characters of Passphrase

Back
Setup
Exit


- Now, checking WLAN ADSL 2+ Router hardware connection, ADSL2+ settings, WLAN settings, and ADSL2+ Line connection status.

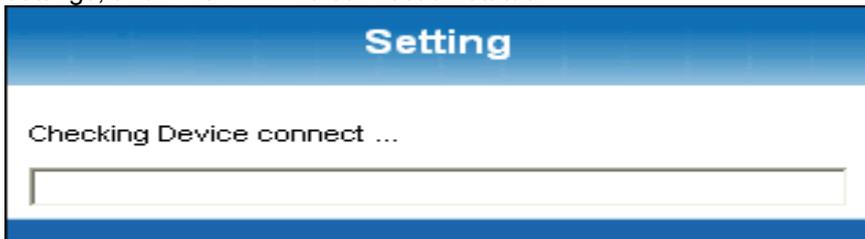

- Easy setup configuration completed. Click on "Exit" to exit this program.

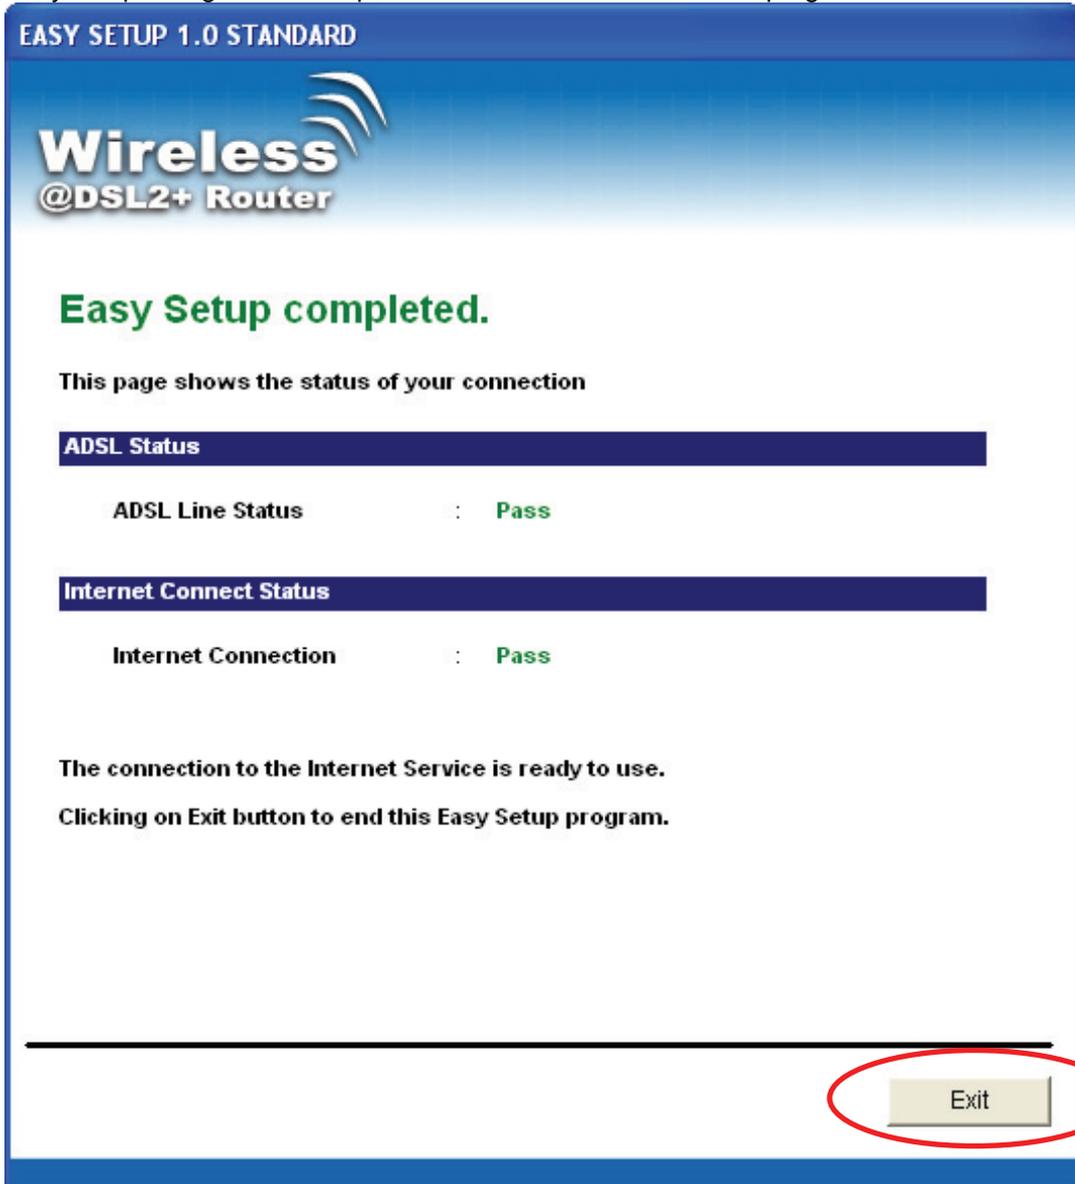

10. Click on " **Exit** " to exit this program.

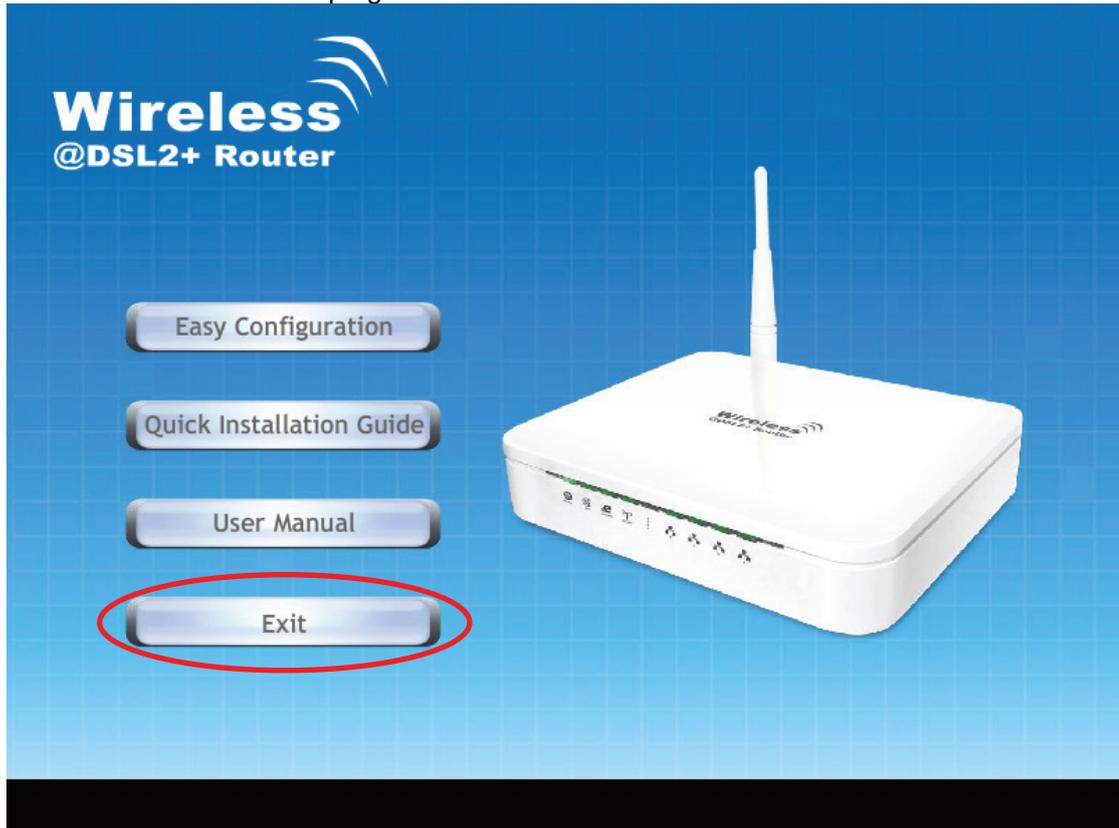

11. Now, the WLAN ADSL2+ Router has been configured completely, and suitable for Wireless and Internet Connections.


Connect Wirelessly

For easy installation it is saved to keep the settings. You can later change the wireless settings via the wireless configuration menu. (see user manual on the CD – Chapter 8 and other)

1. Double click on the wireless icon on your computer and search for the wireless network that you enter **ESSID** name.



2. Click on the wireless network that you enter **ESSID** name to connect

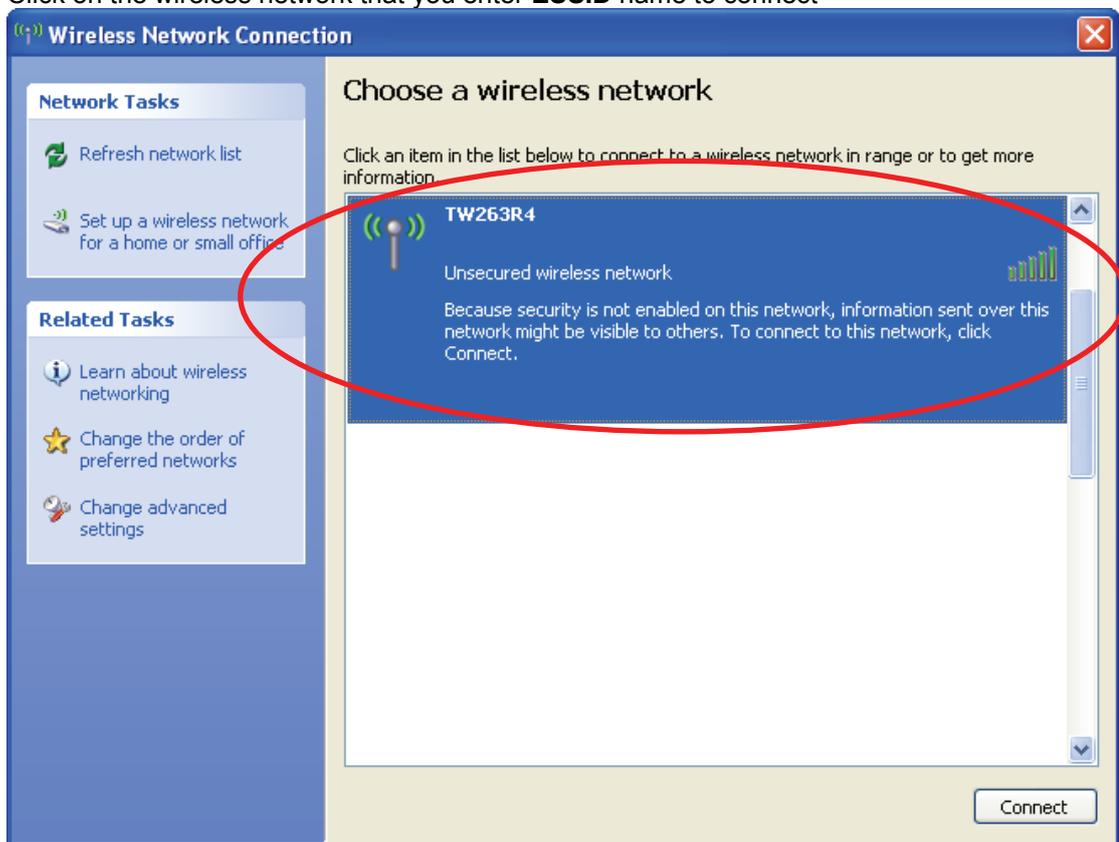


3. If the wireless network isn't encrypted, click on "**Connect Anyway**" to connect.



4. If the wireless network is encrypted, enter the network key that belongs to your Encryption type and Passphrase. You can later change this network key via the wireless configuration menu. (see user manual on the CD – Chapter 8 and other).



5. Click on "**Connect**" or "**Apply**".

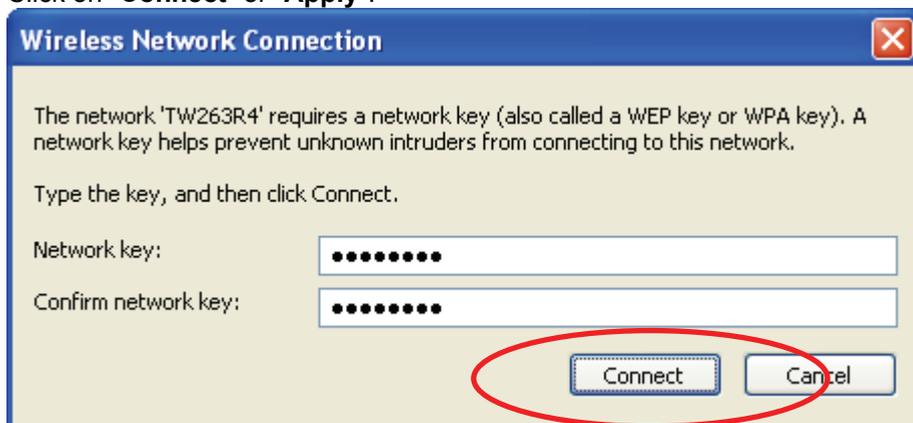

Now, the WLAN ADSL2+ Router has been configured, and able to connect to ISP/ Website

7.0 Technology Glossary

10Base-T

An adaptation of the Ethernet standard for Local Area Network (LAN). 10Base-T uses a twisted pair cable with maximum length of 100 meters.

AAL

ATM Adaptation Layer that defines the rules governing segmentation and reassembly of data into cells. Different AAL types are suited to different traffic classes.

Address mask

A bit mask used to select bits from an Internet address for subnet addressing. The mask is 32 bits long and selects the network portion of the Internet address and one or more bits of the local portion. Sometimes called subnet mask.

ADSL

Asymmetric Digital Subscriber Line, as its name showing, is an asymmetrical data transmission technology with high traffic rate downstream and low traffic rate upstream. ADSL technology satisfies the bandwidth requirement of applications, which demand "asymmetric" traffic, such as web surfing, file download and Video-on-demand (VOD).

ATM

Asynchronous Transfer Mode is a layer 2 protocol supporting high-speed asynchronous data with advanced traffic management and quality of service features.

bps

Bits per second. A standard measurement of digital transmission speeds.

Bridge

A device that connects two or more physical networks and forwards packets between them. Bridges can usually be made to filter packets, that is, to forward only certain traffic. Related devices are: repeaters which simply forward electrical signals from one cable to the other, and full-fledged routers which make routing decisions based on several criteria.

CPE

Customer Premises Equipment, such as ADSL router, USB modem.

DHCP

Dynamic Host Configuration Protocol. Used for assigning dynamic IP address to devices on a network. Used by ISPs for dialup users.

DNS

Domain Name Server, translates domain names into IP addresses to help user recognize and remember. However, the Internet actually runs on numbered IP addresses, DNS servers needs to translate domain names back to their respective IP addresses.

DSL

Digital Line Subscriber (DSL) technology provides high-speed access over twisted copper pair for connection to the Internet, LAN interfaces, and to broadband services such as video-on-demand, distance learning, and video conferencing.

FTP

File Transfer Protocol. The Internet protocol (and program) used to transfer files between hosts.

IPoA (RFC 1577)

Classical IP and ARP over ATM. Considers ATM configured as a Logic IP Sub-network(LIS) to replace Ethernet local LAN segments.

ISP

Internet service provider. A company that allows home and corporate users to connect to the Internet.

LAN

Local area network. A limited distance (typically under a few kilometers or a couple of miles) high-speed network (typically 4 to 100 Mbps) that supports many computers.

MAC

Media Access Control Layer. A sub-layer of the Data Link Layer (Layer 2) of the ISO OSI Model responsible for media control.

MTU

Maximum Transmission Unit

NAT

Network Address Translator as defined by RFC 1631. Enables a LAN to use one set of IP address for internal traffic. A NAT box located where the LAN meets the Internet provides the necessary IP address translation. This helps provide a sort of firewall and allow for a wider address range to be used internally without danger of conflict.

PPP

Point-to-Point-Protocol. The successor to SLIP, PPP provides router-to-router and host-to-network connections over both synchronous and asynchronous circuits.

PPPoA (RFC 2364)

The Point-to-Point Protocol(PPP) provides a standard method for transporting multi-protocol datagrams over point-to-point links. This document describes the use of ATM Adaptation Layer 5 (AAL5) for framing PPP encapsulated packets.

PPPoE (RFC 2516)

This document describes how to build PPP sessions and encapsulate PPP packets over Ethernet. PPP over Ethernet (PPPoE) provides the ability to connect a network of hosts over a simple bridging access device to a remote Access Concentrator.

PVC

Permanent Virtual Circuit. Connection-oriented permanent leased line circuit between end-stations on a network over a separate ATM circuit.

RFC

Request for Comments. The document series, begun in 1969, which describes the Internet suite of protocols and related experiments. Not all RFCs describe Internet standards, but all Internet standards are written up as RFCs

RFC 1483

Multi-protocol encapsulation over AAL-5. Two encapsulation methods for carrying network interconnect traffic over ATM AAL-5. The first method allows multiplexing of multiple protocols over a single ATM virtual circuit. The protocol of a carried PDU is identified by prefixing the PDU by an IEEE 802.2 Logical Link Control (LLC) header. This method is in the following called "LLC Encapsulation". The second method does higher-layer protocol multiplexing implicitly by ATM Virtual Circuits (VCs). It is in the following called "VC Based Multiplexing".

Router

A system responsible for making decisions about which of several paths network (or Internet) traffic will follow. To do this, it uses a routing protocol to gain information about the network and algorithms to choose the best route based on several criteria known as "routing metrics.

Spanning Tree

Spanning-Tree Bridge Protocol (STP). Part of an IEEE standard. A mechanism for detecting and preventing loops from occurring in a multi-bridged environment. When bridges connect three or more LAN segments, a loop can occur. Because a bridge forwards all packets that are not recognized as being local, some packets can circulate for long periods of time, eventually degrading system performance. This algorithm ensures only one path connects any pair of stations, selecting one bridge as the 'root' bridge, with the highest priority one as identifier, from which all paths should radiate.

TELNET

The virtual terminal protocol in the Internet suite of protocols. Allows users of one host to log into a remote host and act as normal terminal users of that host.

VCI

Virtual Circuit Identifier. Part of the ATM cell header, a VCI is a tag indicating the channel over which a cell will travel. The VCI of a cell can be changed as it moves between switches via Signaling.

VPI

Virtual Path Identifier. Part of the ATM cell header, a VPI is a pipe for a number of Virtual Circuits.

WAN

Wide area network. A data communications network that spans any distance and is usually provided by a public carrier (such as a telephone company or service provider)

8.0 Introduction of the Web Configuration

8.1 Web Configuration Overview

The embedded web configuration allows you to manage WLAN ADSL2+ Router from anywhere through a browser such as Microsoft Internet Explorer or Netscape Navigator. Use Internet Explorer 6.0 and later or Netscape Navigator 7.0 and later versions with JavaScript enabled. It is recommended that you set your screen resolution to 1024 by 768 pixels

8.2 Accessing WLAN ADSL2+ Router Web Configuration

Step 1. Make sure your WLAN ADSL2+ Router is properly connected

Step 2. Prepare your computer/computer network to connect to the Router

Step 3. Launch your web browser.

Step 4. Type “192.168.1.1”.

Step 5. An Enter Network Password window displays. Enter the user name (“admin” is the default), password (“1234” is the default) and click **OK**.



Step 6. You should now see the Site Map screen.

TRENDCHIP
ADSL Router

Status
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Device Info
System Log
Statistics

Device Information

Firmware Version : STD(P2M_85)_A01_(2111010_310251)_2M16
 MAC Address : 00:13:33:a1:00:01

LAN

IP Address : 192.168.1.1
 Subnet Mask : 255.255.255.0
 DHCP Server : Enabled

WAN

Virtual Circuit : PVC0 ▾
 Status : Not Connected
 Connection Type : PPPoE
 IP Address : 0.0.0.0
 Subnet Mask : 0.0.0.0
 Default Gateway : 0.0.0.0
 Primary DNS : 0.0.0.0
 Secondary DNS : 0.0.0.0
 NAT : Enabled

ADSL

ADSL Firmware Version : FwVer:3.10.25.1_TC3085 HwVer:T14.F7_6.0
 Line State : Down
 Modulation : N/A
 Annex Mode : N/A

	Downstream	Upstream	
SNR Margin :	N/A	N/A	db
Line Attenuation :	N/A	N/A	db
Data Rate :	N/A	N/A	kbps

Quick Start Guide

You can use “**Quick Start**” to setup the router as follows, and the router will connect to the Internet via ADSL line.

Click “**Quick Start**” to get into the quick setup procedures.

TRENDCHIP ADSL Router

Quick Start | [Quick Start](#) | [Interface Setup](#) | [Advanced Setup](#) | [Access Management](#) | [Maintenance](#) | [Status](#) | [Help](#)

Quick Start

This ADSL Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the ADSL router to connect to your ISP (Internet Service Provider). The router's easy Quick Start will allow you to have Internet access within minutes. Please follow the 'Quick Start' wizard step by step to configure the ADSL Router.

[RUN WIZARD](#)

Click “**RUN WIZARD**” to start up this procedure.

TRENDCHIP

Quick Start

The Wizard will guide you through these four quick steps. Begin by clicking on **NEXT**.

- Step 1. Set your new password
- Step 2. Choose your time zone
- Step 3. Set your Internet connection
- Step 4. Save settings of this ADSL Router

[NEXT](#) [EXIT](#)

Step 1 – Please click “**Next**” to setup your new administrator's password.

TRENDCHIP

Quick Start - Password

You may change the **admin** account password by entering in a new password. Click **NEXT** to continue.

New Password :

Confirmed Password :

Step 2 – Please click “**Next**” to setup your time zone.

TRENDCHIP

Quick Start - Time Zone

Select the appropriate time zone for your location and click **NEXT** to continue.

(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London

Step 3 – Please click “**Next**” to setup your Internet connection type. You can have this information from your Internet Service Provider.

TRENDCHIP

Quick Start - ISP Connection Type

Select the Internet connection type to connect to your ISP. Click **NEXT** to continue.

- Dynamic IP Address Choose this option to obtain a IP address automatically from your ISP.
- Static IP Address Choose this option to set static IP information provided to you by your ISP.
- PPPoE/PPPoA Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)
- Bridge Mode Choose this option if your ISP uses Bridge Mode.

BACK

NEXT

EXIT

Step 4 - Enter the connection information provided by your ISP and click “**Next**”.

TRENDCHIP

Quick Start - PPPoE/PPPoA

Enter the PPPoE/PPPoA information provided to you by your ISP. Click **NEXT** to continue.

Username:

Password:

VPI: (0~255)

VCI: (1~65535)

Connection Type: ▼

BACK

NEXT

EXIT

Step 5 - Enter the connection information provided by your ISP and click "**Next**".

TRENDCHIP

Quick Start Complete !!

The Setup Wizard has completed. Click on **BACK** to modify changes or mistakes. Click **NEXT** to save the current settings.

BACK

NEXT

EXIT

Step 6 – Please click "**CLOSE**" to finish Quick Start.

TRENDCHIP

Quick Start Completed !!

Saved Changes.

CLOSE

System Time

Go to **Maintenance->Time Zone** and select system time as you wish.

TRENDCHIP
ADSL Router

Maintenance
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Administration
Time Zone
Firmware
SysRestart
Diagnostics

Time Zone

Current Date/Time : 12/08/2009 14:46:06

Synchronize time with :

NTP Server automatically
 PC's Clock
 Manually

Date : / / (Month/Date/Year)

Time : : : (hour:min:sec)

Connecting to a Simple Network Time Protocol (SNTP) server allows the router to synchronize the system clock to the global Internet.

The synchronized clock in the router is used to recorded the security log and control client filtering.

Admin Setting

Go to **Maintenance-> Administration** to set a new username and password to restrict management access to the router.

The default is **admin (Username)** and **1234 (Password)**

TRENDCHIP
ADSL Router

Maintenance
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Administration
Time Zone
Firmware
SysRestart
Diagnostics

Administrator

Username : **admin**

New Password :

Confirm Password :

Firmware Update

Go to **Maintenance -> Firmware** to upgrade the firmware. The new firmware for your router can improve functionality and performance. Enter the path and name of the upgrade file then click the **UPGRADE** button below. You will be prompted to confirm the upgrade.

TRENDCHIP ADSL Router

Maintenance | Quick Start | Interface Setup | Advanced Setup | Access Management | **Maintenance** | Status | Help

Administration | Time Zone | Firmware | SysRestart | Diagnostics

Firmware/Romfile Upgrade

Current Firmware Version : STD(P2M_85)_A01_(2111010_310251)_2M16

New Firmware Location :

New Romfile Location :

Romfile Backup :

Status :

It might take several minutes, don't power off it during upgrading. Device will restart after the upgrade.

System Log

Go to **Status -> System Log** and you can see the system log file. Click **"Save Log"** to save system log file.

TRENDCHIP ADSL Router

Status | Quick Start | Interface Setup | Advanced Setup | Access Management | Maintenance | **Status** | Help

Device Info | System Log | Statistics

System Log

```

1/1/2000 0:0:0> LAN promiscuous mode <1>
1/1/2000 0:0:0> SNMP TRAP 0: cold start
1/1/2000 0:0:0> main: init completed
1/1/2000 0:0:1> MPOA Link Down
1/1/2000 0:0:2> SNMP TRAP 3: link up
1/1/2000 0:0:2> adjtime task pause 1 day
1/1/2000 0:0:19> netMakeChannDial: err=-3001
rn_p=804ca4e8
1/1/2000 0:0:35> Last errorlog repeat 11 Times
1/1/2000 0:0:35> MPOA Link Up
1/1/2000 0:0:38> netMakeChannDial: err=-3000
rn_p=804ca4e8
1/1/2000 0:0:42> Last errorlog repeat 1 Times
1/1/2000 0:0:42> ppp_ready: ch:80516ed0, iface:8045d02c
1/1/2000 0:0:42> Protocol-Reject unknown protocol 0x802B
1/1/2000 0:0:42> SNMP TRAP 3: link up
1/1/2000 0:0:42> Accept() fail
1/1/2000 0:0:42> Accept() fail
    
```

System Reset

Go to **Maintenance** -> **SysRestart** to restart your system. In the event that the router stops responding correctly or in some way stops functioning, you can perform a reset. Your settings will not be changed. To perform the reset, select "**Current Setting**" and click on the "**RESTART**" button below. The router will reboot with current setting. Select "**Factory Default Setting**" and click on the "**RESTART**" button, the router will reboot with factory default setting.

TRENDCHIP
ADSL Router

Maintenance
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Administration
Time Zone
Firmware
SysRestart
Diagnostics

System Restart

System Restart with : Current Settings
 Factory Default Settings

RESTART

ADSL Status

Go to **Status**->**Device Info**. The 'ADSL Line Status' enables you to check the status of your ADSL connection including how fast data is being transferred.

TRENDCHIP
ADSL Router

Status
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Device Info
System Log
Statistics

Device Information

Firmware Version : STD(P2M_85)_A01_(2111010_310251)_2M16
MAC Address : 00:13:33:a1:00:01

LAN

IP Address : 192.168.1.1
Subnet Mask : 255.255.255.0
DHCP Server : Enabled

WAN

Virtual Circuit : PVC0
Status : Not Connected
Connection Type : PPPoE
IP Address : 0.0.0.0
Subnet Mask : 0.0.0.0
Default Gateway : 0.0.0.0
Primary DNS : 0.0.0.0
Secondary DNS : 0.0.0.0
NAT : Enabled

ADSL

ADSL Firmware Version : FwVer:3.10.25.1_TC3085 HwVer:T14.F7_6.0
Line State : Down
Modulation : N/A
Annex Mode : N/A

	Downstream	Upstream	
SNR Margin :	N/A	N/A	db
Line Attenuation :	N/A	N/A	db
Data Rate :	N/A	N/A	kbps

ADSL Statistics

Go to **Status-> Statistics** and select **ADSL** interface. You can see the traffic Statistics of ADSL interface.

TRENDCHIP ADSL Router

Status | Quick Start | Interface Setup | Advanced Setup | Access Management | Maintenance | **Status** | Help

Device Info | System Log | Statistics

Traffic Statistics

Interface : Ethernet ADSL WLAN

Transmit Statistics		Receive Statistics	
Transmit total PDUs	241	Receive total PDUs	487
Transmit total Error Counts	0	Receive total Error Counts	0

VC Configuration

Go to **Interface Setup -> Internet**. To add or delete ADSL VC configuration, these information provide by ISP.

TRENDCHIP ADSL Router

Interface | Quick Start | **Interface Setup** | Advanced Setup | Access Management | Maintenance | Status | Help

Internet | LAN | Wireless

ATM VC

Virtual Circuit : PVC0

Status : Activated Deactivated

VPI : 8 (range: 0~255)

VCI : 35 (range: 1~65535)

QoS

ATM QoS : UBR

PCR : 0 cells/second

SCR : 0 cells/second

MBS : 0 cells

Encapsulation

ISP : Dynamic IP Address
 Static IP Address
 PPPoA,PPPoE
 Bridge Mode

WAN Configuration

Go to **Interface Setup -> Internet**. The router can be connected to your service provider in any of the following ways.

Dynamic IP Address: Obtain an IP address automatically from your service provider.

Static IP Address: Uses a static IP address. Your service provider gives a static IP address to access Internet services.

PPPoE: PPP over Ethernet is a common connection method used for xDSL

PPPoA: PPP over ATM is a common connection method used for xDSL

Bridge: Bridge mode is a common connection method used for xDSL modem.

Encapsulation	ISP : <input type="radio"/> Dynamic IP Address <input type="radio"/> Static IP Address <input checked="" type="radio"/> PPPoA/PPPoE <input type="radio"/> Bridge Mode
PPPoE/PPPoA	Servicename : <input type="text"/> Username : <input type="text" value="1234"/> Password : <input type="password" value="••••"/> Encapsulation : <input type="text" value="PPPoE LLC"/> Bridge Interface : <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated
Connection Setting	Connection : <input checked="" type="radio"/> Always On (Recommended) <input type="radio"/> Connect On-Demand (Close if idle for <input type="text" value="0"/> minutes) <input type="radio"/> Connect Manually TCP MSS Option : TCP MSS(0:default) <input type="text" value="0"/> bytes
IP Address	Get IP Address : <input type="radio"/> Static <input checked="" type="radio"/> Dynamic Static IP Address : <input type="text" value="0.0.0.0"/> IP Subnet Mask : <input type="text" value="0.0.0.0"/> Gateway : <input type="text" value="0.0.0.0"/> NAT : <input type="text" value="Enable"/> Default Route : <input checked="" type="radio"/> Yes <input type="radio"/> No TCP MTU Option : TCP MTU(0:default) <input type="text" value="0"/> bytes Dynamic Route : <input type="text" value="RIP1"/> Direction : <input type="text" value="None"/> Multicast : <input type="text" value="Disabled"/> MAC Spoofing : <input type="radio"/> Enabled <input checked="" type="radio"/> Disabled <input type="text" value="00:00:00:00:00:00"/>
<input type="button" value="SAVE"/>	

WAN Status

Go to **Status** -> **Device Info** and select **the Virtual Circuit** to see the connection status.

Device Information	<p>Firmware Version : STD(LEM_86_N)_A01_(211850_311131) MAC Address : 00:13:33:8d:48:02</p>																
LAN	<p>IP Address : 192.168.1.1 Subnet Mask : 255.255.255.0 DHCP Server : Enabled</p>																
WAN	<p>Virtual Circuit : <input type="text" value="PVC0"/> ▼ Status : Connected Connection Type : PPPoE IP Address : 192.168.10.110 Subnet Mask : 255.255.255.255 Default Gateway : 192.168.10.102 DNS Server : 192.168.10.100 NAT : Enabled PPP connection time : 0d:00h:08m:46s</p>																
ADSL	<p>ADSL Firmware Version : FwVer:3.11.13.1_TC3086 HwVer:T14.F7_6.0 Line State : Showtime Modulation : G.DMT Annex Mode : ANNEX_A</p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th></th> <th>Downstream</th> <th>Upstream</th> <th></th> </tr> </thead> <tbody> <tr> <td>SNR Margin :</td> <td>16.0</td> <td>10.0</td> <td>db</td> </tr> <tr> <td>Line Attenuation :</td> <td>0.5</td> <td>0.0</td> <td>db</td> </tr> <tr> <td>Data Rate :</td> <td>8064</td> <td>1024</td> <td>kbps</td> </tr> </tbody> </table>		Downstream	Upstream		SNR Margin :	16.0	10.0	db	Line Attenuation :	0.5	0.0	db	Data Rate :	8064	1024	kbps
	Downstream	Upstream															
SNR Margin :	16.0	10.0	db														
Line Attenuation :	0.5	0.0	db														
Data Rate :	8064	1024	kbps														

DNS

Go to **Interface** -> **LAN** to enable DHCP server. Then you can set DNS server for the router. A Domain Name system (DNS) server is like an index of IP addresses and Web addresses. If you type a Web address into you browser, a DNS server will find that name in its index and find the matching IP address.

Most ISPs provide a DNS server for speed and convenience. Since your Service Provider many connect to the Internet with dynamic IP settings, it is likely that the DNS server IP addresses are also provided dynamically. However, if there is a DNS server that you would rather use, you need to specify the IP address below.

TRENDCHIP
ADSL Router

Interface
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Internet
LAN
Wireless

Router Local IP

IP Address :

IP Subnet Mask :

Dynamic Route : Direction :

Multicast :

IGMP Snoop : Disabled Enabled

DHCP

DHCP : Disabled Enabled Relay

DHCP Server

Starting IP Address :

IP Pool Count :

Lease Time : seconds (0 sets to default value of 259200)

Physical Ports : 1 2 3 4

DNS

DNS Relay :

Primary DNS Server :

Secondary DNS Server :

DDNS

Go to **Access Management** -> **DDNS** to setup your DDNS parameters. Dynamic DNS allows you to update your dynamic IP address with one or many dynamic DNS services. So anyone can access your FTP or Web service on your computer using DNS-like address.

ADSL Router

Access Management	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	ACL	Filter	SNMP	UPnP	DDNS	CWMP	

Dynamic DNS

Dynamic DNS : Activated Deactivated
 Service Provider : www.dyndns.org

My Host Name :

E-mail Address :

Username :

Password :

Wildcard support : Yes No

LAN Configuration

Go to Interface Setup -> LAN. The 'LAN Settings' option enables you to configure the LAN port.

If the DHCP Relay is selected, the DHCP requests from local PCs are forward to the DHCP server runs on WAN side. To have this function working properly, disable the NAT to run on router mode only, disable the DHCP server on the LAN port, and make sure the routing table has the correct routing entry.

ADSL Router

Interface	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Internet	LAN	Wireless				

Router Local IP

IP Address :

IP Subnet Mask :

Dynamic Route : Direction :

Multicast :

IGMP Snoop : Disabled Enabled

DHCP

DHCP : Disabled Enabled Relay

DHCP Server

Starting IP Address :

IP Pool Count :

Lease Time : seconds (0 sets to default value of 259200)

Physical Ports : 1 2 3 4

DNS

DNS Relay :

Primary DNS Server :

Secondary DNS Server :

Wireless Settings

Go to **Interface** -> **Wireless** to setup the wireless parameters.

SSID

The identifier for the network. You can change the SSID. Only devices with the same SSID can interconnect.

Channel

The channel number is used for wireless networking. The channel setting of the wireless devices within a network should be the same.

TRENDCHIP
ADSL Router

Interface

Quick Start

Interface Setup

Advanced Setup

Access Management

Maintenance

Status

Help

Internet

LAN

Wireless

Access Point Settings

Access Point: Activated Deactivated

Channel: ALBANIA Current Channel:

Transmit Power:

Beacon Interval(ms): (range: 20~1000)

RTS/CTS Threshold: (range: 1500~2347)

Fragmentation Threshold (bytes): (range: 256~2346, even numbers only)

DTIM(ms): (range: 1~255)

802.11 b/g:

Multiple SSIDs Settings

SSID Index:

Broadcast SSID: Yes No

Use WPS: Yes No

WPS Settings

WPS state: Configured

WPS mode: PIN code PBC

WPS progress: Idle

SSID:

Authentication Type:

WDS Settings

Wireless MAC Address Filter

Wireless Security

Go to **Interface** -> **Wireless** to setup the wireless security.

The Authentication type supports “WEP 64Bits”, “WEP 128Bits”, “WPA-PSK”, “WPA2-PSK”, “WPA-PSK/WPA2-PSK”.

TRENDCHIP
ADSL Router

Interface
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Internet
LAN
Wireless

802.11 b/g : 802.11b+g

Multiple SSIDs Settings

SSID Index : 1

Broadcast SSID : Yes No

Use WPS : Yes No

WPS Settings

WPS state : Configured

WPS mode : PIN code PBC

Start WPS

WPS progress : Idle

Reset to OOB

SSID : TW263R4

Authentication Type : Disabled

Disabled
 WEP-64Bits
 WEP-128Bits
 WPA-PSK
 WPA2-PSK
 WPA-PSK/WPA2-PSK

WDS Settings

WDS Mode :

Mac Address #1 : 00:00:00:00:00:00

Mac Address #2 : 00:00:00:00:00:00

Mac Address #3 : 00:00:00:00:00:00

Mac Address #4 : 00:00:00:00:00:00

WPS Settings

WPS (Wi-Fi Protected Setup) provides a convenient way to establish the connection between this broadband router and wireless clients. Any WPS-compatible wireless clients can establish secure connection with this broadband router with simple push-button type configuration or Pin Code type configuration.

Multiple SSIDs Settings	SSID Index : <input type="text" value="1"/> Broadcast SSID : <input checked="" type="radio"/> Yes <input type="radio"/> No Use WPS : <input checked="" type="radio"/> Yes <input type="radio"/> No
WPS Settings	WPS state : Configured WPS mode : <input type="radio"/> PIN code <input checked="" type="radio"/> PBC <input type="button" value="Start WPS"/> WPS progress : Idle <input type="button" value="Reset to OOB"/> SSID : TW263R4 Authentication Type : <input type="text" value="Disabled"/>
WDS Settings	WDS Mode : <input type="radio"/> On <input checked="" type="radio"/> Off Mac Address #1 : <input type="text" value="00:00:00:00:00:00"/> Mac Address #2 : <input type="text" value="00:00:00:00:00:00"/> Mac Address #3 : <input type="text" value="00:00:00:00:00:00"/> Mac Address #4 : <input type="text" value="00:00:00:00:00:00"/>

Here are descriptions of every setup items:

Item Name	Description
Use WPS	Check this box to enable WPS function,uncheck it to disable WPS.
WPS mode	Select your WPS mode to PIN Code or PBC PIN (Personal Information Number) PBC (Push Button Configuration)
AP self PIN code	This is the WPS PIN code of this wireless router. This code is useful when you need to build wireless connection by WPS with other WPS-enabled wireless devices.
enrollee PIN code	Please input the PinCode displayed at the configuration software of WPS-enabled wireless client, and click 'Start WPS' to establish connection with the wireless client.
Start WPS	Start WPS peer within 2 minutes.
Reset to OOB	Click on Reset to OOB button to Reset WPS AP to the OOB(out of box) configuration.
SSID	The SSID of this wireless router will be displayed here.
Authentication Type	The wireless security authentication mode of this wireless router will be displayed here.

WDS Settings

Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.

WDS Settings	
WDS Mode :	<input type="radio"/> On <input checked="" type="radio"/> Off
Mac Address #1 :	<input type="text" value="00:00:00:00:00:00"/>
Mac Address #2 :	<input type="text" value="00:00:00:00:00:00"/>
Mac Address #3 :	<input type="text" value="00:00:00:00:00:00"/>
Mac Address #4 :	<input type="text" value="00:00:00:00:00:00"/>

Here are descriptions of every setup items:

Item Name	Description
WDS Mode	Check this box to enable WDS function, uncheck it to disable WDS.
Mac Address #1 Mac Address #2 Mac Address #3 Mac Address #4	Configure up to four MAC Address of peer Access point to do WDS.

Wireless MAC Address Filter

For security reason, using MAC Wireless MAC Address Filter creates another level of difficulty to hacking a network. A Wireless MAC Address Filter is created and distributed to AP so that only authorized NIC's can connect to the network. While MAC address spoofing is a proven means to hacking a network this can be used in conjunction with additional security measures to increase the level of complexity of the network security decreasing the chance of a breach.

MAC addresses can be add/delete/edit from the Wireless MAC Address Filter list depending on the MAC Access Policy.

If you choose 'Allow Association', only those clients whose wireless MAC addresses are in the access control list will be able to connect to your Access Point. When 'Deny Association' is selected, these wireless clients on the list will not be able to connect the Access Point.

Wireless MAC Address Filter

Active : Activated Deactivated

Action : Deny Association the follow Wireless LAN station(s) association.

Mac Address #1 :	00:00:00:00:00:00
Mac Address #2 :	00:00:00:00:00:00
Mac Address #3 :	00:00:00:00:00:00
Mac Address #4 :	00:00:00:00:00:00
Mac Address #5 :	00:00:00:00:00:00
Mac Address #6 :	00:00:00:00:00:00
Mac Address #7 :	00:00:00:00:00:00
Mac Address #8 :	00:00:00:00:00:00

Here are descriptions of every setup items:

Item Name	Description
Active	Check this box to enable Wireless MAC Address Filter,uncheck it to disable Wireless MAC Address Filter.
Action	To Allow or Deny Association
Mac Address #1 Mac Address #2 Mac Address #3 Mac Address #4 Mac Address #5 Mac Address #6 Mac Address #7 Mac Address #8	Configure up to 8 MAC Address of Wireless Client.

IP Filtering

Go to **Access Management -> IP Filtering** to block some packets form WAN.The router provides extensive firewall protection by restricting connection parameters to limit the risk of intrusion and defending against a wide array of common hacker attacks. The user can set different IP filter rules of a given protocol (TCP, UDP or ICMP) and a specific direction (incoming, outgoing, or both) to filter the packets.

TRENDCHIP
ADSL Router

Access Management
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

ACL
Filter
SNMP
UPnP
DDNS
CWMP

Filter

Filter Type

Filter Type Selection : IP / MAC Filter ▼

IP / MAC Filter Set Editing

IP / MAC Filter Set Index : 1 ▼

Interface : PVC0 ▼

Direction : Both ▼

IP / MAC Filter Rule Editing

IP / MAC Filter Rule Index : 1 ▼

Rule Type : IP ▼

Active : Yes No

Source IP Address : (0.0.0.0 means Don't care)

Subnet Mask :

Port Number : (0 means Don't care)

Destination IP Address : (0.0.0.0 means Don't care)

Subnet Mask :

Port Number : (0 means Don't care)

Protocol : TCP ▼

Rule Unmatched : Forward ▼

IP / MAC Filter Listing

IP / MAC Filter Set Index 1 ▼

#	Active	Src Address/Mask	Dest IP/Mask	Src Port	Dest Port	Protocol	Unmatched
1	-	-	-	-	-	-	-
2	-	-	-	-	-	-	-
3	-	-	-	-	-	-	-
4	-	-	-	-	-	-	-
5	-	-	-	-	-	-	-
6	-	-	-	-	-	-	-

SAVE
DELETE
CANCEL

ACL Setting

Go to **Access Management** -> **ACL** to enable remote management. The user may remotely access the WLAN ADSL2+ Router once setting his IP as a Secure IP Address through selected applications. With the default IP 0.0.0.0, any client would be allowed to remotely access the WLAN ADSL2+ Router.

TRENDCHIP
ADSL Router

Access Management

Quick Start

Interface Setup

Advanced Setup

Access Management

Maintenance

Status

Help

ACL

Filter

SNMP

UPnP

DDNS

CWMP

Access Control Setup

ACL : Activated Deactivated

Access Control Editing

ACL Rule Index :

Active : Yes No

Secure IP Address : ~ (0.0.0.0 ~ 0.0.0.0 means all IPs)

Application :

Interface :

Access Control Listing

Index	Active	Secure IP Address	Application	Interface

NAT Setting

Go to **Advanced Setup**->**NAT** to setup the NAT features. Network Address Translation (NAT) allows multiple users at your local site to access the Internet through a single public IP address or multiple public IP addresses. NAT can also prevent hacker attacks by mapping local addresses to public addresses for key services such as the Web or FTP.

TRENDCHIP
ADSL Router

Advanced

Quick Start

Interface Setup

Advanced Setup

Access Management

Maintenance

Status

Help

Firewall

Routing

NAT

QoS

VLAN

ADSL

NAT

Virtual Circuit :

NAT Status : Activated

Number of IPs : Single Multiple

DMZ

Virtual Server

Virtual Server

Go to **Advanced Setup** ->**NAT** -> **Virtual Server** to set virtual server as you need.(known as Port Mapping).You can configure the router as a virtual server so that remote users accessing services such as the Web or FTP at your local site via public IP addresses can be automatically redirected to local servers configured with private IP addresses. In other words, depending on the requested service (TCP/UDP port numbers), the router redirects the external service request to the appropriate server (located at another internal IP address). For some applications, you need to assign a set or a range of ports (example 4000-5000) to a specified local machine to route the packets. The router allows the user to configure the needed port mappings to suit such applications.

TRENDCHIP

ADSL Router

Advanced

Quick Start

Interface Setup

Advanced Setup

Access Management

Maintenance

Status

Help

Firewall

Routing

NAT

QoS

VLAN

ADSL

Virtual Server

Virtual Server for : Single IP Account

Rule Index :

Application :

Protocol :

Start Port Number :

End Port Number :

Local IP Address :

Virtual Server Listing

Rule	Application	Protocol	Start Port	End Port	Local IP Address
1	-	-	0	0	0.0.0.0
2	-	-	0	0	0.0.0.0
3	-	-	0	0	0.0.0.0
4	-	-	0	0	0.0.0.0
5	-	-	0	0	0.0.0.0
6	-	-	0	0	0.0.0.0
7	-	-	0	0	0.0.0.0
8	-	-	0	0	0.0.0.0
9	-	-	0	0	0.0.0.0
10	-	-	0	0	0.0.0.0
11	-	-	0	0	0.0.0.0
12	-	-	0	0	0.0.0.0
13	-	-	0	0	0.0.0.0
14	-	-	0	0	0.0.0.0
15	-	-	0	0	0.0.0.0
16	-	-	0	0	0.0.0.0

DMZ Setting

Go to **Advanced Setup -> NAT -> DMZ** to set DMZ parameters. If you have a local client PC that cannot run an Internet application properly from behind the NAT firewall, you can open the client up to unrestricted two-way Internet access by defining a virtual DMZ Host.

TRENDCHIP
ADSL Router

Advanced
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Firewall
Routing
NAT
QoS
VLAN
ADSL

DMZ

DMZ setting for : Single IP Account

DMZ : Enabled Disabled

DMZ Host IP Address :

Static Routing

Go to **Advance Setup -> Routing ->Add ROUTE** to setup static route features. The static routing function determines the path that router follows over your network before and after it passes through your router. You can use static routing to allow different IP domain users to access the Internet through this device.

TRENDCHIP
ADSL Router

Advanced
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Firewall
Routing
NAT
QoS
VLAN
ADSL

Static Route

Destination IP Address :

IP Subnet Mask :

Gateway IP Address : PVC0

Metric :

Announced in RIP : Yes

Dynamic Routing

Go to **Interface Setup -> Internet** to select Dynamic Route as you need.

The dynamic routing feature of the router can be used to allow the router to automatically adjust to physical changes in the network's layout. The router uses the dynamic RIP protocol. It determines the route that the network packets take based on the fewest number of hops between the source and the destination. The RIP protocol regularly broadcasts routing information to other routers on the network.

TRENDCHIP

ADSL Router

Interface	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Internet	LAN	Wireless				
ATM VC	Virtual Circuit : PVC0 <input type="button" value="PVCs Summary"/> Status : <input checked="" type="radio"/> Activated <input type="radio"/> Deactivated VPI : 8 (range: 0~255) VCI : 35 (range: 1~65535)						
QoS	ATM QoS : UBR PCR : 0 cells/second SCR : 0 cells/second MBS : 0 cells						
Encapsulation	ISP : <input type="radio"/> Dynamic IP Address <input type="radio"/> Static IP Address <input checked="" type="radio"/> PPPoA/PPPoE <input type="radio"/> Bridge Mode						
PPPoE/PPPoA	Servicename : <input type="text"/> Username : 1234 Password : <input type="password"/> Encapsulation : PPPoE LLC Bridge Interface : <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated						
Connection Setting	Connection : <input checked="" type="radio"/> Always On (Recommended) <input type="radio"/> Connect On-Demand (Close if idle for <input type="text" value="0"/> minutes) <input type="radio"/> Connect Manually TCP MSS Option : TCP MSS(0:default) <input type="text" value="0"/> bytes						
IP Address	Get IP Address : <input type="radio"/> Static <input checked="" type="radio"/> Dynamic Static IP Address : <input type="text" value="0.0.0.0"/> IP Subnet Mask : <input type="text" value="0.0.0.0"/> Gateway : <input type="text" value="0.0.0.0"/> NAT : Enable Default Route : <input checked="" type="radio"/> Yes <input type="radio"/> No TCP MTU Option : TCP MTU(0:default) <input type="text" value="0"/> bytes Dynamic Route : RIP1 Direction : None Multicast : Disabled MAC Spoofing : <input type="radio"/> Enabled <input checked="" type="radio"/> Disabled <input type="text" value="00:00:00:00:00:00"/>						
<input type="button" value="SAVE"/>							

Routing Table

Go to **Advanced Setup -> Routing** to see the Routing Table. The Routing table allows you to see how many routings on your routing table and interface information

TRENDCHIP
ADSL Router

Advanced
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Firewall
Routing
NAT
QoS
VLAN
ADSL

Routing Table List

#	Dest IP	Mask	Gateway IP	Metric	Device	Use	Edit	Drop
1	192.168.10.102	32	192.168.10.102	1	poe0	0		
2	192.168.1.0	24	192.168.1.1	1	enet0	1576		
3	default	0	Node1	2	poe0	1270		

ADD ROUTE

System Status

Go to **Status -> Device Info** to see the router's information. The System Status page shows the WAN, LAN and the router's firmware version.

TRENDCHIP
ADSL Router

Status
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Device Info
System Log
Statistics

Device Information

Firmware Version : STD(P2M_85)_A01_(2111010_310251)_2M16
MAC Address : 00:13:33:a1:00:01

LAN

IP Address : 192.168.1.1
Subnet Mask : 255.255.255.0
DHCP Server : Enabled

WAN

Virtual Circuit : PVC0
Status : Not Connected
Connection Type : PPPoE
IP Address : 0.0.0.0
Subnet Mask : 0.0.0.0
Default Gateway : 0.0.0.0
Primary DNS : 0.0.0.0
Secondary DNS : 0.0.0.0
NAT : Enabled

ADSL

ADSL Firmware Version : FwVer:3.10.25.1_TC3085 HwVer:T14.F7_6.0
Line State : Down
Modulation : N/A
Annex Mode : N/A

	Downstream	Upstream	
SNR Margin :	N/A	N/A	db
Line Attenuation :	N/A	N/A	db
Data Rate :	N/A	N/A	kbps

SNMP

Go to **Access Management** -> **SNMP** to setup SNMP feature. Simple Network Management Protocol is used for exchanging information between network device.

Get Community : Select to set the password for the incoming Get- and GetNext requests from the management station.

Set Community : Select to set the password for incoming Set requests from the management station.

TRENDCHIP

ADSL Router

Access Management	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	ACL	Filter	SNMP	UPnP	DDNS	CWMP	

SNMP	Get Community :	<input type="text" value="public"/>
	Set Community :	<input type="text" value="public"/>

QoS Setting

Go to **Advanced Setup** -> **QoS** to setup QoS features. This option will provide better service of selected network traffic over various technologies.

TRENDCHIP
ADSL Router

Advanced
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Firewall
Routing
NAT
QoS
VLAN
ADSL

Quality of Service

Rule

QoS : Activated Deactivated

Summary : [QoS Settings Summary](#)

Action

Rule Index :

Active : Activated Deactivated

Application :

<input type="checkbox"/>				
WLAN	Enet1	Enet2	Enet3	Enet4

Destination MAC :

IP :

Mask :

Port Range : ~

Source MAC :

IP :

Mask :

Port Range : ~

Protocol ID :

Vlan ID Range : ~

IPP/DS Field : IPP/TOS DSCP

IP Precedence Range : ~

Type of Service :

DSCP Range : ~ (Value Range: 0 ~ 63)

802.1p : ~

Action

IPP/DS Field : IPP/TOS DSCP

IP Precedence Remarking :

Type of Service Remarking :

DSCP Remarking : (Value Range: 0 ~ 63)

802.1p Remarking :

Queue # :

ADD
DELETE
CANCEL

VLAN

Go to **Advanced Setup -> VLAN** to enable VLAN features. Virtual LAN (VLAN) is a group of devices on one or more LANs that are configured so that they can communicate as if they were attached to the same wire, when in fact they are located on a number of different LAN segments. Because VLANs are based on logical instead of physical connections, it is very flexible for user/host management, bandwidth allocation and resource optimization.

VLAN PVID

Go to **Advanced Setup -> VLAN-> Assign VLAN PVID for each interface** to setup VLAN PVID features. Each physical port has a default VID called PVID (Port VID). PVID is assigned to untagged frames or priority tagged frames (frames with null (0) VID) received on this port.

VLAN Group

Go to **Advanced Setup -> VLAN-> Define VLAN Group** to setup VLAN group features.

TRENDCHIP
ADSL Router

Advanced
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Firewall
Routing
NAT
QoS
VLAN
ADSL

VLAN Group Setting

VLAN Index :

Active : Yes No

VLAN ID : (Decimal)

Tagged	<input type="checkbox"/>						
ATM VCs :	<input checked="" type="checkbox"/>						
Port #	0	1	2	3	4	5	6

Ethernet :	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Port #	1	2	3	4

Wireless LAN :	<input type="checkbox"/>
Port #	0

VLAN Group Summary

Group	Active	ID	VLAN Group Ports	VLAN Tagged Ports
1	Yes	1	e1,e2,e3,e4,w,p0,p1,p2,p3,p4,p5,p6,p7	

p:pvc, e:ethernet, and w:wlan

Firewall

Go to **Advanced Setup -> Firewall** to setup Firewall features. Select this option can automatically detect and block Denial of Service (DoS) attacks, such as Ping of Death, SYN Flood, Port Scan and Land Attack.

TRENDCHIP
ADSL Router

Advanced
Quick Start
Interface Setup
Advanced Setup
Access Management
Maintenance
Status
Help

Firewall
Routing
NAT
QoS
VLAN
ADSL

Firewall

Firewall : Enabled Disabled

SPI : Enabled Disabled

(WARNING: If You enabled SPI, all traffics initiated from WAN would be blocked, including DMZ, Virtual Server, and ACL WAN side.)

9.0 Universal Plug-and-Play (UPnP)

9.1 Universal Plug and Play Overview

Universal Plug and Play (UPnP) is a distributed, open networking standard that uses TCP/IP for simple peer-to-peer network connectivity between devices. An UPnP device can dynamically join a network, obtain an IP address, convey its capabilities and learn about other devices on the network. In turn, a device can leave a network smoothly and automatically when it is no longer in use.

9.2 How do I know if I'm using UPnP?

UPnP hardware is identified as an icon in the Network Connections folder (Windows XP). Each UPnP compatible device installed on your network will appear as a separate icon. Selecting the icon of a UPnP device will allow you to access the information and properties of that device.

9.3 NAT Traversal

UPnP NAT traversal automates the process of allowing an application to operate through NAT. UPnP network devices can automatically configure network addressing, announce their presence in the network to other UPnP devices and enable exchange of simple product and service descriptions. NAT traversal allows the following:

- Dynamic port mapping
- Learning public IP addresses
- Assigning lease times to mappings

Windows Messenger is an example of an application that supports NAT traversal and UPnP. See the *Network Address Translation (NAT)* chapter for further information about NAT.

9.4 Cautions with UPnP

The automated nature of NAT traversal applications in establishing their own services may present network security issues. Network information and configuration may also be obtained and modified by users in some network environments.

All UPnP-enabled devices may communicate freely with each other without additional configuration. Disable UPnP if this is not your intention.

UPnP broadcasts are only allowed on the LAN.

See later sections for examples of installing UPnP in Windows XP and Windows Me as well as an example of using UPnP in Windows.

9.5 Configuring UPnP

From the Site Map in the main menu, click UPnP under Access Management to display the screen shown next.



The following table describes the labels in this screen.

LABEL	DESCRIPTION
UPnP	Select this checkbox to activate UPnP. Be aware that anyone could use a UPnP application to open the web configuration's login screen without entering WLAN ADSL2+ Router's IP address (although you must still enter the password to access the web configuration).
Auto configured	Select this check box to allow UPnP-enabled applications to automatically configure WLAN ADSL2+ Router so that they can communicate through WLAN ADSL2+ Router, for example by using NAT traversal, UPnP applications automatically reserve a NAT forwarding port in order to communicate with another UPnP enabled device; this eliminates the need to manually configure port forwarding for the UPnP enabled application.
Apply	Click Apply to save your settings back to home screen.

9.6 Installing UPnP in Windows Example


This section shows how to install UPnP in Windows Me and Windows XP.

9.7 Installing UPnP in Windows Me


Follow the steps below to install the UPnP in Windows Me.

Step 1. Click Start and Control Panel. Double-click Add/Remove Programs.

Step 2. Click on the Windows Setup tab and select Communication in the Components selection box. Click Details.

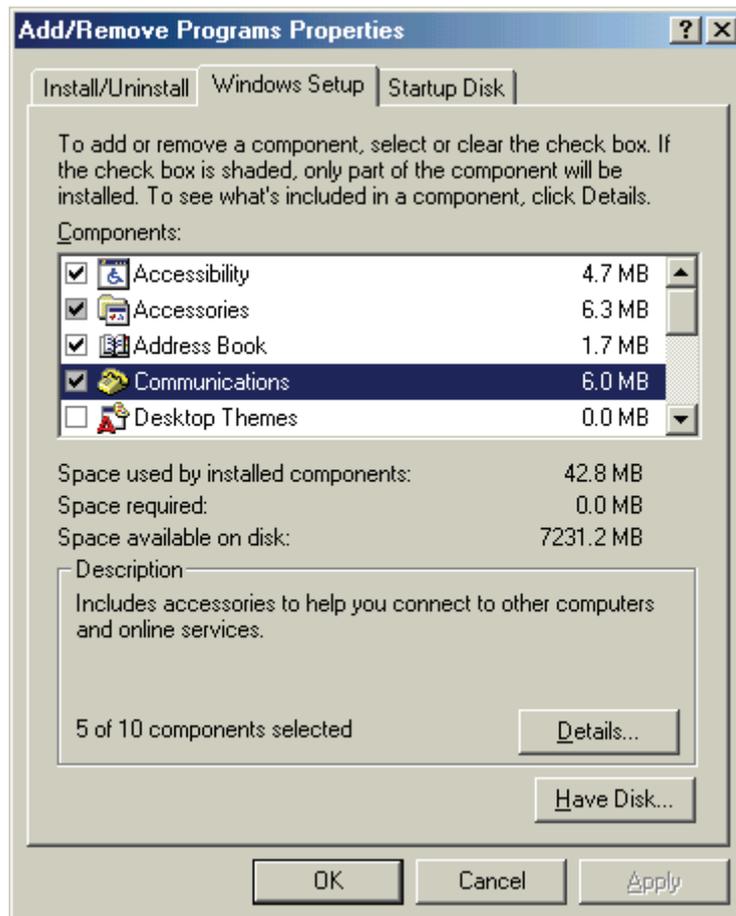

Step 3. In the Communications window, select the Universal Plug and Play check box in the Components selection box.

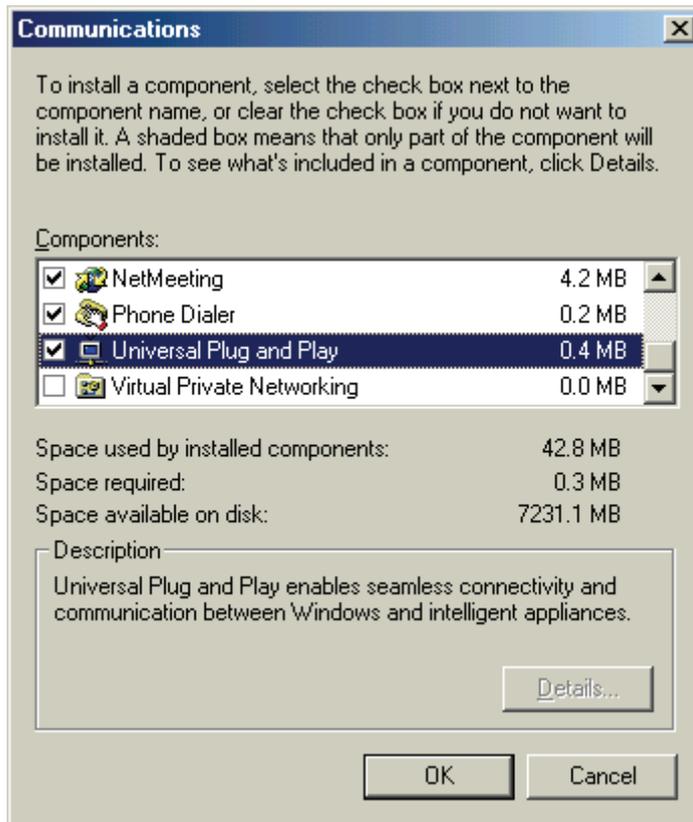

Step 4. Click OK to go back to the Add/Remove Programs Properties window and click Next.

Step 5. Restart the computer when prompted.


9.8 Installing UPnP in Windows XP

Follow the steps below to install the UPnP in Windows XP.

Step 1. Click Start and Control Panel.


Step 2. Double-click Network Connections.

Step 3. In the Network Connections window, click Advanced in the main menu and select Optional Networking Components

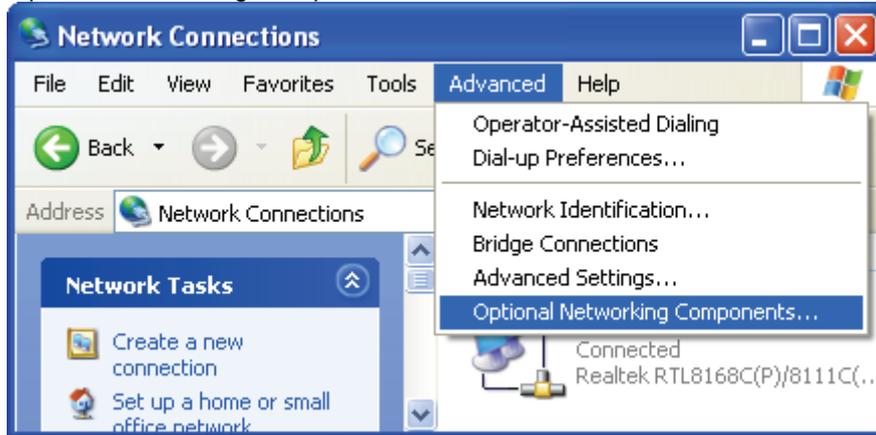


The Windows Optional Networking Components Wizard window displays.

Step 4. Select Networking Service in the Components selection box and click Details.

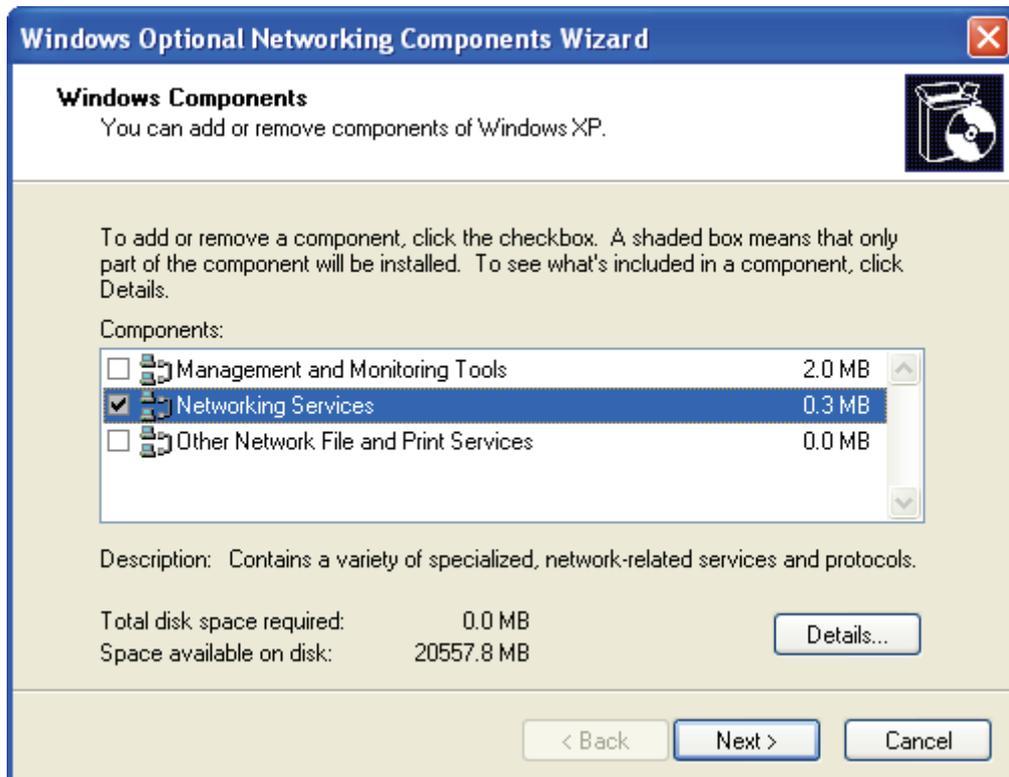

Step 5. In the Networking Services window, select the UPnP User Interface check box.

Step 6. Click OK to go back to the Windows Optional Networking Component Wizard window and click Next.

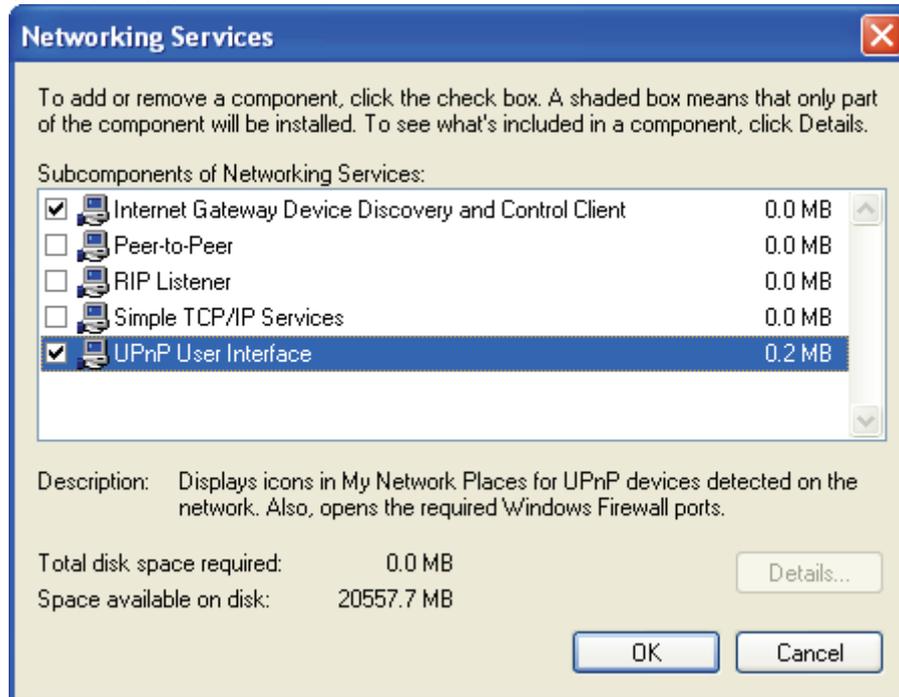

9.9 Using UPnP in Windows XP Example

This section shows you how to use the UPnP feature in Windows XP. You must already have UPnP installed in Windows XP and UPnP activated on WLAN ADSL2+ Router. Make sure the computer is connected to a LAN port of WLAN ADSL2+ Router. Turn on your computer and WLAN ADSL2+ Router.

9.10 Auto-discover Your UPnP-enabled Network Device

Step 1. Click start and Control Panel. Double-click Network Connections. An icon displays under Internet Gateway.


Step 2. Right-click the icon and select Properties.




Step 3. In the Internet Connection Properties window, click Settings to see the port mappings there were automatically created.



Step 4. You may edit or delete the port mappings or click Add to manually add port mappings.

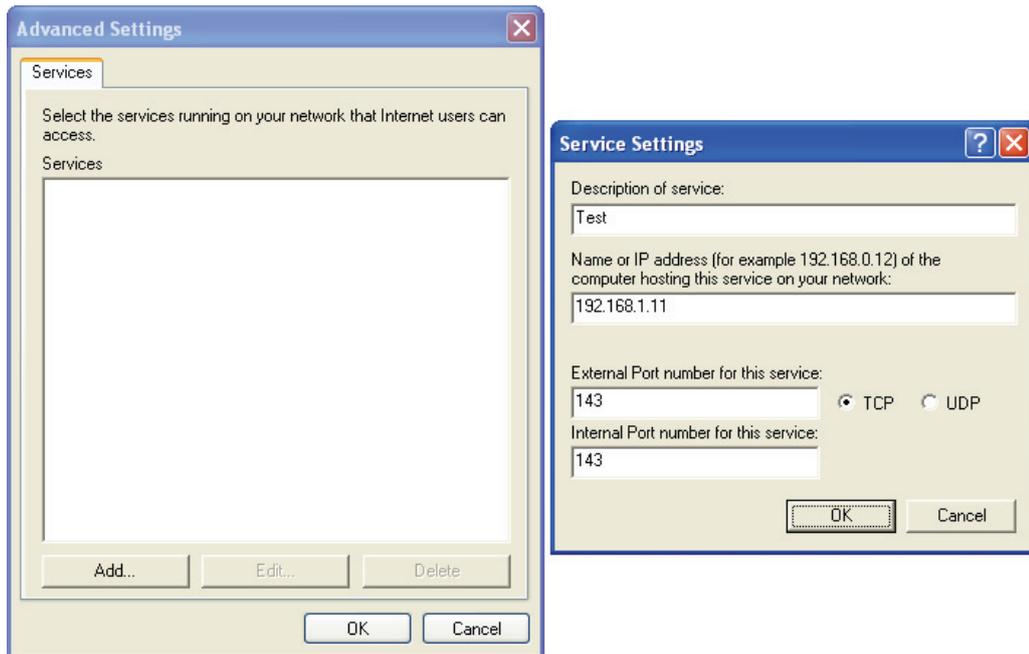

Step 5. Select Show icon in notification area when connected option and click OK. An icon displays in the system tray

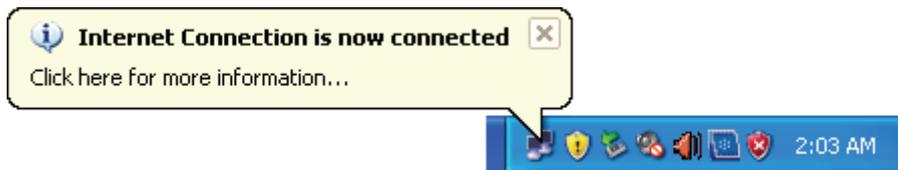

Step 6. Double-click on the icon to display your current Internet connection status.



10.0 Web Configuration Easy Access


With UPnP, you can access the web-based configuration on WLAN ADSL2+ Router without finding out the IP address of WLAN ADSL2+ Router first. This comes helpful if you do not know the IP address of WLAN ADSL2+ Router.

Follow the steps below to access the web configuration.

Step 1. Click Start and then Control Panel.


Step 2. Double-click Network Connections.

Step 3. Select My Network Places under Other Places.

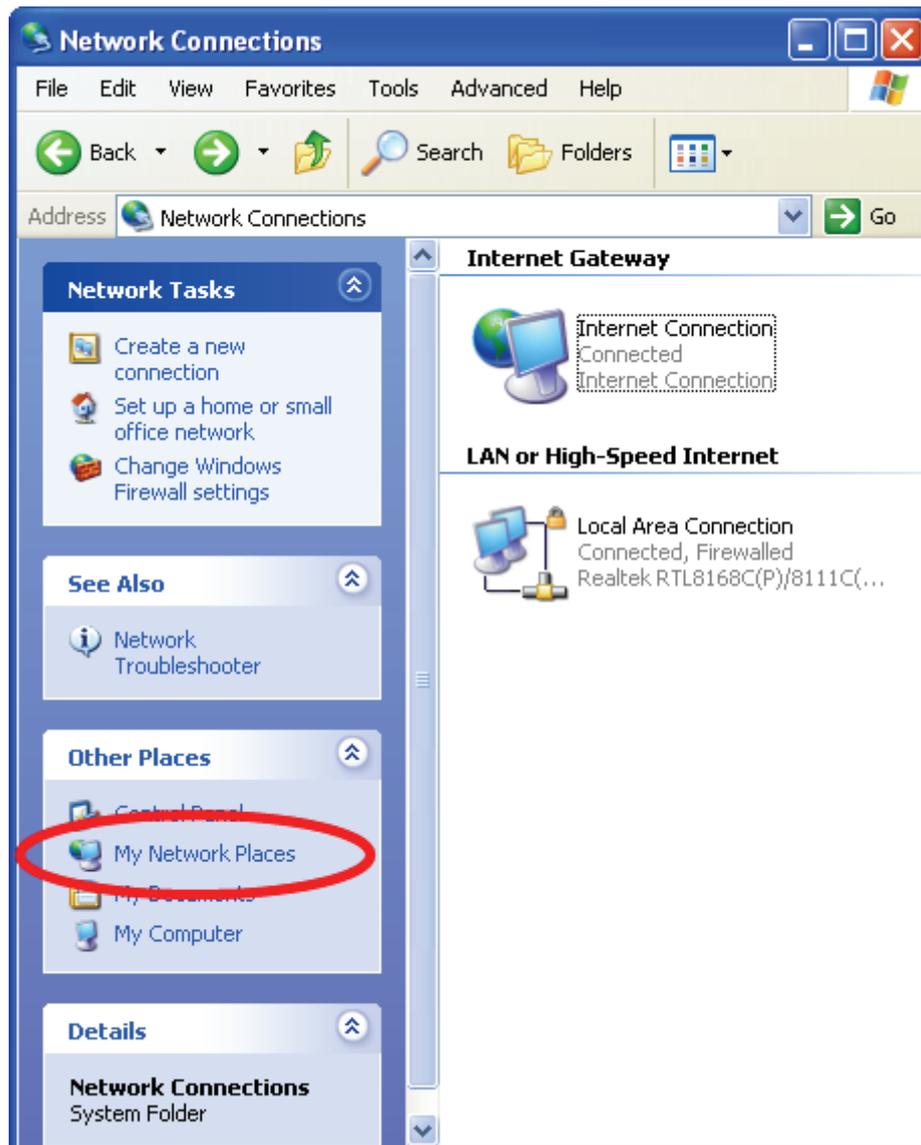

Step 4. An icon with the description for each UPnP-enabled device displays under Local Network.

Step 5. Right-click on the icon for your WLAN ADSL2+ Router and select Invoke. The web configuration login screen displays.

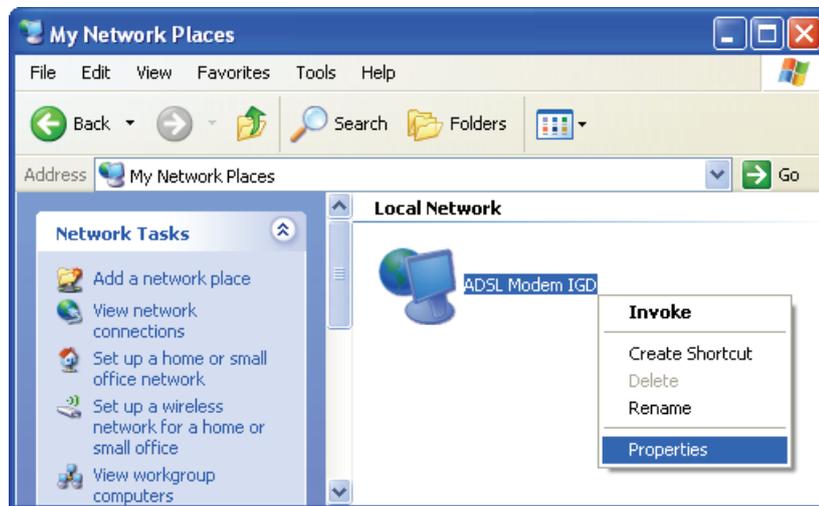

Step 6. Right-click on the icon for your WLAN ADSL2+ Router and select Properties. A properties window displays with basic information about WLAN ADSL2+ Router.



11.0 Troubleshooting

A.1 Using LEDs to Diagnose Problems

The LEDs are useful aides for finding possible problem causes.

A.1.1 Power LED

The PWR LED on the front panel does not light up.

STEPS	CORRECTIVE ACTION
1	Make sure that WLAN ADSL2+ Router's power adaptor is connected to WLAN ADSL2+ Router and plugged in to an appropriate power source. Use only the supplied power adaptor.
2	Check that WLAN ADSL2+ Router and the power source are both turned on and WLAN ADSL2+ Router is receiving sufficient power.
3	Turn the WLAN ADSL2+ Router off and on.
4	If the error persists, you may have a hardware problem. In this case, you should contact your vendor.

A.1.2 LAN LED

The LAN LED on the front panel does not light up.

STEPS	CORRECTIVE ACTION
1	Check the Ethernet cable connections between your WLAN ADSL2+ Router and the computer or hub.
2	Check for faulty Ethernet cables.
3	Make sure your computer's Ethernet card is working properly.
4	If these steps fail to correct the problem, contact your local distributor for assistance.

A.1.3 DSL LED (ACT & LINK)

The DSL LED on the front panel does not light up.

STEPS	CORRECTIVE ACTION
1	Check the telephone wire and connections between ADSL2+ Router DSL port and the wall jack.
2	Make sure that the telephone company has checked your phone line and set it up for DSL service.
3	Reset your ADSL line to reinitialize your link to the DSLAM.
4	If these steps fail to correct the problem, contact your local distributor for assistance.

A.2 Telnet

I cannot telnet into WLAN ADSL2+ Router.

STEPS	CORRECTIVE ACTION
1	Check the LAN port and the other Ethernet connections.
2	Make sure you are using the correct IP address of WLAN ADSL2+ Router. Check the IP address of WLAN ADSL2+ Router.
3	Ping WLAN ADSL2+ Router from your computer. If you cannot ping WLAN ADSL2+ Router, check the IP addresses of WLAN ADSL2+ Router and your computer. Make sure your computer is set to get a dynamic IP address; or if you want to use a static IP address on your computer, make sure that it is on the same subnet as WLAN ADSL2+ Router.
4	Make sure you entered the correct password. The default password is "1234".
5	If these steps fail to correct the problem, contact the distributor.

A.3 Web Configuration

I cannot access the web configuration.

STEPS	CORRECTIVE ACTION
1	Make sure you are using the correct IP address of WLAN ADSL2+ Router. Check the IP address of WLAN ADSL2+ Router.
2	Make sure that there is not a console session running.
3	Check that you have enabled web service access. If you have configured a secured client IP address, your computer's IP address must match it.
4	For WAN access, you must configure remote management to allow server access from the Wan (or all).
5	Your computer's and WLAN ADSL2+ Router's IP addresses must be on the same subnet for LAN access.
6	If you changed WLAN ADSL2+ Router's LAN IP address, then enter the new one as the URL.
7	Remove any filters in LAN or WAN that block web service.

The web configuration does not display properly.

STEPS	CORRECTIVE ACTION
1	Make sure you are using Internet Explorer 5.0 and later versions.
2	Delete the temporary web files and log in again. In Internet Explorer, click Tools , Internet Options and then click the Delete Files ... button. When a Delete Files window displays, select Delete all offline content and click OK . (Steps may vary depending on the version of your Internet browser.)

A.4 Login Username and Password

I forgot my login username and/or password.

STEPS	CORRECTIVE ACTION
1	If you have changed the password and have now forgotten it, you will need to upload the default configuration file. This will erase all custom configurations and restore all of the factory defaults including the password.
2	Press the Reset button for five seconds, and then release it. When the LINK LED begins to blink, the defaults have been restored and WLAN ADSL2+ Router restarts.
3	The default username is "admin". The default password is "1234". The Password and Username fields are case-sensitive. Make sure that you enter the correct password and username using the proper casing.
4	It is highly recommended to change the default username and password. Make sure you store the username and password in a save place.

A.5 LAN Interface

I cannot access WLAN ADSL2+ Router from the LAN or ping any computer on the LAN.

STEPS	CORRECTIVE ACTION
1	Check the Ethernet LEDs on the front panel. A LAN LED should be on if the port is connected to a computer or hub. If the LAN LEDs on the front panel are off, refer to <i>Section A.1.2</i> .
2	Make sure that the IP address and the subnet mask of WLAN ADSL2+ Router and your computer(s) are on the same subnet.

A.6 WAN Interface

Initialization of the ADSL connection failed.

STEPS	CORRECTIVE ACTION
-------	-------------------

1	Check the cable connections between the ADSL port and the wall jack. The DSL LEDs on the front panel of WLAN ADSL2+ Router should be on.
2	Check that your VPI, VCI, type of encapsulation and type of multiplexing settings are the same as what you collected from your telephone company and ISP.
3	Restart WLAN ADSL2+ Router. If you still have problems, you may need to verify your VPI, VCI, type of encapsulation and type of multiplexing settings with the telephone company and ISP.

I cannot get a WAN IP address from the ISP.

STEPS	CORRECTIVE ACTION
1	The ISP provides the WAN IP address after authenticating you. Authentication may be through the user name and password, the MAC address or the host name.
2	The username and password apply to PPPoE and PPOA encapsulation only. Make sure that you have entered the correct Service Type , User Name and Password (be sure to use the correct casing).

A.7 Internet Access

I cannot access the Internet.

STEPS	CORRECTIVE ACTION
1	Make sure WLAN ADSL2+ Router is turned on and connected to the network.
2	If the DSL LEDs are off, refer to <i>Section A.1.3</i> .
3	Verify your WAN settings.
4	Make sure you entered the correct user name and password.

Internet connection disconnects.

STEPS	CORRECTIVE ACTION
1	Check the schedule rules.
2	If you use PPPoA or PPPoE encapsulation, check the idle time-out setting.
3	Contact your ISP.

A.8 Remote Node Connection

I cannot connect to a remote node or ISP.

STEPS	CORRECTIVE ACTION
1	Check WAN screen to verify that the username and password are entered properly.
2	Verify your login name and password for the remote node.
3	If these steps fail, you may need to verify your login and password with your ISP.