

USER MANUAL

DSL-2320B

VERSION 1.0



Table of Contents

General Information	4	Bridge Filters	36
Package Contents.....	4	MAC Filtering Setup.....	36
Important Safety Instructions.....	4	Parental Control.....	38
Front Panel View.....	5	Time of Day Restrictions.....	38
Rear Panel View	6	Tools	39
Installing the Modem	7	Access Control.....	39
Installation Diagram	9	Access Control—Admin.....	40
USB Driver Installation	10	Access Control—Services	40
Configuring Your Computer	14	Access Control—IP Address	41
Windows® 2000.....	14	Time.....	42
Windows® XP.....	15	Remote Log	43
Log in to the Modem	16	System.....	45
Home	17	Save and Reboot	45
Wizard.....	17	Backup Settings.....	45
ATM PVC Configuration	17	Update Settings	46
WAN	24	Restore Default Settings.....	46
LAN.....	30	Firmware.....	47
Logout.....	31	Test	48
Advanced Setup	32	Status	49
ADSL	32	Device Info	49
ADSL Settings	33	WAN Info.....	50
ADSL Tone Settings.....	34	Route Info	50
SNMP	35	Log.....	51
		LAN.....	51
		WAN	52

ATM.....	53
ADSL	54
ADSL BER Test.....	55
Troubleshooting.....	57
Networking Basics	59
Check your IP address	59
Check your MAC address	59
Statically Assign an IP address	60
Contacting Technical Support.....	61
Warranty	62
Registration.....	64

General Information

The D-Link DSL-2320B is an ADSL2+ modem offering the convenience of both Ethernet and USB connections. This user manual provides you with a simple and easy-to-understand format to install and configure your modem.

Package Contents

- ADSL2/2+ Ethernet/USB Modem
- 12VDC, 1A DC CEC-compliant switching power adapter
- RJ-11 telephone cable
- RJ-45 Ethernet cable
- USB Cable
- Quick Install Guide
- Documentation CD-ROM (QIG + User Manual)




Note: Using a power supply with a different voltage rating than the one included with the DSL-2320B will cause damage and void the warranty for this product.


Important Safety Instructions

- Place your modem on a flat surface close to the cables in a location with sufficient ventilation.
- To prevent overheating, do not obstruct the ventilation openings of this equipment.
- Plug this equipment into a surge protector to reduce the risk of damage from power surges and lightning strikes.
- Operate this equipment only from an electrical outlet with the correct power source as indicated on the adapter.
- Do not open the cover of this equipment. Opening the cover will void any warranties on the equipment.
- Unplug equipment first before cleaning. A damp cloth can be used to clean the equipment. Do not use liquid/aerosol cleaners or magnetic/static cleaning devices.

Front Panel View

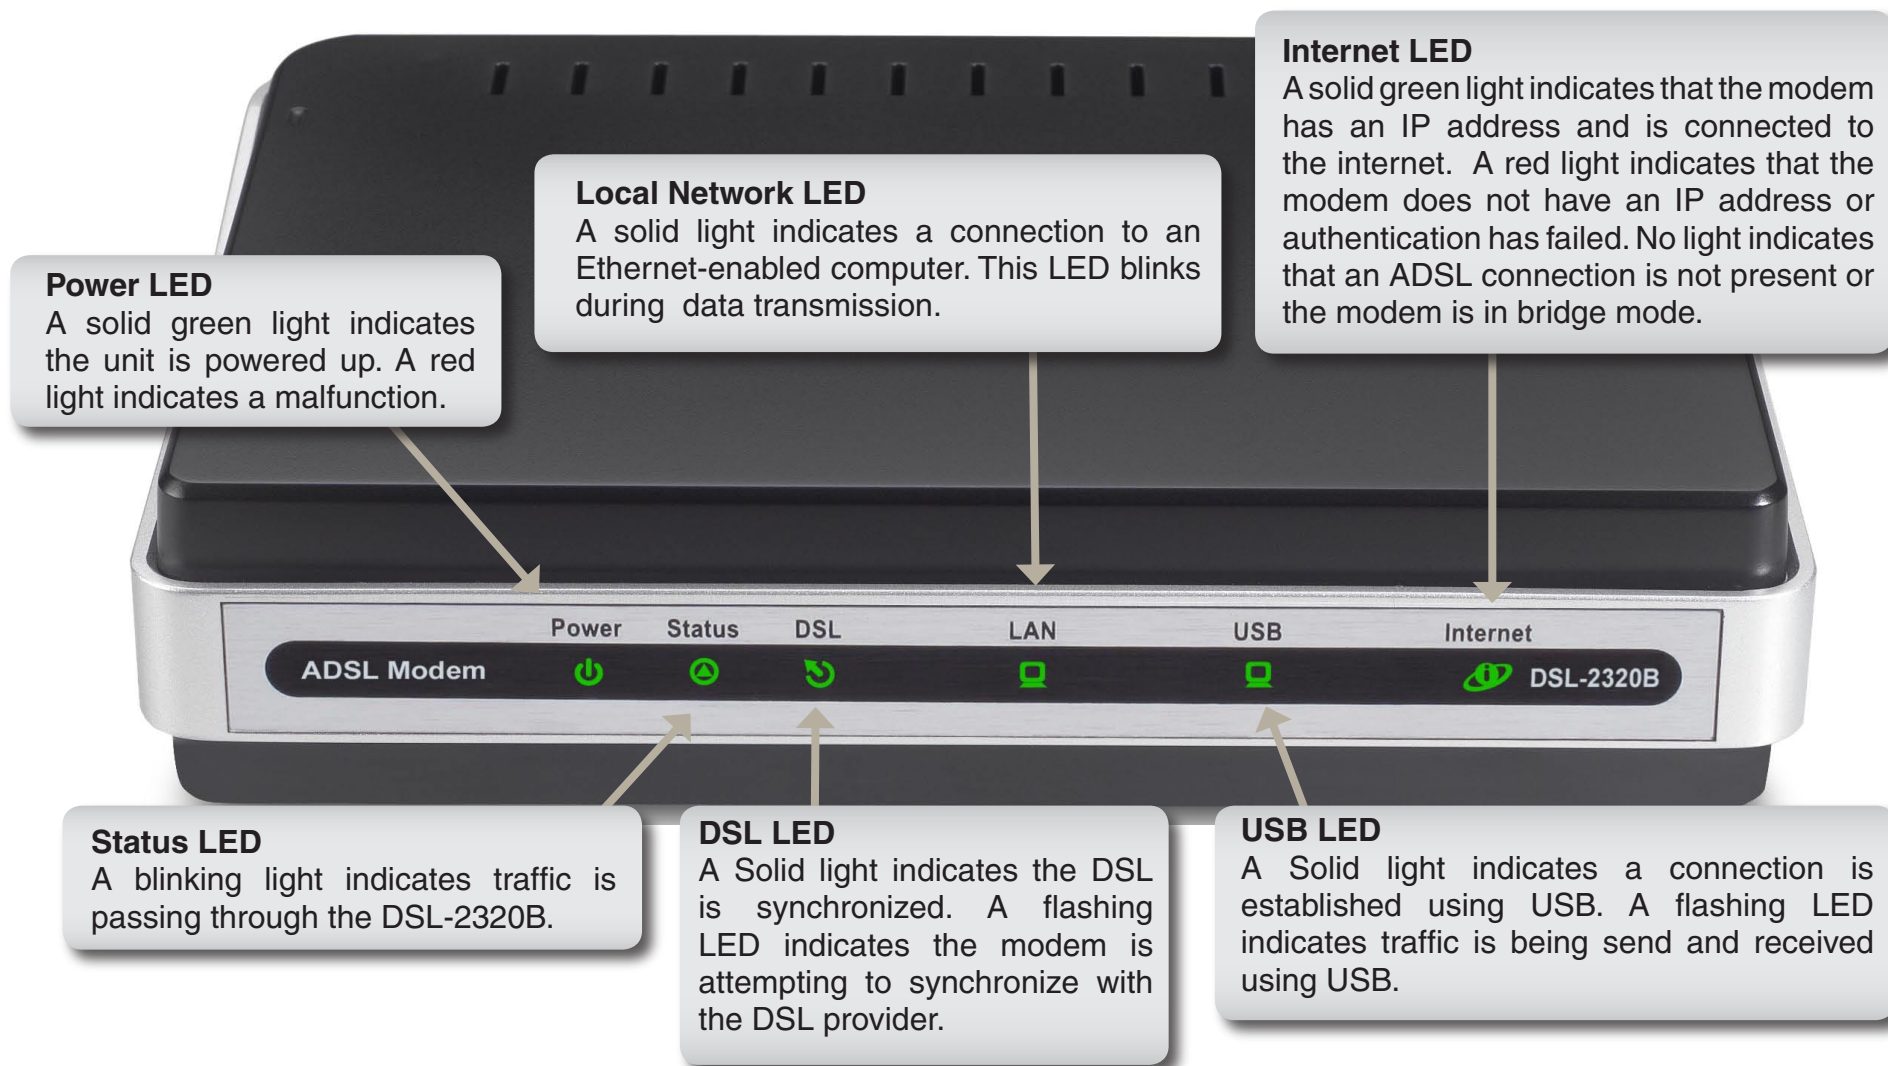


Rear Panel View

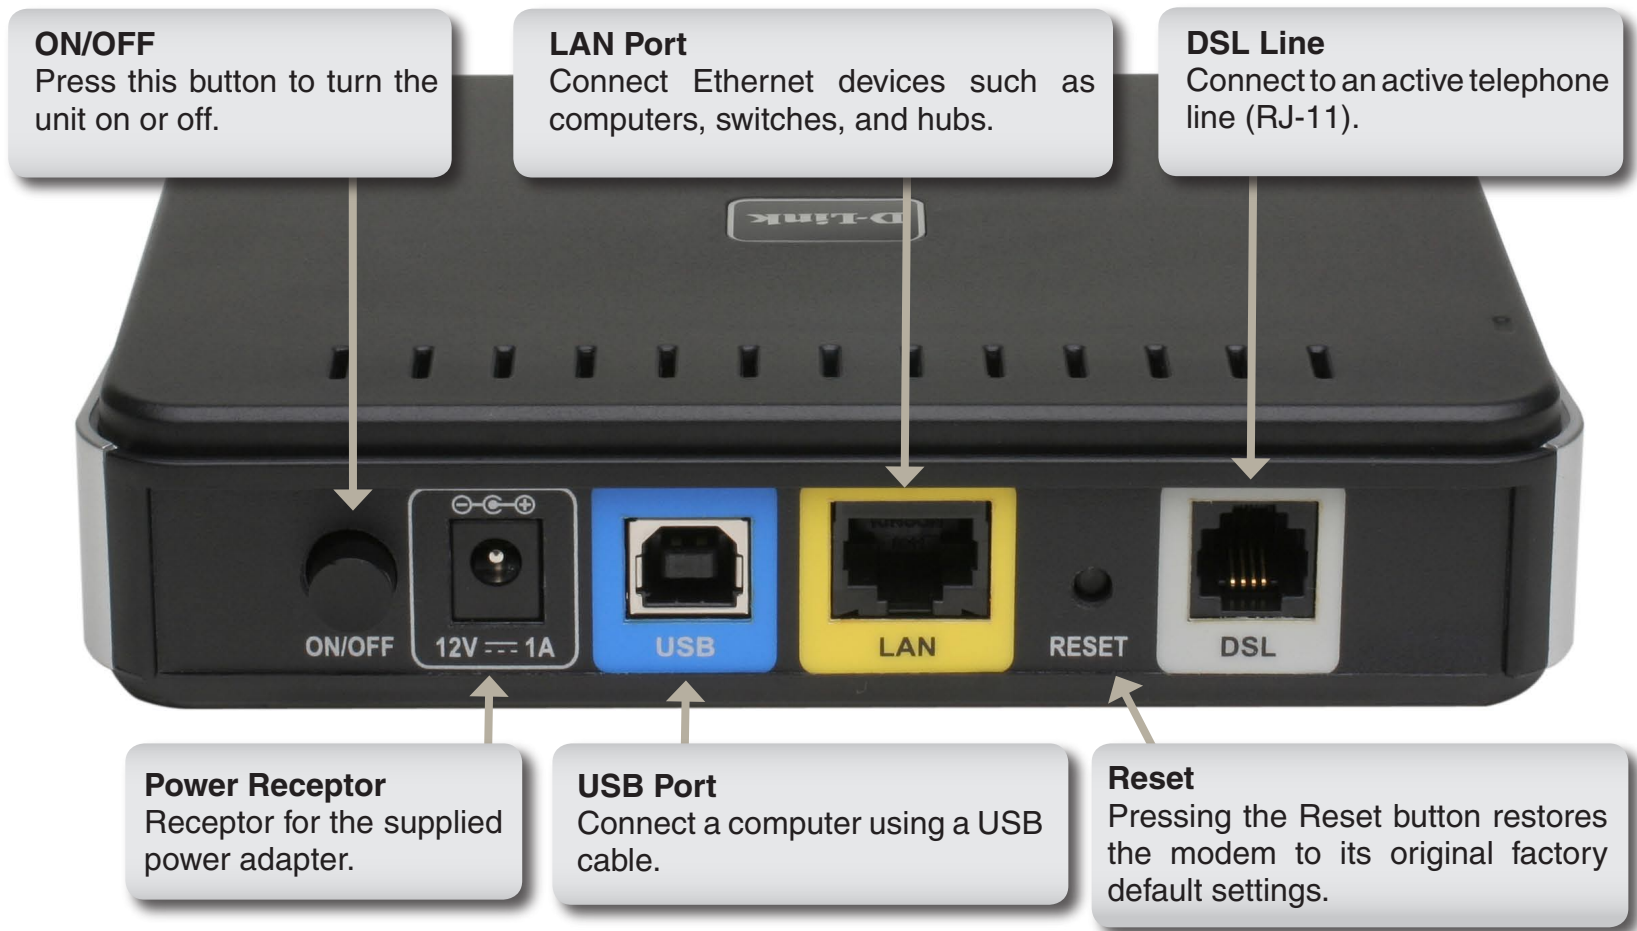

Installing the Modem

Connect the ADSL and Telephone Lines

- Connect an RJ-11 cable between the wall phone jack and the line-end of the splitter (see diagram below).
- Attach another RJ-11 phone cable to the modem-end of the splitter and the ADSL port on the rear panel of the modem.
- The phone-end of the splitter will be connected to the telephone using a third RJ-11 phone cable.

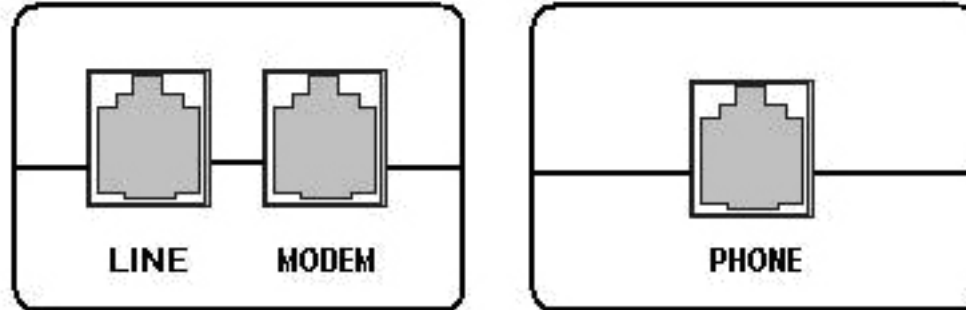

Note: See connections on the installation diagram.

Connect the PC to the Modem

- To use the Ethernet connection, connect the Ethernet cable from the computer directly to the modem. Connect one end of the Ethernet cable to the port labeled LAN on the back of the modem and attach the other end to the Ethernet port of your computer.
- Or, you can use the supplied USB cable to connect your computer directly to the modem. Connect one end of the USB cable to the USB port on the back of the modem and connect the other end to a free USB port on your PC. The Found New Hardware Wizard will open on your PC. See the Installation Diagram on page 9.

- If your LAN has more than one computer, you can attach one end of an Ethernet cable to a hub or a switch and the other to the Ethernet port (labeled LAN) on the modem. Note that either a crossover or straight-through Ethernet cable can be used. The modem automatically recognizes the type of connection that is required.

Connect the Power Adapter

- Complete the process by connecting the supplied 12VAC, 1A power adapter to the POWER connector on the back of the device and plug the adapter into a wall outlet or power strip. Then turn on and boot up your PC and any LAN devices, such as hubs or switches, and any computers connected to them.

Installation Diagram



USB Driver Installation

To connect your computer to the modem by the USB cable instead of the Ethernet cable, you will need to install the modem's USB driver. If you are completing the setup using the ethernet port on the modem, skip this section and proceed to "Configuring your Computer". The following are general steps (may vary for each computer) to complete the USB driver installation on a Windows® 2000/XP operating system.

The following pop-up window appears when you connect the USB cable to your computer (with the other end already attached to the modem).



The **Found New Hardware Wizard** will appear on your screen. To continue, click **Next**.




The next screen allows you to select how you want the wizard to find the driver on your computer. The default selection is set to search for a suitable driver for my device (recommended). To continue, click **Next**.


Next, you can specify the search locations. Make sure **CD-ROM drives** and **Specify a Location** are selected and click **Next**.




At this point, you can insert the CD-ROM into your computer's CD-ROM drive and click on the **Browse** button to specify the CD-ROM drive of your computer.

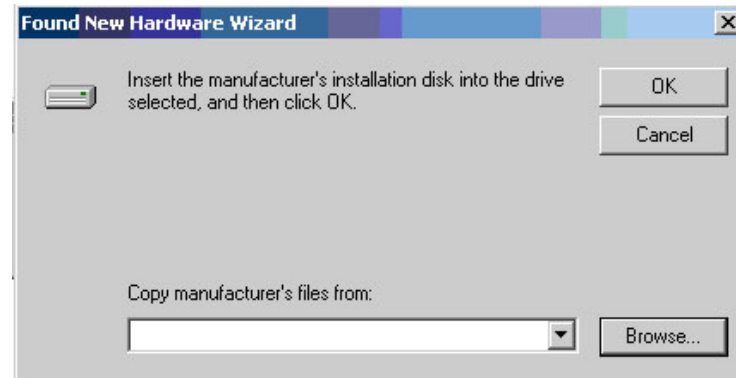


The driver is located in the folder named **Bcm63xx_WHQL_usb_driver**. The file name is **usbdsldr.inf**. Click **Open** to proceed with the installation.

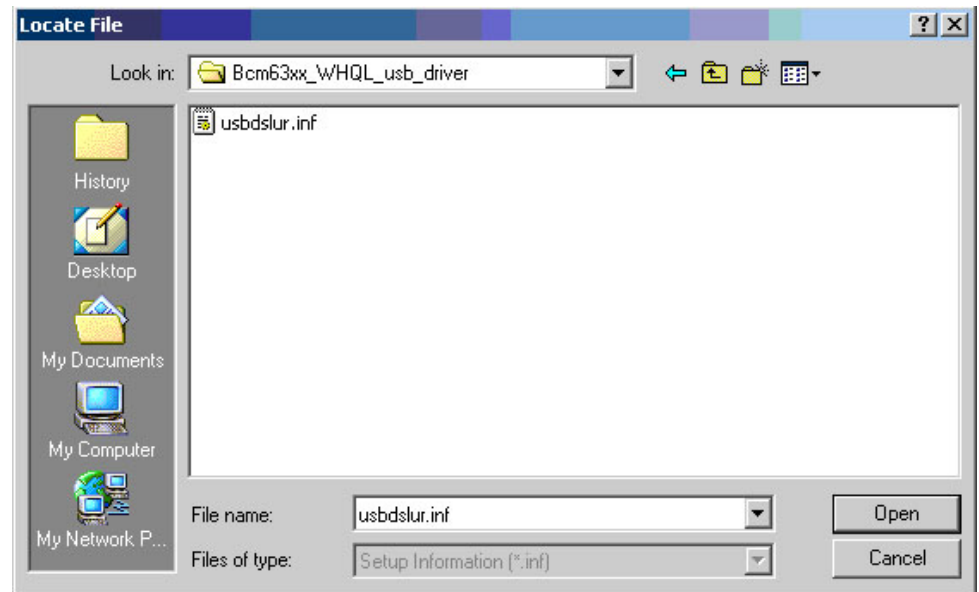


After the file has been selected, the this screen will appear verifying the location where the file will be extracted from. Click on **OK** to continue.

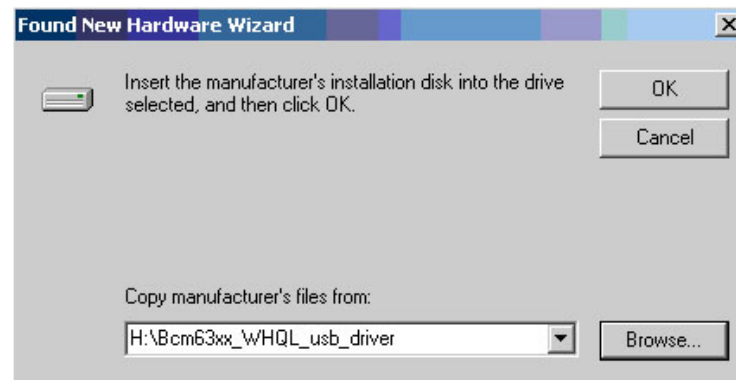

This next screen shows the device and the driver to be installed. Click **Next** to proceed with the installation.

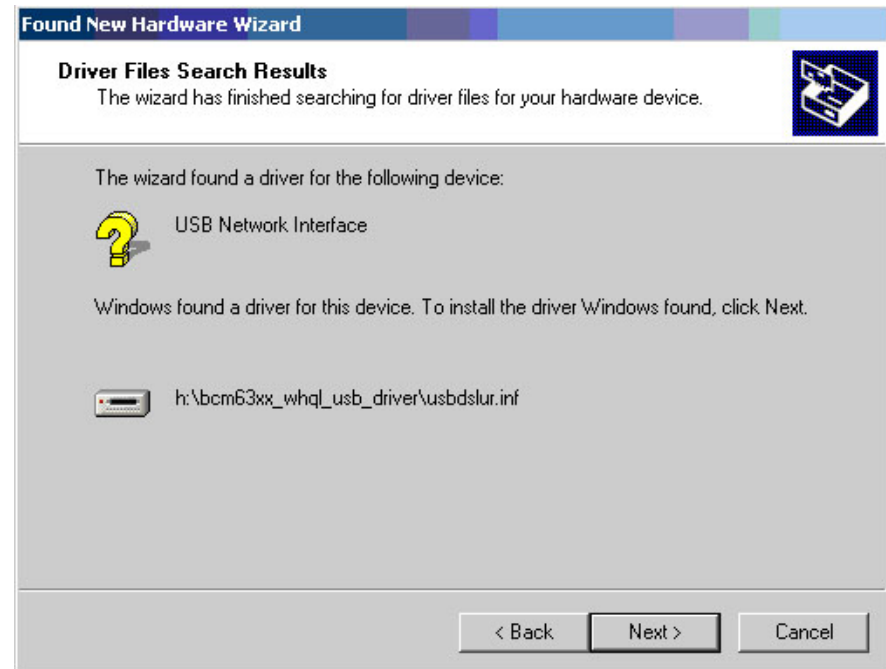

The last screen confirms that the installation is complete. Click on **Finish** to close the wizard.

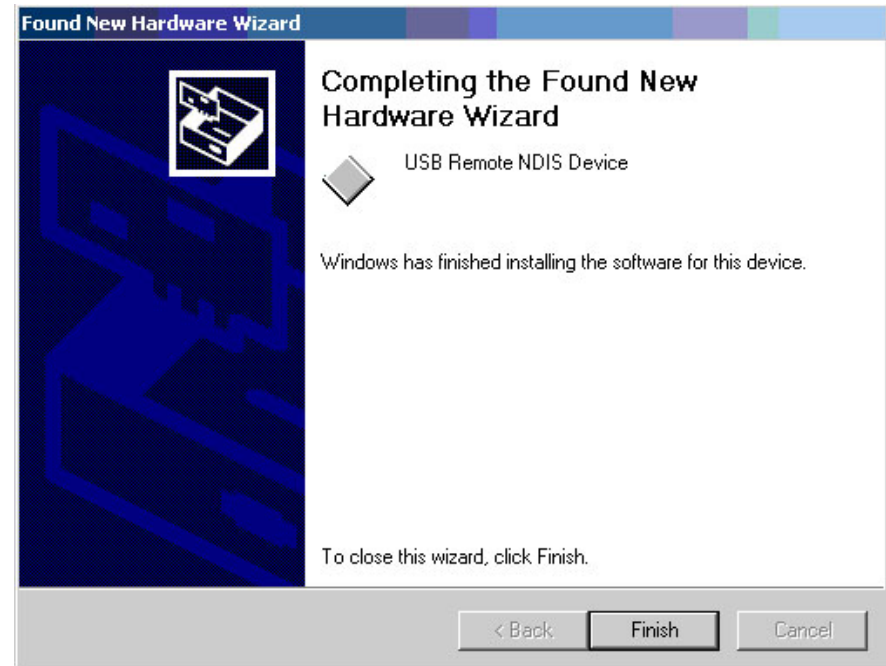

Configuring Your Computer

Prior to accessing the modem through the LAN or USB port, note the following necessary configurations:

- Your PC's TCP/IP address: 192.168.1.x (where "x" is any number between 2 and 254)
- The modem's default IP address: 192.168.1.1
- Subnet mask: 255.255.255.0

Below are the procedures for configuring your computer. Follow the instructions for the operating system that you are using.

Windows® 2000

These are instructions for configuring your Windows® 2000 operating system. If you are using Windows® XP please proceed to page 15.

1. In the Windows taskbar, click on the **Start** button and point to **Settings > Control Panel > Network and Dial-up Connections** (in that order).
2. Click on **Local Area Connection**. When you have the Local Area Connection Status window open, click on **Properties**.
3. Listed in the window are the installed network components. If the list includes Internet Protocol (TCP/IP), then the protocol has already been enabled, and you can skip to Step 10.
4. If Internet Protocol (TCP/IP) does not appear as an installed component, then click on **Install**.
5. In the Select Network Component Type window, click on **protocol** and then the **Add** button.
6. Select **Internet Protocol (TCP/IP)** from the list and then click on **OK**.

7. If prompted to restart your computer with the new settings, click **OK**.
8. After your computer restarts, click on the **Network and Dial-up Connections** icon again, and right click on the **Local Area Connection** icon and then select **Properties**.
9. In the Local Area Connection Properties dialog box, select **Internet Protocol (TCP/IP)** and then click on **Properties**.
10. In the Internet Protocol (TCP/IP) Properties dialog box, click in the radio button labeled **Use the following IP address** and type 192.168.1.x (where “x” is any number between 2 and 254) and 255.255.255.0 in the IP address field and Subnet Mask field.

Windows® XP

1. In the Windows taskbar, click on the **Start** button then go to **Control Panel** and then click **Network Connections**.
2. In the **Network Connections** window, right click on the **Local Area Connection** icon and click on **Properties**.
3. Listed in the **Local Area Connection** window are the installed network components. Make sure the box for Internet Protocol (TCP/IP) is checked and then click on **Properties**.
4. In the Internet Protocol (TCP/IP) Properties dialog box, click on the radio button labeled **Use the following IP address** and type 192.168.1.x (where x is any number between 2 and 254) for the IP address field and 255.255.255.0 for the Subnet Mask field.
5. Click on **OK** twice to save your changes and then close the Control Panel.

Log in to the Modem

This section will explain how to log in to your modem using the following steps:

1. Launch your web browser.
2. Enter the URL `http://192.168.1.1` in the address bar and press **Enter**.

A login screen like the one below will be displayed after you connect to the user interface.



Enter Network Password

Please type your user name and password.

Site: 192.168.1.1

Realm: ADSL Router

User Name

Password

Save this password in your password list

OK Cancel

Note: There are three account types, each requiring a different username and password.

- The user account provides limited access to certain configurations (username / password: **user / user**).
- The admin account can perform all functions (username / password: **admin / admin**).
- The support account is for ISP technicians for maintenance purposes (username / password: **support / support**).

Note: Passwords can be changed at any time.

3. Enter your user name and password, and then click **OK** to display the user interface.

Note: This manual has been prepared using the admin user name.

Home


The home section provides configurations for general use, including a Quick Setup Wizard with steps to quickly set up your modem for Internet connection. Also included in this section are LAN/WAN setup and DNS configuration. The next sections explain the setup for each.

Wizard


This section will explain how to quickly configure the modem if your only intention is to access the Internet.

ATM PVC Configuration

To enable the auto-connect process, click on the box labeled **DSL Auto-connect**, a process that will automatically detect the first usable PVC and automatically detect PPPoE, PPPoA, and Bridge Protocol (with DHCP Server available). To continue, click on the **Next** button.

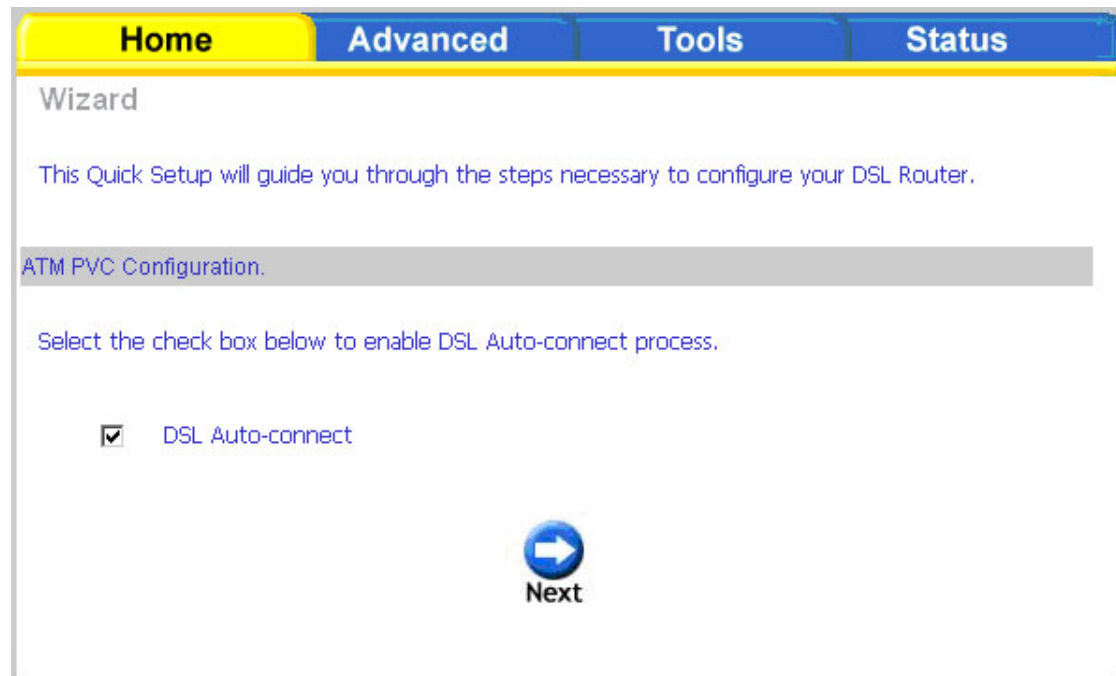

If you uncheck the **DSL Auto-connect** box, the resulting screen is seen below. Enter the VPI/VCI as indicated by your ISP. There is also an option to enable Quality of Service. When you are ready, click **Next** to continue.

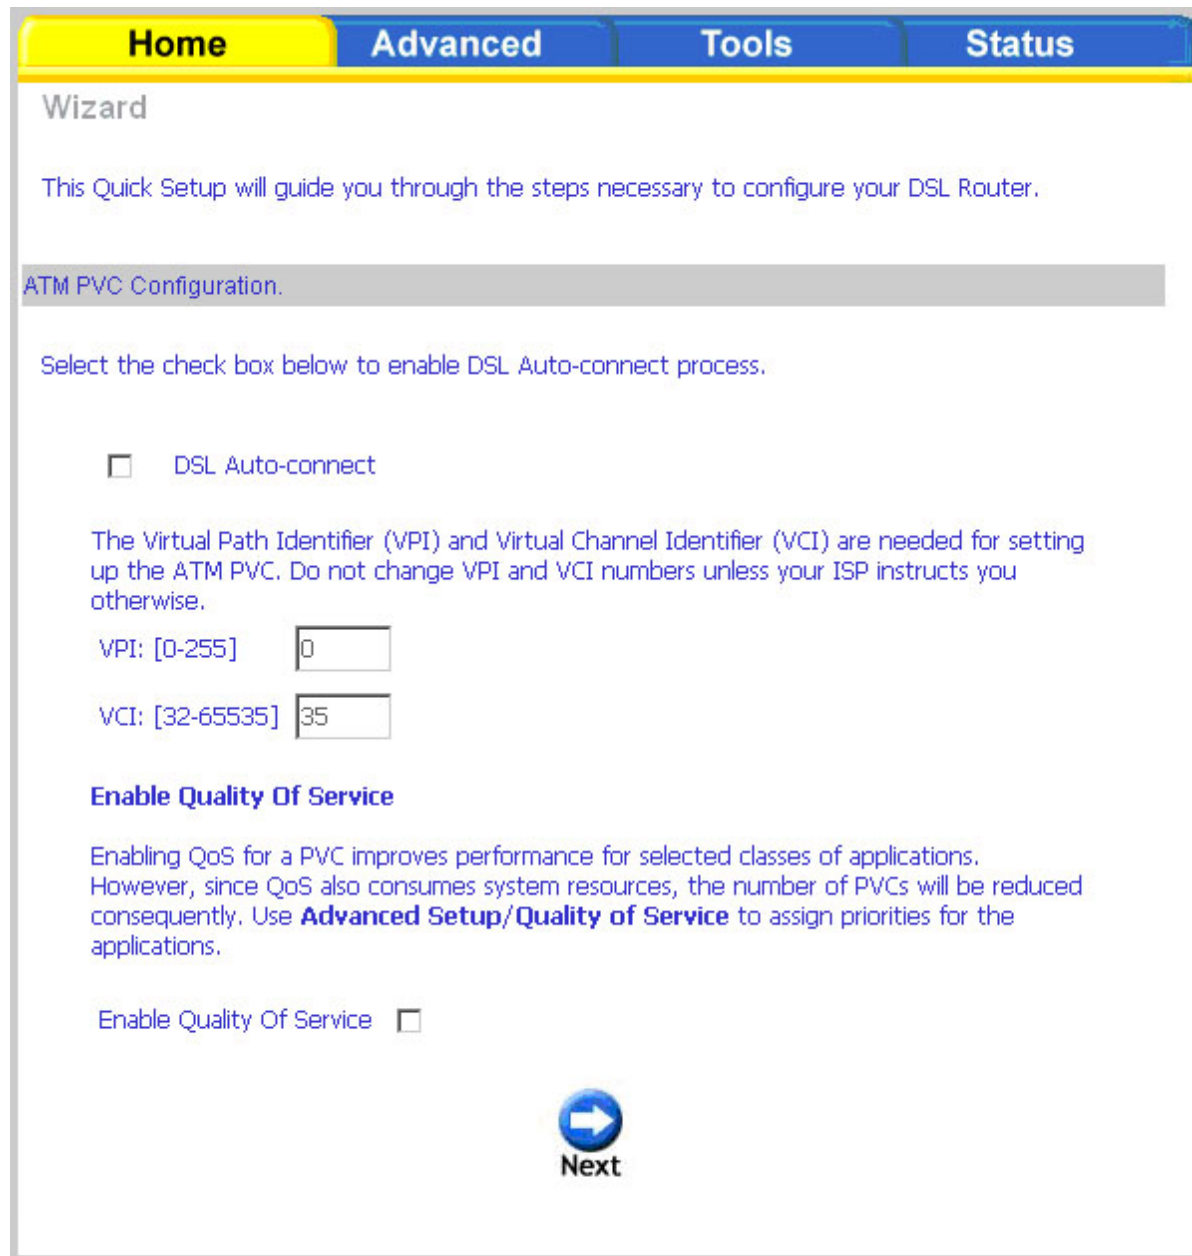

The screenshot shows a web-based configuration wizard for a DSL router. At the top, there are four tabs: "Home" (highlighted in yellow), "Advanced", "Tools", and "Status". Below the tabs, the page is titled "Wizard" and contains the following text:

This Quick Setup will guide you through the steps necessary to configure your DSL Router.

ATM PVC Configuration.

Select the check box below to enable DSL Auto-connect process.

DSL Auto-connect

The Virtual Path Identifier (VPI) and Virtual Channel Identifier (VCI) are needed for setting up the ATM PVC. Do not change VPI and VCI numbers unless your ISP instructs you otherwise.

VPI: [0-255]

VCI: [32-65535]


Enable Quality Of Service

Enabling QoS for a PVC improves performance for selected classes of applications. However, since QoS also consumes system resources, the number of PVCs will be reduced consequently. Use **Advanced Setup/Quality of Service** to assign priorities for the applications.

Enable Quality Of Service

At the bottom center, there is a blue circular button with a white right-pointing arrow and the word "Next" below it.

Next is the Connection Type screen where you can select the type of network protocol and encapsulation mode over the ATM PVC that your ISP has instructed you to use. The following is a PPPoA example. Click **Next** to continue.

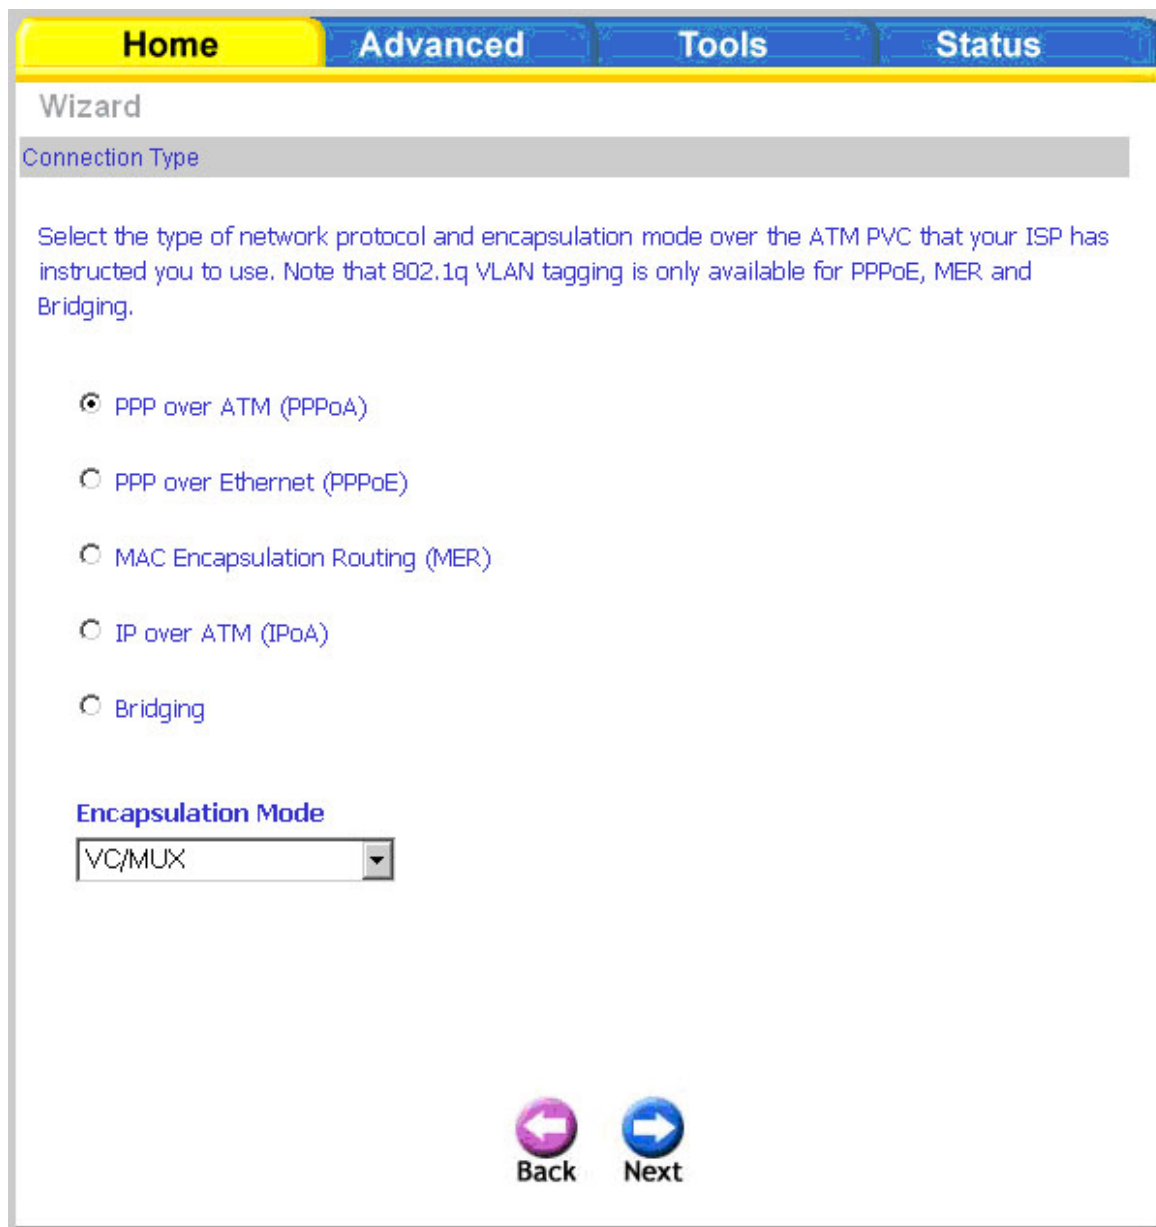

The screenshot shows a web-based configuration wizard with a yellow 'Home' tab and blue 'Advanced', 'Tools', and 'Status' tabs. The 'Wizard' section is active, and the 'Connection Type' step is highlighted. The instructions state: 'Select the type of network protocol and encapsulation mode over the ATM PVC that your ISP has instructed you to use. Note that 802.1q VLAN tagging is only available for PPPoE, MER and Bridging.' There are five radio button options: 'PPP over ATM (PPPoA)' (selected), 'PPP over Ethernet (PPPoE)', 'MAC Encapsulation Routing (MER)', 'IP over ATM (IPoA)', and 'Bridging'. Below these is the 'Encapsulation Mode' section with a dropdown menu set to 'VC/MUX'. At the bottom are 'Back' and 'Next' navigation buttons.

Home Advanced Tools Status

Wizard

Connection Type

Select the type of network protocol and encapsulation mode over the ATM PVC that your ISP has instructed you to use. Note that 802.1q VLAN tagging is only available for PPPoE, MER and Bridging.

PPP over ATM (PPPoA)

PPP over Ethernet (PPPoE)

MAC Encapsulation Routing (MER)

IP over ATM (IPoA)

Bridging

Encapsulation Mode


VC/MUX

Back Next

Enter the PPP username and password given by your ISP. Then decide if you will be using any features such as dial on demand, PPP IP extension, keep alive and then click on **Next**.

The screenshot shows a web-based configuration wizard with a navigation bar at the top containing 'Home', 'Advanced', 'Tools', and 'Status'. The 'Home' tab is selected. The main content area is titled 'Wizard' and has a sub-header 'PPP Username and Password'. Below this, there is a paragraph of text: 'PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you.' The form includes three input fields: 'PPP Username:' (empty), 'PPP Password:' (empty), and 'Authentication Method:' (a dropdown menu with 'AUTO' selected). Below these are four unchecked checkboxes: 'Dial on demand (with idle timeout timer)', 'PPP IP extension', 'Keep Alive', and 'Use Static IP Address'. There are two radio button options for the default gateway: 'Obtain default gateway automatically:' (which is selected) and 'Use the following default gateway:'. Under the second option, there are two sub-options: 'Use IP Address:' (with an empty text box) and 'Use WAN Interface:' (with a dropdown menu showing 'pppoe_0_35/ppp41'). At the bottom of the form are two buttons: 'Back' (with a left arrow icon) and 'Next' (with a right arrow icon).

The next step is to configure the Network Address Translation (NAT) settings. For the example, NAT will be enabled. Leave the remaining fields at their defaults and click **Next** to continue.

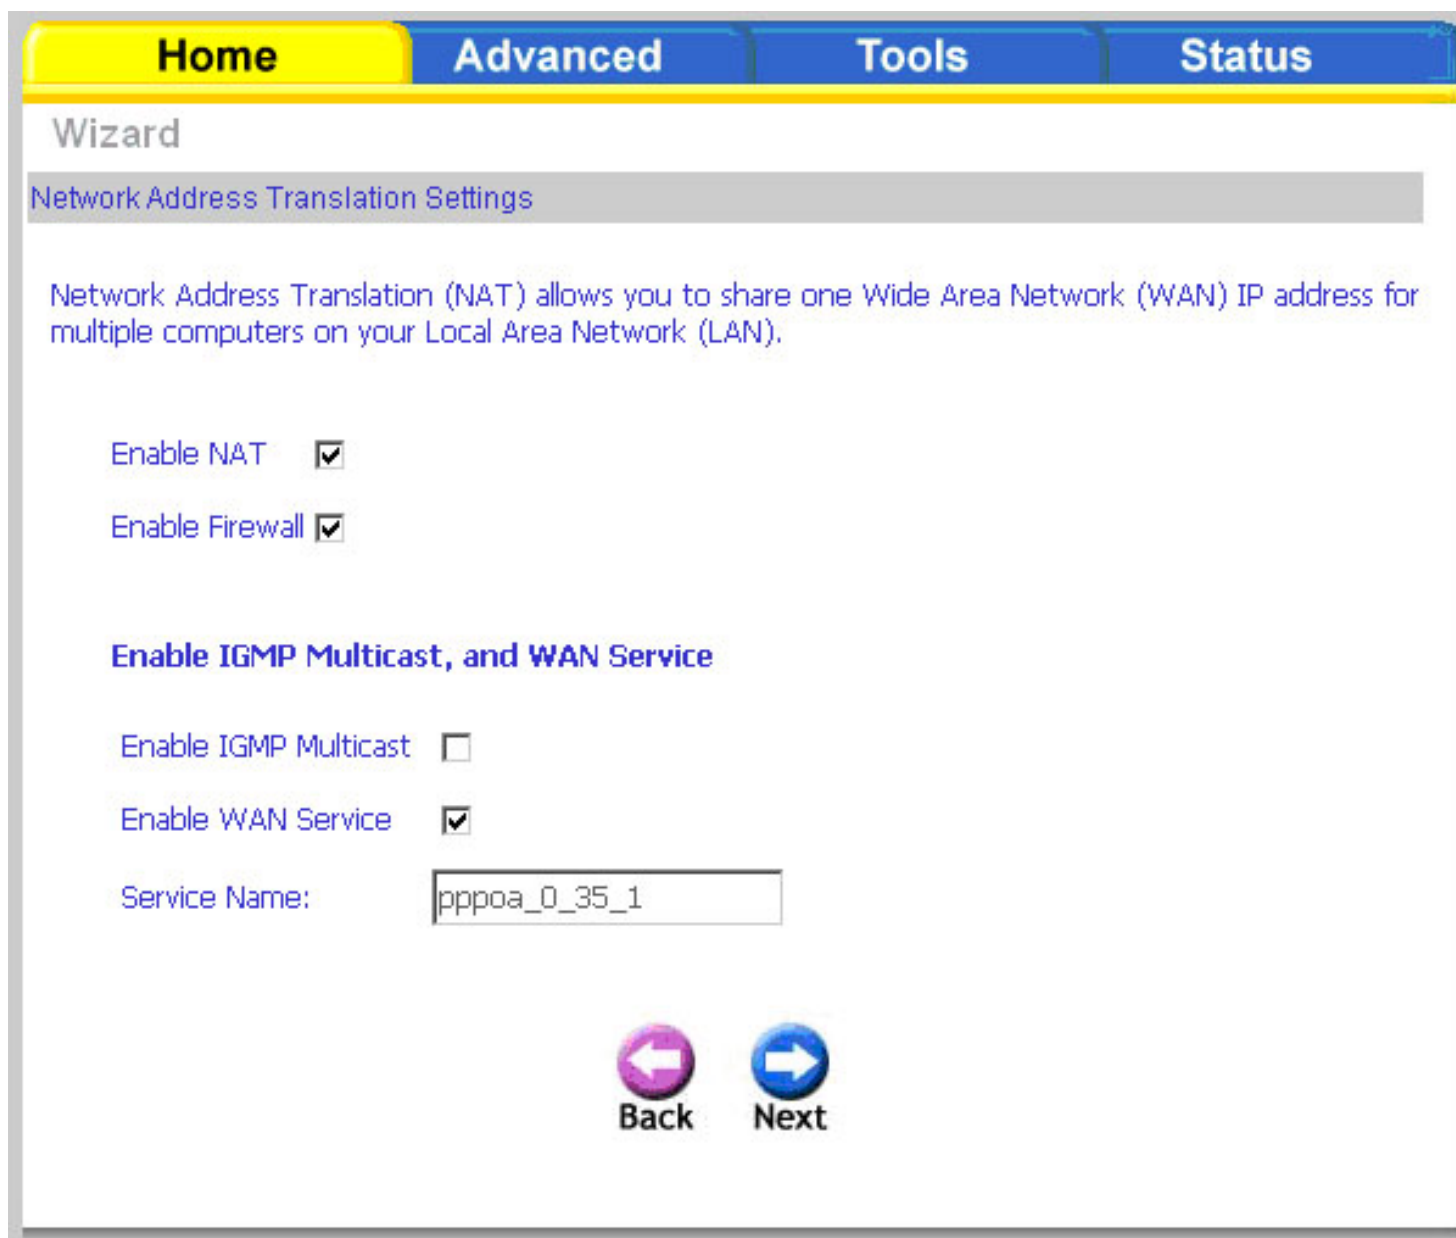

The screenshot shows a web-based configuration wizard for Network Address Translation (NAT). The interface has a top navigation bar with four tabs: "Home" (highlighted in yellow), "Advanced", "Tools", and "Status". Below the tabs, the page is titled "Wizard" and "Network Address Translation Settings". A descriptive paragraph explains that NAT allows sharing a single WAN IP address for multiple LAN computers. There are four configuration options, each with a checkbox: "Enable NAT" (checked), "Enable Firewall" (checked), "Enable IGMP Multicast" (unchecked), and "Enable WAN Service" (checked). Below these is a "Service Name" field containing the text "pppoa_0_35_1". At the bottom, there are two circular buttons: a purple "Back" button with a left-pointing arrow and a blue "Next" button with a right-pointing arrow.

Home Advanced Tools Status

Wizard

Network Address Translation Settings

Network Address Translation (NAT) allows you to share one Wide Area Network (WAN) IP address for multiple computers on your Local Area Network (LAN).

Enable NAT

Enable Firewall

Enable IGMP Multicast, and WAN Service

Enable IGMP Multicast

Enable WAN Service

Service Name:

Back Next

In this section, you can configure the DSL Modem IP address and Subnet Mask to make the LAN interface correspond to your LAN's IP Subnet. If you want the DHCP server to automatically assign IP addresses, then enable the DHCP server and enter the range of IP addresses that the DHCP server can assign to your computers. Disable the DHCP server if you would like to manually assign IP addresses. Click **Next** to continue.

Wizard

Device Setup

Configure the DSL Router IP Address and Subnet Mask for LAN interface.

IP Address:

Subnet Mask:

Disable DHCP Server



Enable DHCP Server

Start IP Address:

End IP Address:


Leased Time (hour):

Configure the second IP Address and Subnet Mask for LAN interface

Back Next

After all WAN configurations are complete, the WAN Setup Summary screen displays all WAN settings that you have made. Check that the settings are correct before clicking on the **Save/Reboot** button. Clicking on **Save/Reboot** will save your settings and restart your modem.

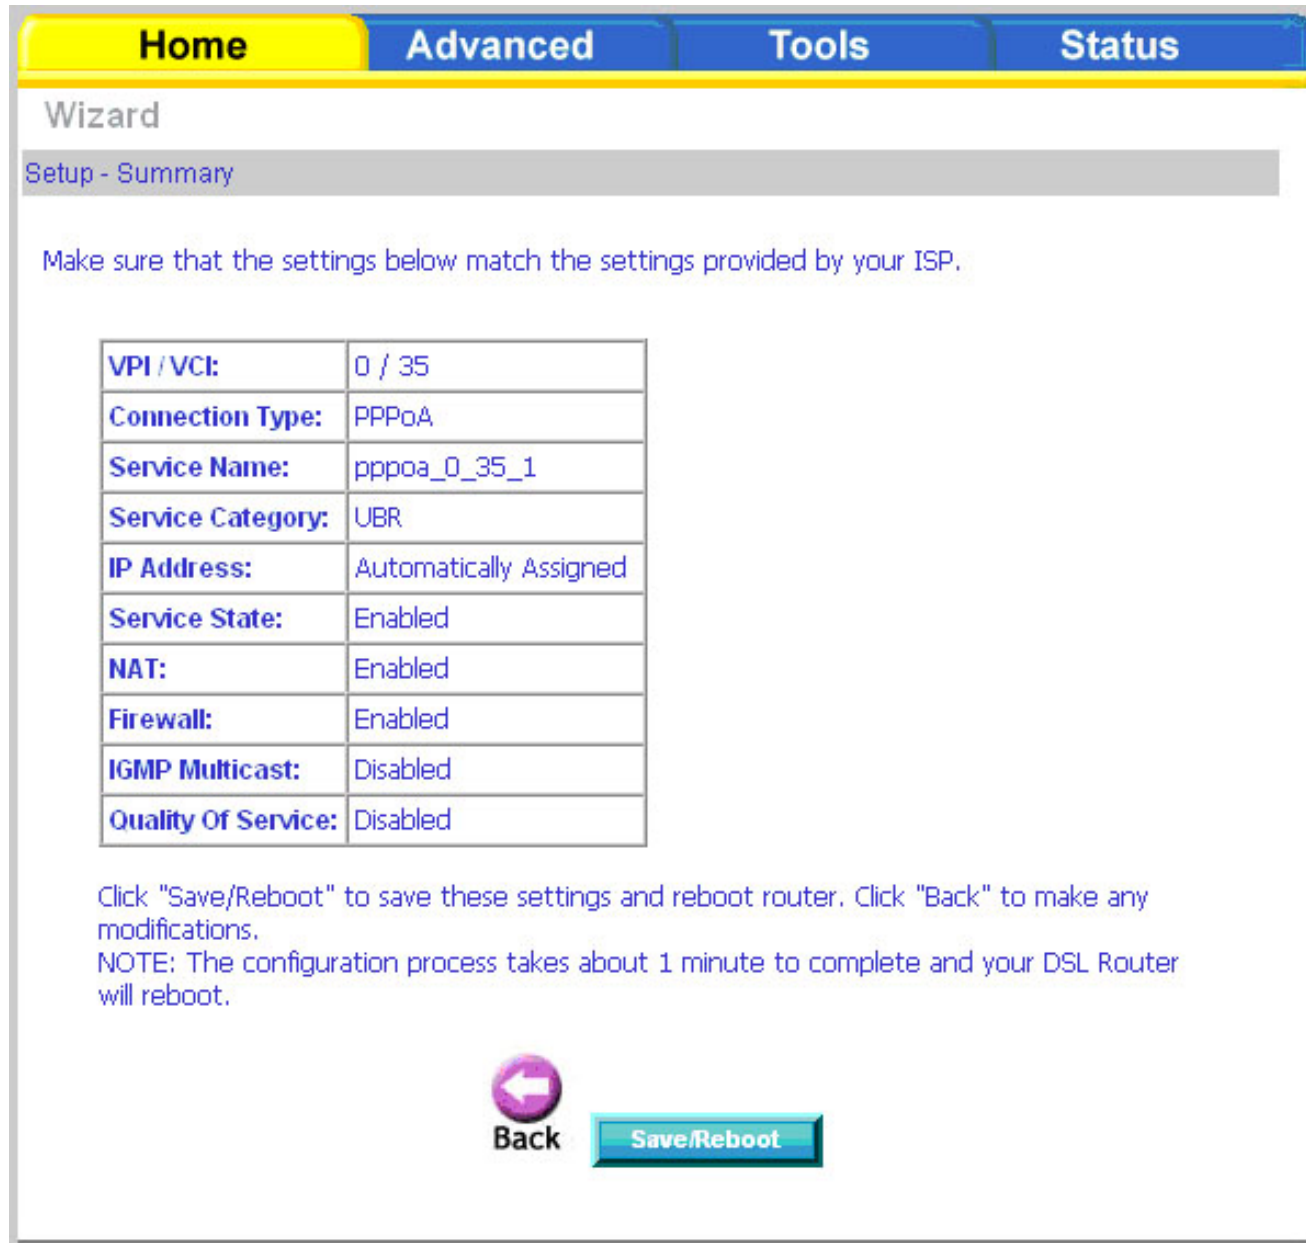

Home Advanced Tools Status



Wizard

Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

VPI / VCI:	0 / 35
Connection Type:	PPPoA
Service Name:	pppoa_0_35_1
Service Category:	UBR
IP Address:	Automatically Assigned
Service State:	Enabled
NAT:	Enabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Disabled

Click "Save/Reboot" to save these settings and reboot router. Click "Back" to make any modifications.
NOTE: The configuration process takes about 1 minute to complete and your DSL Router will reboot.

 Back 

WAN

Configure the WAN settings as provided by

Click on the **Add** button if you want to add a new connection for the WAN interface and to proceed to the ATM PVC Configuration screen as seen on page 24. The ATM PVC Configuration screen allows you to configure an ATM PVC identifier (VPI and VCI) and select a service category.

Home Advanced Tools Status

WAN Setup

Choose Add, Edit, or Remove to configure WAN interfaces.
Choose Finish to apply the changes and reboot the system.

VPI/VCI	Category	Service	Interface	Protocol	State	Remove	Edit	Action
0/35	UBR	pppoa_0_35_1	ppp_0_35_1	PPPoA	Enabled	<input type="checkbox"/>		Up

Add Remove Finish

Note: The Following settings are ISP dependant. For information regarding proper configuration, contact your ISP.

VPI: Virtual Path Identifier. The valid range is 0 to 255.

VCI: Virtual Channel Identifier. The valid range is 32 to 65535.

Service Category: Five classes of traffic are listed:

Category:

UBR Without PCR (Unspecified Bit Rate without Peak Cell Rate): UBR service is suitable for applications that can tolerate variable delays and some cell losses. Applications suitable for UBR service include text/data/image transfer, messaging, distribution, and retrieval and also for remote terminal applications such as telecommuting.

UBR With PCR (Unspecified Bit Rate with Peak Cell Rate): UBR service is suitable for applications that can tolerate variable delays and some cell losses. The Peak Cell Rate is a determining factor in how often cells are sent in an effort to minimize lag or jitter caused by traffic inconsistencies.

CBR (Constant Bit Rate): Used by applications that require a fixed data rate that is continuously available during the connection time. It is commonly used for uncompressed audio and video information such as videoconferencing, interactive audio (telephony), audio / video distribution (e.g. television, distance learning, and pay-per-view), and audio / video retrieval (e.g. video-on-demand and audio library).

Non Realtime VBR (Non-Real-time Variable Bit Rate): Can be used for data transfers that have critical response-time requirements such as airline reservations, banking transactions, and process monitoring.

Realtime VBR (Real-time Variable Bit Rate): Used by time-sensitive applications such as real-time video. Rt-VBR service allows the network more flexibility than CBR.


Quality of Service: Can be enabled only for UBR without PCR, UBR with PCR, and Non Realtime VPR.

The screenshot shows the 'WAN Setup' configuration page, specifically the 'ATM PVC Configuration' section. The page has a navigation bar with 'Home', 'Advanced', 'Tools', and 'Status' tabs. Below the title, there is a sub-header 'ATM PVC Configuration' and a descriptive paragraph: 'This screen allows you to configure an ATM PVC identifier (VPI and VCI) and select a service category. Choose an existing interface by selecting the checkbox to enable it.' The configuration fields are: 'VPI: [0-255]' with a value of '2', 'VCI: [32-65535]' with a value of '38', and 'Service Category:' with a dropdown menu set to 'UBR Without PCR'. Below these fields is the 'Enable Quality Of Service' section, which includes a descriptive paragraph about QoS and an unchecked checkbox labeled 'Enable Quality Of Service'. At the bottom of the page are two circular navigation buttons: a purple 'Back' button and a blue 'Next' button.

This screen shows the types of network protocols and encapsulation modes that can be configured:

- PPP over ATM (PPPoA)
- PPP over Ethernet (PPPoE)
- MAC Encapsulation Routing (MER)
- IP over ATM (IPoA)
- Bridging

If you will be using VLAN tagging, click on the Enable 802.1q checkbox and then enter the VLAN ID number. When finished with your selections, click **Next** to continue.

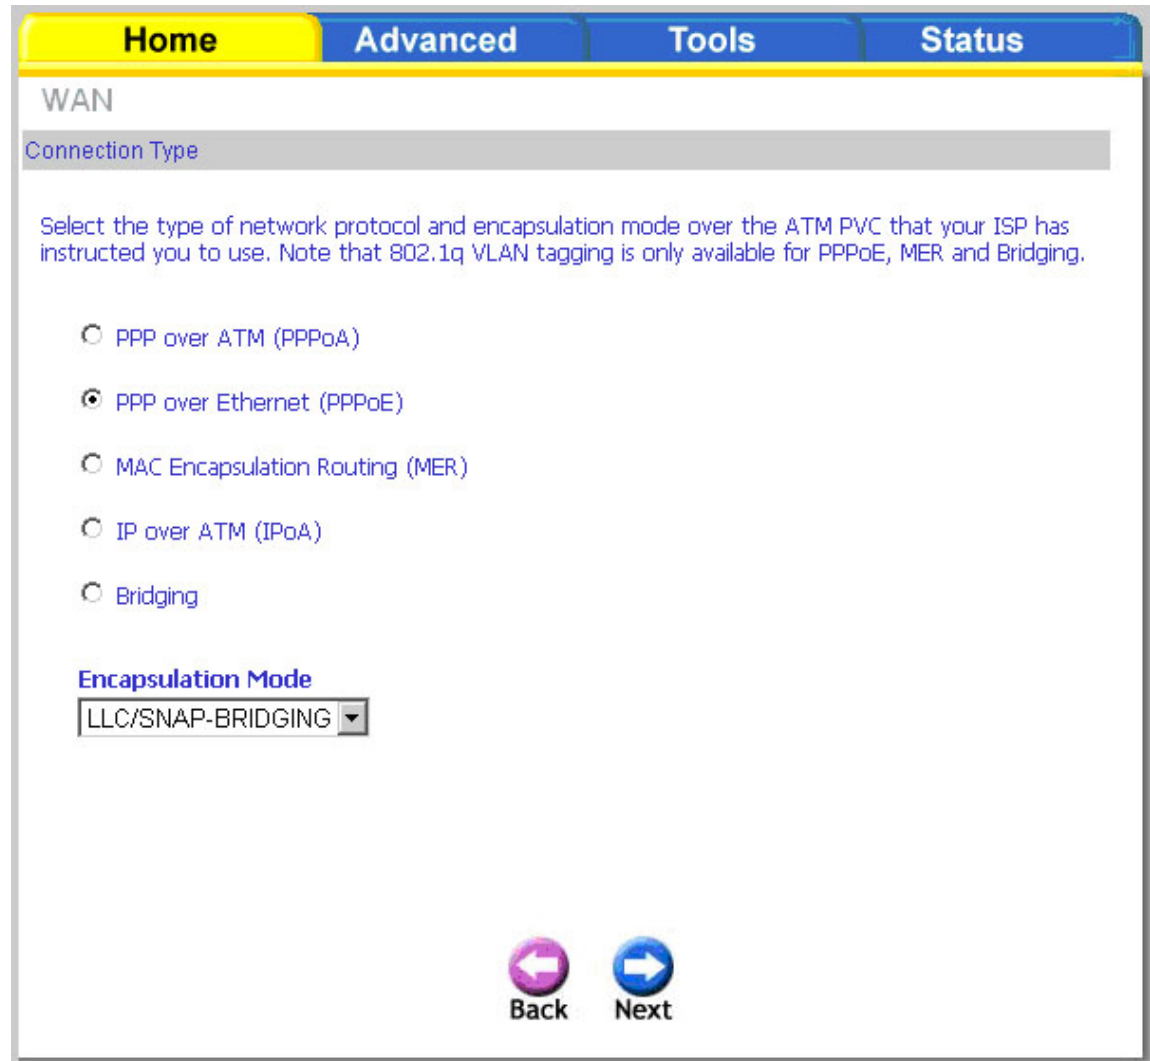

Home Advanced Tools Status

WAN

Connection Type

Select the type of network protocol and encapsulation mode over the ATM PVC that your ISP has instructed you to use. Note that 802.1q VLAN tagging is only available for PPPoE, MER and Bridging.

PPP over ATM (PPPoA)

PPP over Ethernet (PPPoE)

MAC Encapsulation Routing (MER)

IP over ATM (IPoA)

Bridging

Encapsulation Mode

LLC/SNAP-BRIDGING

Back Next

Note: These settings are ISP dependant. For information regarding proper configuration, contact your ISP.

The following screen allows you to enter PPP username and password as well as make any selections regarding

Dial on demand: Allows you to manually connect to the Internet so you are not permanently connected. Idle timeout timer is included.


PPP IP extension: Used by some ISP's. Check with your ISP to see if it is required.

Keep alive: Keeps you connected to your ISP even when no activity is present for a certain period of time.

Use static IP Select if you want to use a non-DHCP issued IP address to connect to the Internet. If selected, you will be asked to enter the static IP address.

Note: *These settings are ISP dependant. For information regarding proper configuration, contact your ISP.*

When finished, click **Next** to proceed to the NAT Settings screen.

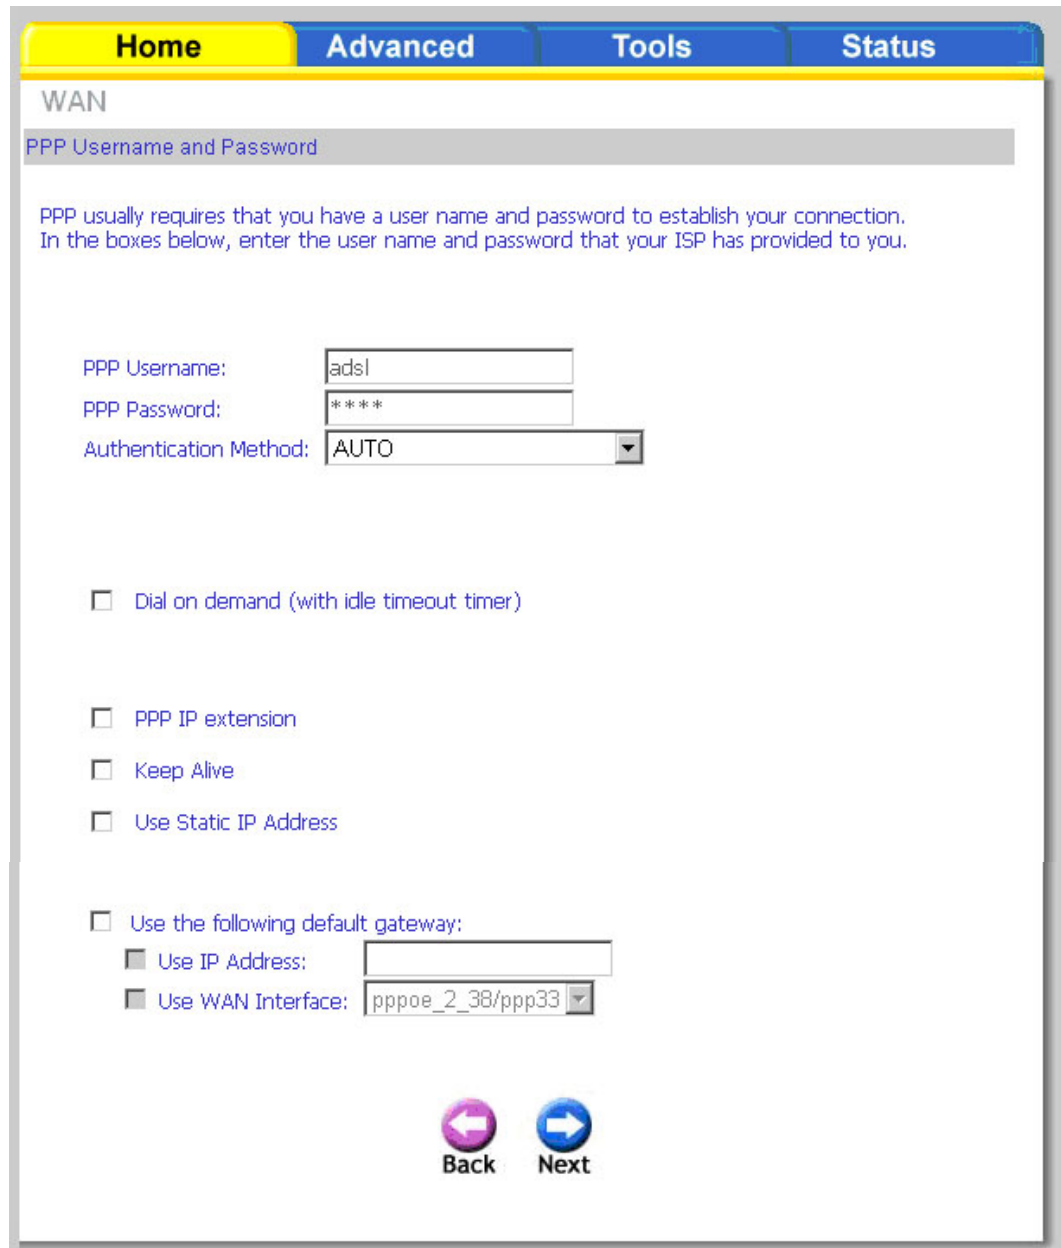

The screenshot shows a web interface for configuring WAN settings. At the top, there are four tabs: Home (highlighted in yellow), Advanced, Tools, and Status. Below the tabs, the page title is "WAN" and the sub-section is "PPP Username and Password". A blue text block explains: "PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you." The form contains three input fields: "PPP Username:" with the value "adsl", "PPP Password:" with "****", and "Authentication Method:" with a dropdown menu set to "AUTO". Below these are five unchecked checkboxes: "Dial on demand (with idle timeout timer)", "PPP IP extension", "Keep Alive", "Use Static IP Address", and "Use the following default gateway:". The last checkbox is expanded to show two sub-options: "Use IP Address:" with an empty text box, and "Use WAN Interface:" with a dropdown menu set to "pppoe_2_38/ppp33". At the bottom of the form are two circular buttons: a purple "Back" button with a left arrow and a blue "Next" button with a right arrow.

This screen allows you to configure the Network Address Translation settings for the modem.

Enable Select enable if you wish to share one WAN IP address for multiple computers on your LAN.

Enable Firewall: Select if you wish to enable the modem's firewall for security.

Enable IGMP Multicast: Select enable if you wish to be able to provide multicasts, mostly used in video streaming.

Enable WAN Select if you wish to use WAN service and then set the service name.

WAN

Network Address Translation Settings

Network Address Translation (NAT) allows you to share one Wide Area Network (WAN) IP address for multiple computers on your Local Area Network (LAN).

Enable NAT

Enable Firewall

Enable IGMP Multicast

Enable WAN Service

Service Name:

Back Next

When finished, click the **Next** button and the following WAN summary screen will be displayed. This screen will outline all WAN settings for review. When satisfied with the settings click on the **Apply** button.

WAN

Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

VPI / VCI:	2 / 38
Connection Type:	PPPoE
Service Name:	pppoe_2_38_1
Service Category:	UBR
IP Address:	Automatically Assigned
Service State:	Enabled
NAT:	Enabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Disabled

Click "Apply" to save these settings. Click "Back" to make any modifications.
NOTE: You need to reboot to activate this WAN interface and further configure services over this interface.

Back Apply

After you apply the configuration, it will return to the WAN Setup screen showing the new configuration. Select the **Finish** button to save the changes and reboot the modem.

Home Advanced Tools Status

WAN Setup

Choose Add, Edit, or Remove to configure WAN interfaces.
Choose Finish to apply the changes and reboot the system.

VPI/VCI	Category	Service	Interface	Protocol	State	Remove	Edit	Action
0/35	UBR	pppoe_0_35_1	ppp_0_35_1	PPPoA	Enabled	<input type="checkbox"/>		Up
2/38	UBR	pppoe_2_38_1	ppp_2_38_1	PPPoE	Enabled	<input type="checkbox"/>		Up

Add Remove Finish

When the modem restarts the DSL Modem Reboot screen will appear during the reboot process.

D-Link ADSL Router - Microsoft Internet Explorer

DSL Router Reboot

The DSL Router has been configured and is rebooting.

Close the DSL Router Configuration window and wait for 2 minutes before reopening your web browser. If necessary, reconfigure your PC's IP address to match your new configuration.

LAN

You can configure the DSL Modem IP address and Subnet Mask for the LAN interface.

You can also enable or disable UPnP. UPnP (Universal Plug and Play) allows compatible devices to communicate and control each other. For example, certain software may use UPnP to open ports on your modem automatically to communicate with the internet.

If you will be multicasting (e.g. video streaming) you can enable IGMP snooping. IGMP snooping allows the modem to efficiently determine where the multicast traffic came from and where it is headed. There are two IGMP snooping options: standard or blocking mode.

If you want the DHCP server to automatically assign IP addresses, select enable DHCP server and enter the range of IP addresses that the DHCP server can assign. Select Disable DHCP server if you would like to manually assign IP addresses.

The **Save** button only saves the LAN configuration data, but does not apply the configuration. Select the **Save/Reboot** button to save the LAN configuration data, reboot the modem and apply the new configuration.

Home Advanced Tools Status

Local Area Network (LAN) Setup

Configure the DSL Router IP Address and Subnet Mask for LAN interface. Save button only saves the LAN configuration data. Save/Reboot button saves the LAN configuration data and reboots the router to make the new configuration effective.

IP Address: 192.168.1.1

Subnet Mask: 255.255.255.0

Enable UPnP

Enable IGMP Snooping

Standard Mode

Blocking Mode

Disable DHCP Server

Enable DHCP Server

Start IP Address: 192.168.1.2

End IP Address: 192.168.1.254


Leased Time (hour): 24

Configure the second IP Address and Subnet Mask for LAN interface

Save **Save/Reboot**

Logout

To log out of the modem's user interface at any time during the setup, click on the **Logout** button. A confirmation screen will appear confirming that you really want to log out.

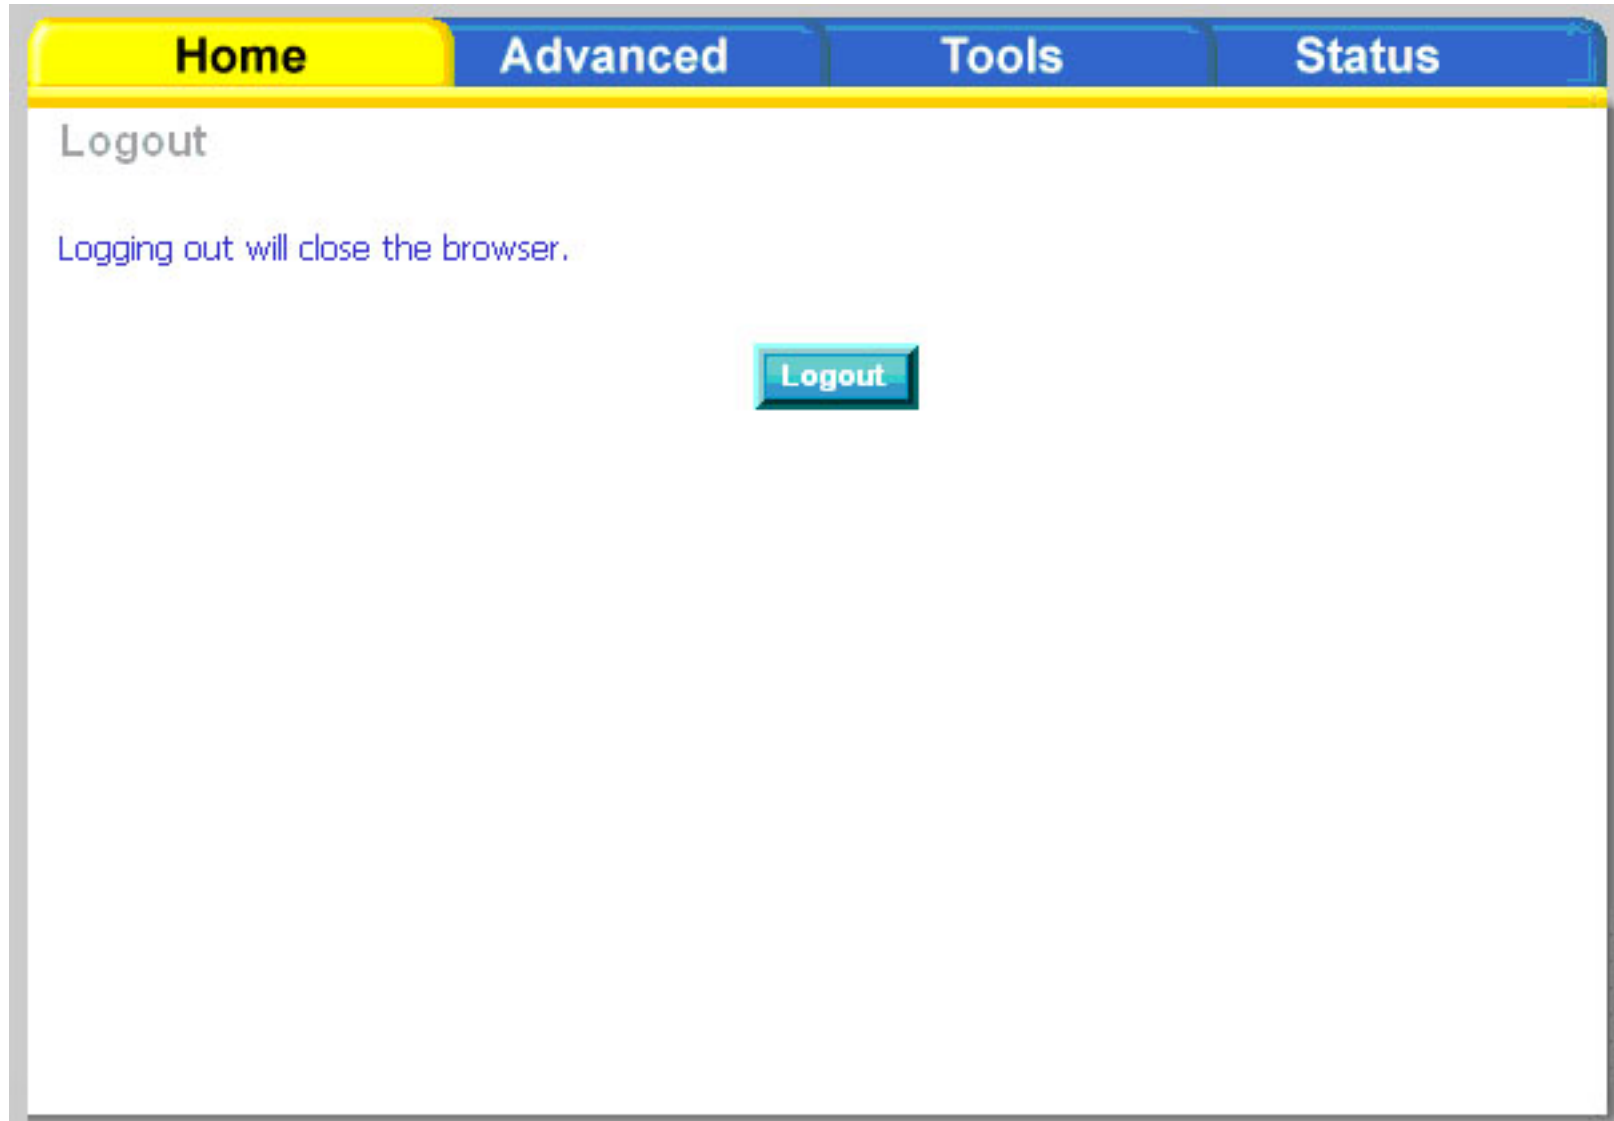


Advanced Setup

This section of the setup is an advanced version of the quick setup. If you want to make specific configurations to your modem such as creating a SNMP, etc., consider going through this advanced setup for a more comprehensive configuration.

ADSL

The ADSL settings page contains modulation and capability settings. Consult your ISP to determine the correct settings. Click **Apply** if you are finished or click on **Advanced Settings** if you want to configure other advanced settings.

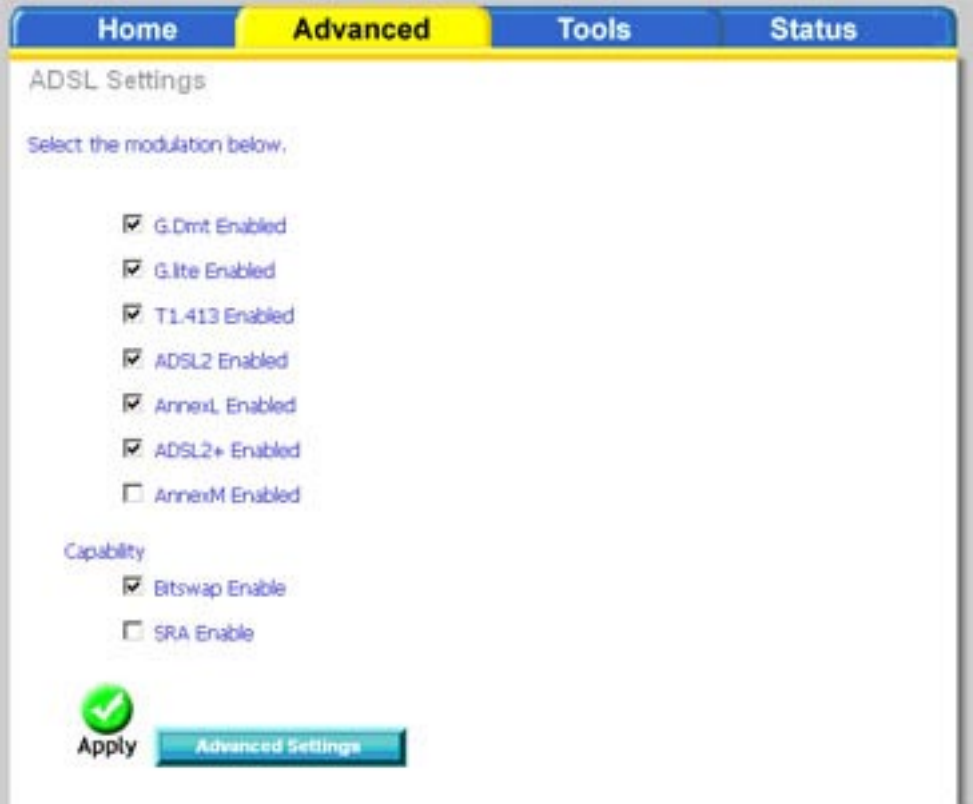


The screenshot shows a web interface for ADSL settings. At the top, there are four tabs: Home, Advanced (highlighted in yellow), Tools, and Status. Below the tabs, the page title is "ADSL Settings". The main content area contains the following elements:

- A heading "ADSL Settings" followed by the instruction "Select the modulation below."
- A list of modulation options, each with a checkbox:
 - G.Dmt Enabled
 - G.lite Enabled
 - T1.413 Enabled
 - ADSL2 Enabled
 - AnnexL Enabled
 - ADSL2+ Enabled
 - AnnexM Enabled
- A heading "Capability" followed by two options:
 - Bitswap Enable
 - SRA Enable
- At the bottom left, there is a green checkmark icon next to the text "Apply".
- At the bottom right, there is a blue button labeled "Advanced Settings".

ADSL Settings

The test mode can be selected from the ADSL Advanced Settings page. Test modes include normal, reverb, medley, no retrain, and L3. After you make your selection, click on **Apply** to save these settings first before you go to **Tone Selection**.

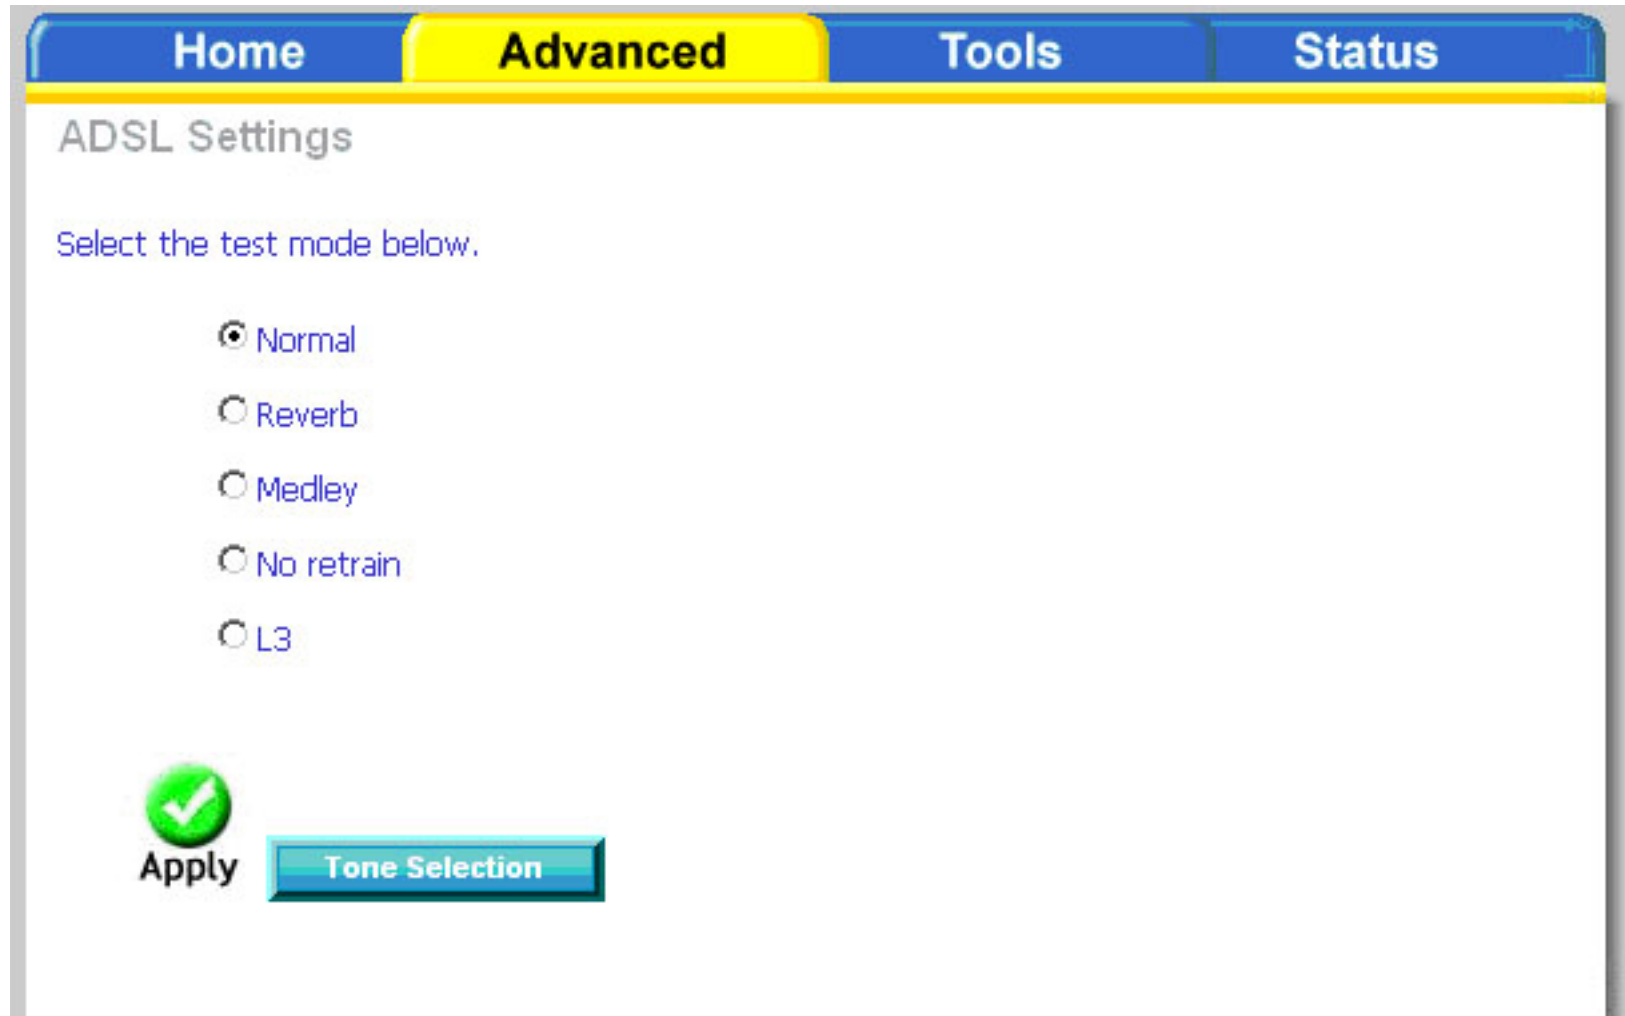



Home Advanced Tools Status

ADSL Settings

Select the test mode below.

- Normal
- Reverb
- Medley
- No retrain
- L3

 Apply 

ADSL Tone Settings

The frequency band of ADSL is split into 256 separate tones, each spaced 4.3125 kHz apart. Each tone carries separate data, so the modem operates as if 256 separate modems were running in parallel. The tone range is from 0 to 31 for upstream and from 32 to 255 for downstream. Do not change these settings unless directed by your ISP.

http://192.168.1.1/adslcfgtone.html - Microsoft Internet Explorer

ADSL Tone Settings

Upstream Tones

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31


Downstream Tones

32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47
 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63
 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79
 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95
 96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111
 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126 127
 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143
 144 145 146 147 148 149 150 151 152 153 154 155 156 157 158 159
 160 161 162 163 164 165 166 167 168 169 170 171 172 173 174 175
 176 177 178 179 180 181 182 183 184 185 186 187 188 189 190 191
 192 193 194 195 196 197 198 199 200 201 202 203 204 205 206 207
 208 209 210 211 212 213 214 215 216 217 218 219 220 221 222 223
 224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239
 240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255

SNMP

SNMP (Simple Network Management Protocol) is a network protocol that provides a means to monitor the status and performance of the modem, as well as make configuration changes. It enables a management station to configure, monitor and receive trap messages from network devices that are configured for SNMP.

To configure the SNMP agent select **Enable**, Enter a Read Community, Set Community, System Name, Location, Contact, and the IP address of the Trap Manager. To save the configuration click **Apply**.

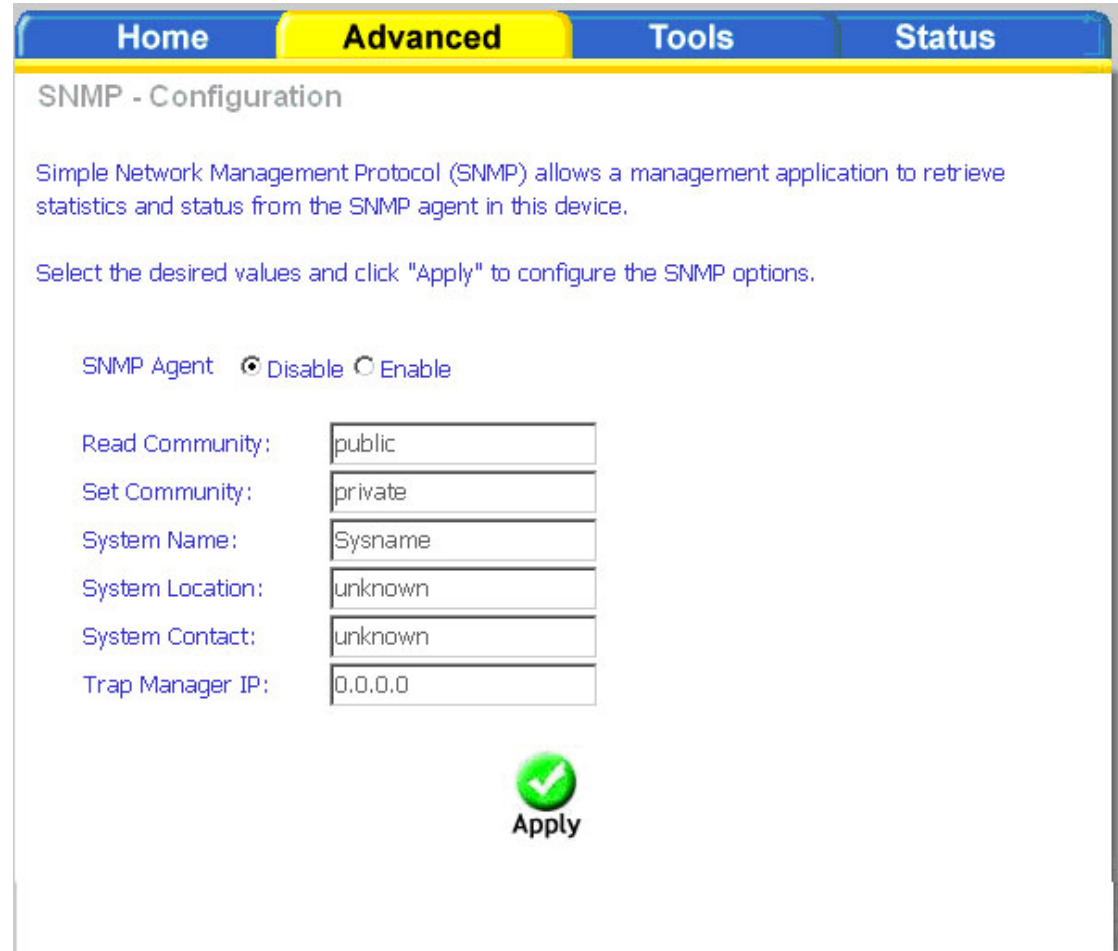

The screenshot shows a web interface with a navigation bar at the top containing 'Home', 'Advanced' (highlighted in yellow), 'Tools', and 'Status'. Below the navigation bar is the title 'SNMP - Configuration'. The main content area contains the following text and form elements:

Simple Network Management Protocol (SNMP) allows a management application to retrieve statistics and status from the SNMP agent in this device.

Select the desired values and click "Apply" to configure the SNMP options.

SNMP Agent Disable Enable

Read Community:	<input type="text" value="public"/>
Set Community:	<input type="text" value="private"/>
System Name:	<input type="text" value="Sysname"/>
System Location:	<input type="text" value="unknown"/>
System Contact:	<input type="text" value="unknown"/>
Trap Manager IP:	<input type="text" value="0.0.0.0"/>

At the bottom right of the form is a green circular button with a white checkmark and the text 'Apply' below it.

Bridge Filters

MAC Filtering Setup

MAC filtering can forward or block traffic by MAC address. You can change the policy or add settings to the MAC filtering table using the MAC Filtering Setup screen.



If you click **Change Policy**, a confirmation dialog allows you to verify your change. Select **Yes** to continue, or **No** to cancel.



If you want to add an entry to the MAC filtering table, Select **Add** from the MAC Filtering Setup screen. The Add MAC Filter screen should then appear. Select a Protocol Type, enter the Destination and Source MAC address, the necessary Frame Direction, and WAN interface (bridge mode only). Click **Apply** to save.



The screenshot shows a web interface with a navigation bar at the top containing 'Home', 'Advanced' (highlighted in yellow), 'Tools', and 'Status'. Below the navigation bar is the 'Add MAC Filter' screen. It contains the following elements:

- A title 'Add MAC Filter'.
- Instructional text: 'Create a filter to identify the MAC layer frames by specifying at least one condition below. If multiple conditions are specified, all of them take effect. Click "Apply" to save and activate the filter.'
- Form fields:
 - 'Protocol Type': A dropdown menu.
 - 'Destination MAC Address': A text input field.
 - 'Source MAC Address': A text input field.
 - 'Frame Direction': A dropdown menu with 'LAN<=>WAN' selected.
- Text: 'WAN Interfaces (Configured in Bridge mode only)'.
- A checkbox labeled 'Select All' which is checked.
- An 'Apply' button with a green checkmark icon.

After you save the settings, a screen showing the settings will appear. On this screen you will be able to view and delete MAC filtering rules.

Parental Control

Time of Day Restrictions

In a home setting, parents can disallow access to the modem (and the internet) by creating special rules called Time of Day Restrictions. Using these restrictions, parents can define the time and days computers on the network are allowed to access the Internet.

Click **Add** to set up the restrictions.

After you click you **Add**, you will see the Time of Day Restriction Add screen. Enter the MAC address of the computer you wish to place on a time of day restriction, select which days you would like the restriction to be in place, and Enter a start and end blocking time.

To determine the MAC address of a computer see “Networking Basics” in the Appendix section of this manual.

Click **Apply** to save the settings and continue.

Time of Day Restrictions -- A maximum of 16 entries can be configured.

Username	MAC	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Start	Stop	Remove

Add

Time of Day Restriction

This page adds a time of day restriction to a special LAN device connected to the router. The "Browser's MAC Address" automatically displays the MAC address of the LAN device where the browser is running. To restrict another LAN device, click the "Other MAC Address" button and enter the MAC address of the other LAN device. To find out the MAC address of a Windows-based PC, open a command prompt window and type "ipconfig /all".

User Name

Browser's MAC Address

Other MAC Address

(xx:xx:xx:xx:xx:xx)

Days of the week	Mon	Tue	Wed	Thu	Fri	Sat	Sun
Click to select	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Start Blocking Time (hh:mm)

End Blocking Time (hh:mm)

Apply

Tools

The tools section contains various administrator functions to maintain your modem. Sections include the following: Admin, Time, Remote Log, System, Firmware, and Test.

- **Admin:** Allows you to change the password for the various user names available
- **Time:** Allows you to set the modem's time
- **Remote Log:** Allows you to view logs of the modem's activities
- **System:** Allows you to perform functions such as save / reboot, backup, update settings, and restore default settings
- **Firmware:** Allows you to upgrade your modem with new available firmware versions
- **Test:** Allows you to view test information for your Internet connection


Access Control

You can enable or disable some services provided by your modem for LAN and WAN connections. If no WAN connection is defined, only the LAN side can be configured.

Click the **Admin** button to change the modems account passwords.

Click the **Services** button to configure what services are allowed to pass through the modem.

Click the **IP Address** button to define who is permitted access to local management features.

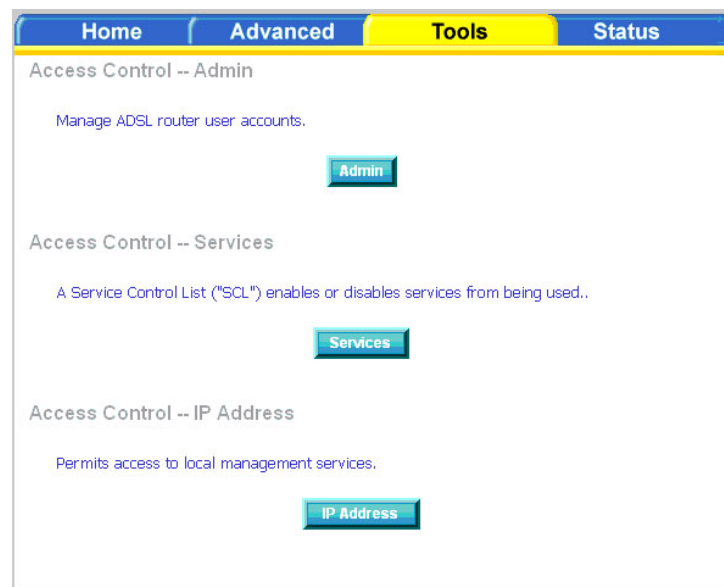

Access Control—Admin

There are three usernames and passwords (**admin**, **support**, and **user**) that can be used to control your modem. The passwords for these usernames can be changed on the Admin screen. Select the Username, enter the Old Password, enter a New Password, and then confirm the new password. When you are ready, click **Apply** at the bottom of the page.

Home | Advanced | **Tools** | Status

Administrator Settings

Access to your DSL router is controlled through three user accounts: admin, support, and user.

The user name "admin" has unrestricted access to change and view configuration of your DSL Router.

The user name "support" is used to allow an ISP technician to access your DSL Router for maintenance and to run diagnostics.

The user name "user" can access the DSL Router, view configuration settings and statistics, as well as, update the router's software.

Use the fields below to enter up to 16 characters and click "Apply" to change or create passwords.
Note: Password cannot contain a space.

Username:

Old Password:

New Password:

Confirm Password:

Apply

Access Control—Services

From this page you can enable/disable certain services from passing through your modem. Services that can be enabled/disabled on the LAN/WAN are FTP, HTTP, ICMP, SNMP, Telnet, and TFTP.

FTP: (File Transfer Protocol) Used for file transfer.

HTTP: (Hyper Text Transfer Protocol) A communications protocol that enables Web browsing.

ICMP: (Internet Control Message Protocol) supports packets containing error, control, and informational messages.

SNMP: (Simple Network Management Protocol) A protocol used for network management and monitoring network devices.

Telnet: A standard Internet protocol for accessing remote systems.

TFTP: (Trivial File Transfer Protocol) A very simple form of the File Transfer Protocol

Home | Advanced | **Tools** | Status

Access Control -- Services

A Service Control List ("SCL") enables or disables services from being used.

Service	LAN	WAN
FTP	<input type="checkbox"/> Enabled	<input type="checkbox"/> Enabled
HTTP	<input checked="" type="checkbox"/> Enabled	<input type="checkbox"/> Enabled
ICMP	<input checked="" type="checkbox"/> Enabled	<input type="checkbox"/> Enabled
SNMP	<input checked="" type="checkbox"/> Enabled	<input type="checkbox"/> Enabled
TELNET	<input checked="" type="checkbox"/> Enabled	<input type="checkbox"/> Enabled
TFTP	<input checked="" type="checkbox"/> Enabled	<input type="checkbox"/> Enabled

Apply


Access Control—IP Address

Web access to the modem can be limited when Access Control Mode is enabled.


Add the IP address to the IP address list by clicking on the **Add** button, then select **Enabled** to enable Access Control Mode.

If Access Control Mode is disabled, any workstation connected locally to your modem can access the web interface provided the correct username and password is supplied at log on.

Enter the IP address of the management station permitted to access the local configuration and click **Apply**. This will return you to the previous screen where you can enable access control.

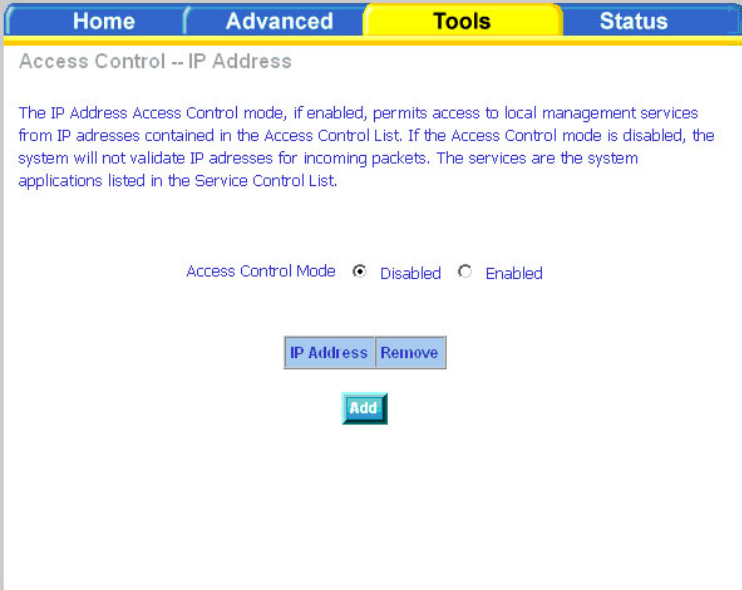

The screenshot shows the 'Access Control -- IP Address' configuration page. At the top, there are four tabs: 'Home', 'Advanced', 'Tools' (which is highlighted in yellow), and 'Status'. Below the tabs, the page title is 'Access Control -- IP Address'. A descriptive paragraph explains that this mode, if enabled, restricts access to local management services to specific IP addresses. Below the text, there are two radio buttons for 'Access Control Mode': 'Disabled' (which is selected) and 'Enabled'. At the bottom, there are three buttons: 'IP Address' and 'Remove' (grouped together), and 'Add'.

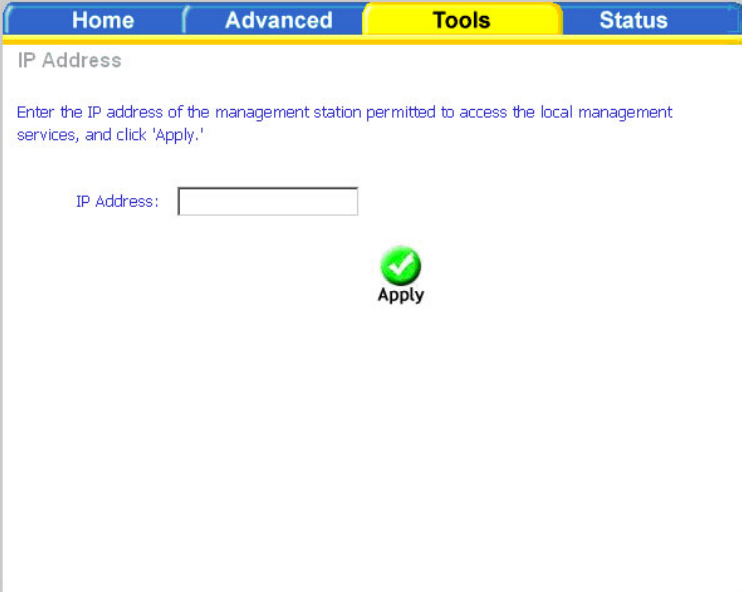


The screenshot shows the 'IP Address' configuration page. At the top, there are four tabs: 'Home', 'Advanced', 'Tools' (which is highlighted in yellow), and 'Status'. Below the tabs, the page title is 'IP Address'. A descriptive paragraph asks the user to enter the IP address of the management station permitted to access local management services. Below the text, there is a text input field labeled 'IP Address:'. At the bottom, there is a green circular button with a checkmark and the word 'Apply' below it.

Time


The Time Settings page allows you to automatically synchronize your time with a time server on the Internet.

To set the modem's time, click on the **automatically synchronize with Internet time servers** checkbox. Additional time settings will appear below the checkbox.

Select from the list of NTP (Network Time Protocol) time servers. Then select the time zone that you are in and click **Apply** to save.

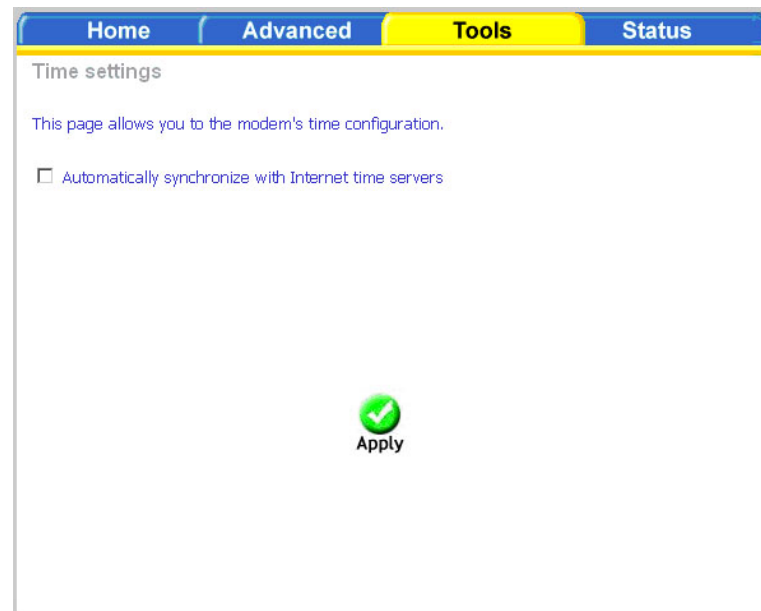

The screenshot shows the 'Time settings' page with a navigation bar at the top containing 'Home', 'Advanced', 'Tools' (highlighted), and 'Status'. Below the navigation bar, the page title is 'Time settings' and a subtitle reads 'This page allows you to the modem's time configuration.' A checkbox labeled 'Automatically synchronize with Internet time servers' is present and is currently unchecked. At the bottom center of the page is a green circular icon with a white checkmark and the word 'Apply' below it.

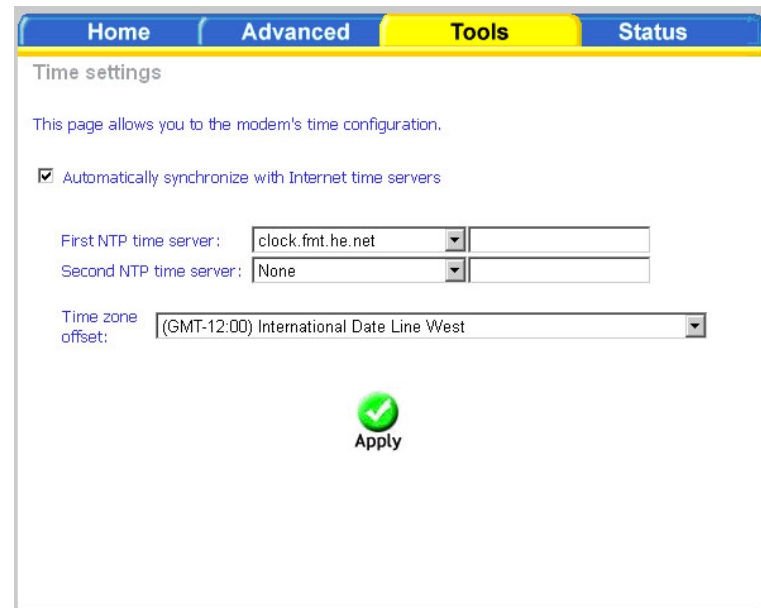

The screenshot shows the 'Time settings' page with the same navigation bar. The checkbox 'Automatically synchronize with Internet time servers' is now checked. Below the checkbox, there are two rows of NTP time server settings. The first row is labeled 'First NTP time server:' and has a dropdown menu showing 'clock.fmt.he.net' and an adjacent text input field. The second row is labeled 'Second NTP time server:' and has a dropdown menu showing 'None' and an adjacent text input field. Below these is a 'Time zone offset:' dropdown menu showing '(GMT-12:00) International Date Line West'. At the bottom center is the same green 'Apply' button.

Remote Log

The System Log screen allows you to view the system log and configure the system log options.

To view the system log, click on the **View System Log** button.


Note: When you click on the View System Log button, the System Log screen is located under the Status section (see screen on right). To return to the previous screen to configure system log, remember to click on the Tools tab (located on top row) first and then click on Remotelog.

The System Log screen shows the date/time of the log, the facility that was logged, the severity level and the log message. Click on **Refresh** to view any new information that has been logged.

If the log is enabled, the system will log selected events including Emergency, Alert, Critical, Error, Warning, Notice, Informational, and Debugging. All events above or equal to the selected log level will be logged and displayed.





System log when log is disabled.

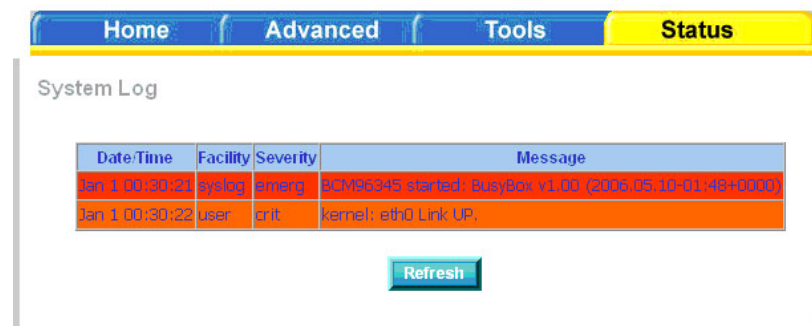

System log when log is enabled.

To configure the system log, click the **Configure System Log** button.

From the configuration screen, set the log to Enable, select the Log Level, Display Level and Mode. If the selected mode is “Remote” or “Both”, events will be sent to a specified IP address and UDP port of a remote system log server. If the selected mode is “Local” or “Both”, events will be recorded and viewed locally. Select the desired values and click **Apply** to save the system log options.

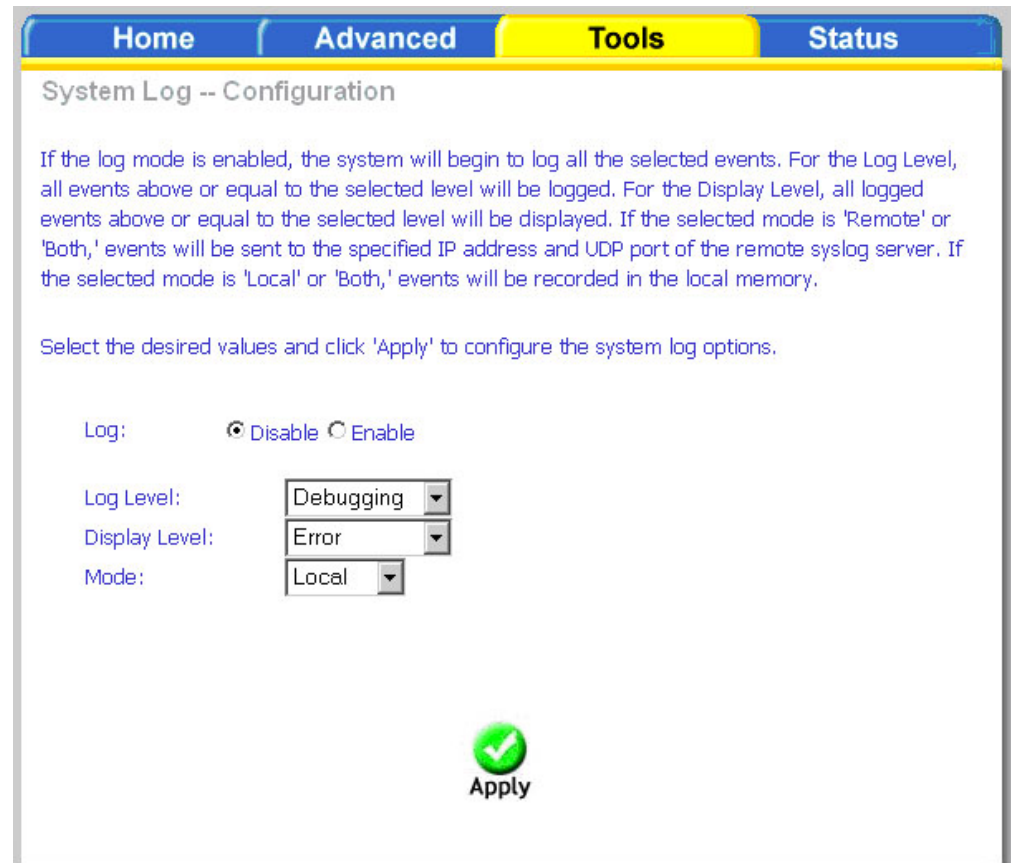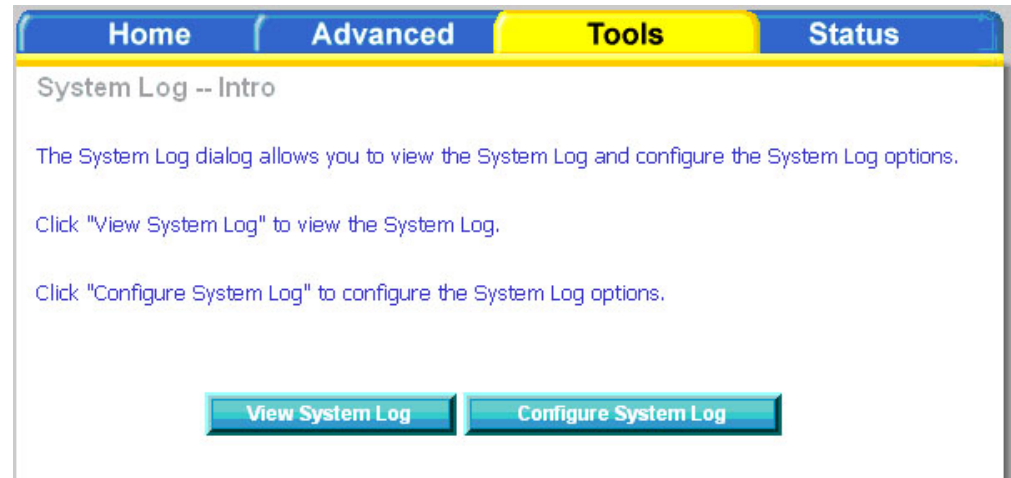

System

The system section includes several tools on one page, including save and reboot, backup settings, update settings, and restore default settings.

Save and Reboot

The Save/Reboot button, when clicked, will save all configuration changes made on the modem and restart the device. All new configuration settings will take effect when the modem starts up again.

Backup Settings

The Backup Settings button allows you to save your modem configuration to a file on your computer so that it may be accessed again later. This feature is useful if you have changed the configuration on the modem, but would like to revert to a previous configuration.


To save your current configuration, click the **Backup Settings** button. The following pop-up screen will appear with a prompt to open or save the file to your computer.



Update Settings


To load a previously saved configuration file onto your modem, click **Browse**, select the file on your computer and then click on Update Settings.

The modem will restore settings and reboot to activate the restored settings.

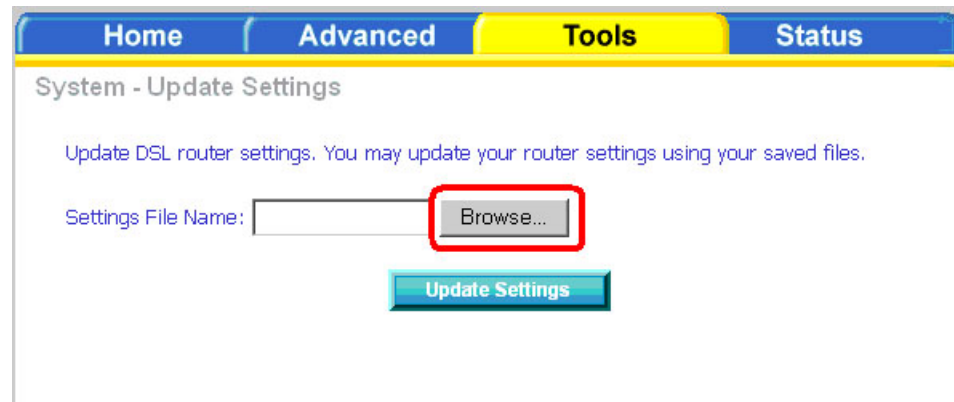

Restore Default Settings


Restore Default Settings will delete all current settings and restore the modem to factory default settings. Click on the **Restore Default Settings** button to proceed. The following confirmation dialog will appear confirming your decision to restore default settings. Click on **OK** to continue.

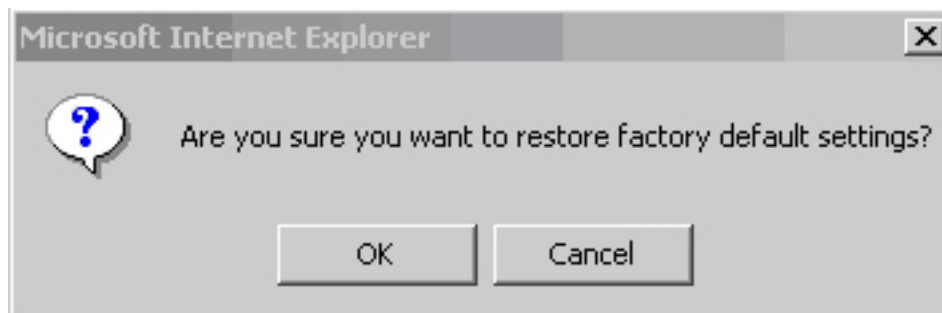

Firmware

If your ISP releases new software for this modem, follow these steps to perform an upgrade.

1. Obtain an updated software image file (firmware) from your ISP.
2. Enter the path of the image file location or click the **Browse** button to locate the image file.
3. Click the **Update Software** button once to upload the new image file.

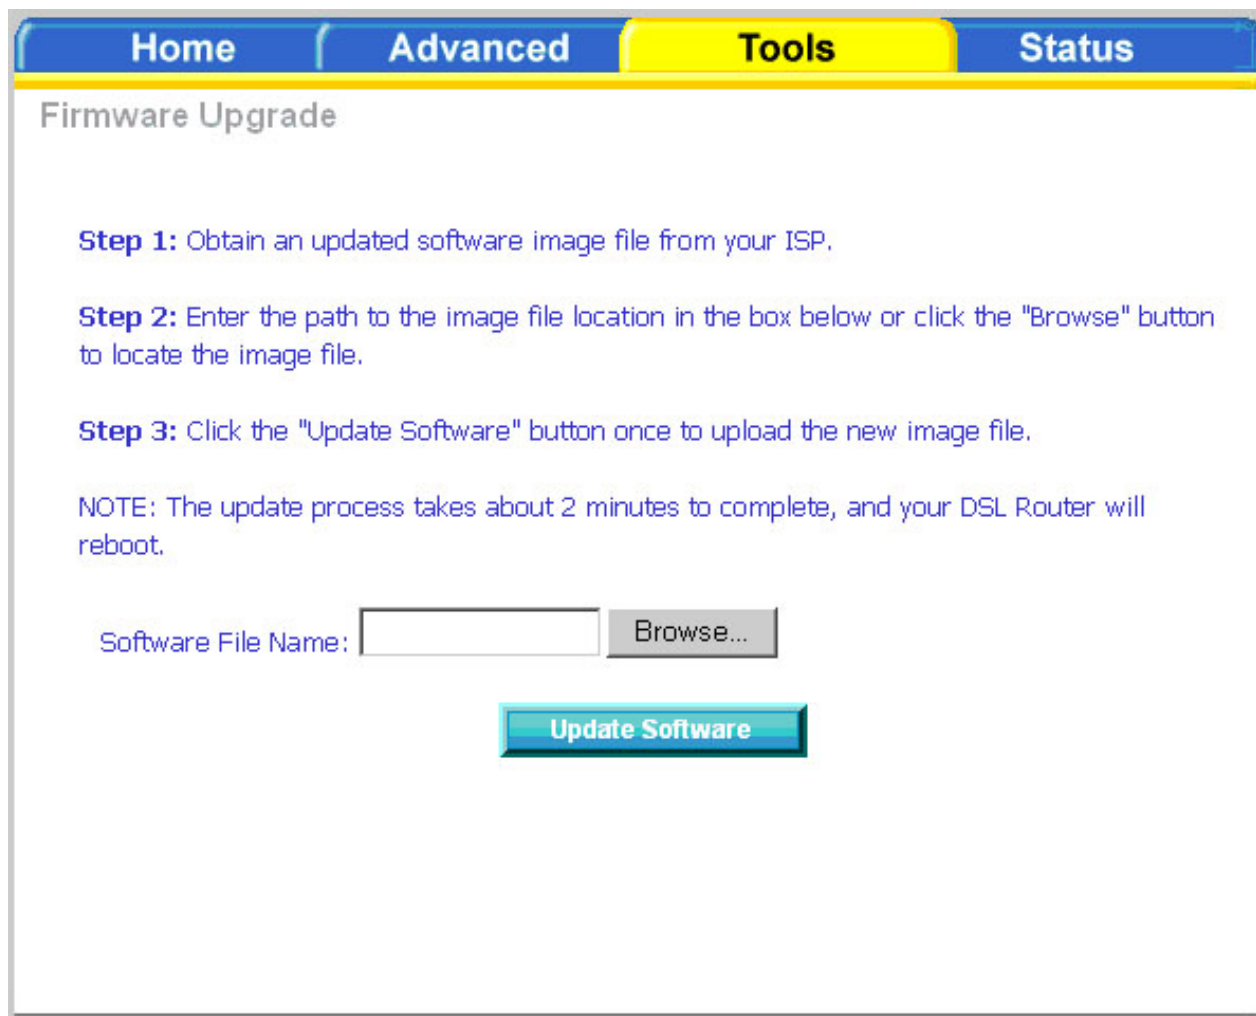

The screenshot shows a web interface with a navigation bar at the top containing four tabs: "Home", "Advanced", "Tools", and "Status". The "Tools" tab is highlighted in yellow. Below the navigation bar, the page title is "Firmware Upgrade".

Below the title, there are three instructional steps:

- Step 1:** Obtain an updated software image file from your ISP.
- Step 2:** Enter the path to the image file location in the box below or click the "Browse" button to locate the image file.
- Step 3:** Click the "Update Software" button once to upload the new image file.

Below the steps, there is a note: "NOTE: The update process takes about 2 minutes to complete, and your DSL Router will reboot."

At the bottom of the page, there is a form with the label "Software File Name:" followed by a text input field and a "Browse..." button. Below the input field and button is a large, blue, 3D-style button labeled "Update Software".

Test

The diagnostics screen allows you to run diagnostic tests to check your DSL connection. The results will show test results of three connections:

- Connection to your local network
- Connection to your DSL service provider
- Connection to your Internet service provider

There are three buttons at the bottom of the page; **Next Connection** (appears only if you have created more than one connection), **Test** and **Test with OAM F4** (which will allow you to retest if necessary).

The screenshot shows a web interface with a navigation bar containing 'Home', 'Advanced', 'Tools' (highlighted in yellow), and 'Status'. The main content area is titled 'br_0_35 Diagnostics' and contains the following text: 'Your modem is capable of testing your DSL connection. The individual tests are listed below. If a test displays a fail status, click "Rerun Diagnostic Tests" at the bottom of this page to make sure the fail status is consistent. If the test continues to fail, click "Help" and follow the troubleshooting procedures.'

Under the heading 'Test the connection to your local network', there is a table with two rows:

Test your ENET(1-4) Connection:	PASS	Help
Test your USB Connection:	DOWN	Help

Under the heading 'Test the connection to your DSL service provider', there is a table with three rows:

Test ADSL Synchronization:	FAIL	Help
Test ATM OAM F5 segment ping:	FAIL	Help
Test ATM OAM F5 end-to-end ping:	FAIL	Help

At the bottom of the page, there are three buttons: 'Next Connection', 'Test', and 'Test With OAM F4'.

Status

The status section allows you to view general and status information for your modem's connection.

Device Info

The Device Info page shows details of the modem such as the version of the software, bootloader, LAN IP address, etc. It also displays the current status of your DSL connection.

Home | Advanced | Tools | **Status**

Device Info

Board ID:	D-1P-W
Software Version:	3-06-04-0B00.A2pB021c.d19b
Bootloader (CFE) Version:	1.0.37-4.3
Wireless Driver Version:	3.131.35.0.cpe2.3

This information reflects the current status of your DSL connection.

Line Rate - Upstream (Kbps):	
Line Rate - Downstream (Kbps):	
LAN IP Address:	192.168.1.1
Default Gateway:	
Primary DNS Server:	192.168.1.1
Secondary DNS Server:	192.168.1.1

WAN Info

The WAN Info screen displays WAN connections previously set up in the Home section. There is an extra “Status” column used for connection status information, displaying either ADSL Link Down or ADSL Link Up.

Home Advanced Tools Status							
WAN Info							
VPI/VCI	Category	Service Name	Interface Name	Protocol	State	Status	IP Address
0/35	UBR	pppoe_0_35_1	ppp_0_35_1	PPPoA	Enabled	ADSL Link Down	
2/38	UBR	pppoe_2_38_1	ppp_2_38_1	PPPoE	Enabled	ADSL Link Down	

Route Info

The Route Info section displays route information showing the IP addresses of the destination, gateway, and subnet mask as well as other route information.

Home Advanced Tools Status						
Device Info -- Route						
Flags: U - up, ! - reject, G - gateway, H - host, R - reinstate D - dynamic (redirect), M - modified (redirect).						
Destination	Gateway	Subnet Mask	Flags	Metric	Service	Interface
192.168.1.0	0.0.0.0	255.255.255.0	U	0		br0

Log

This is the same screen as seen in the Remotelog section under tools.

System Log

Date/Time	Facility	Severity	Message
Jan 1 00:30:21	syslog	emerg	BCM96345 started: BusyBox v1.03 (2006.05.10-01:48+0000)
Jan 1 00:30:22	user	crit	kernel: eth0 Link UP.

Refresh

LAN

The LAN section shows received and transmitted packet information for the Ethernet interface. Click on **Reset Statistics** to renew the information.


LAN Statistics

Interface	Received				Transmitted			
	Bytes	Pkts	Errs	Drops	Bytes	Pkts	Errs	Drops
Ethernet	244894	2224	0	0	1145170	2289	0	0

Reset Statistics

WAN

The WAN section shows received and transmitted packet information for the WAN connections that you have set up. Click on **Reset Statistics** to renew the information.

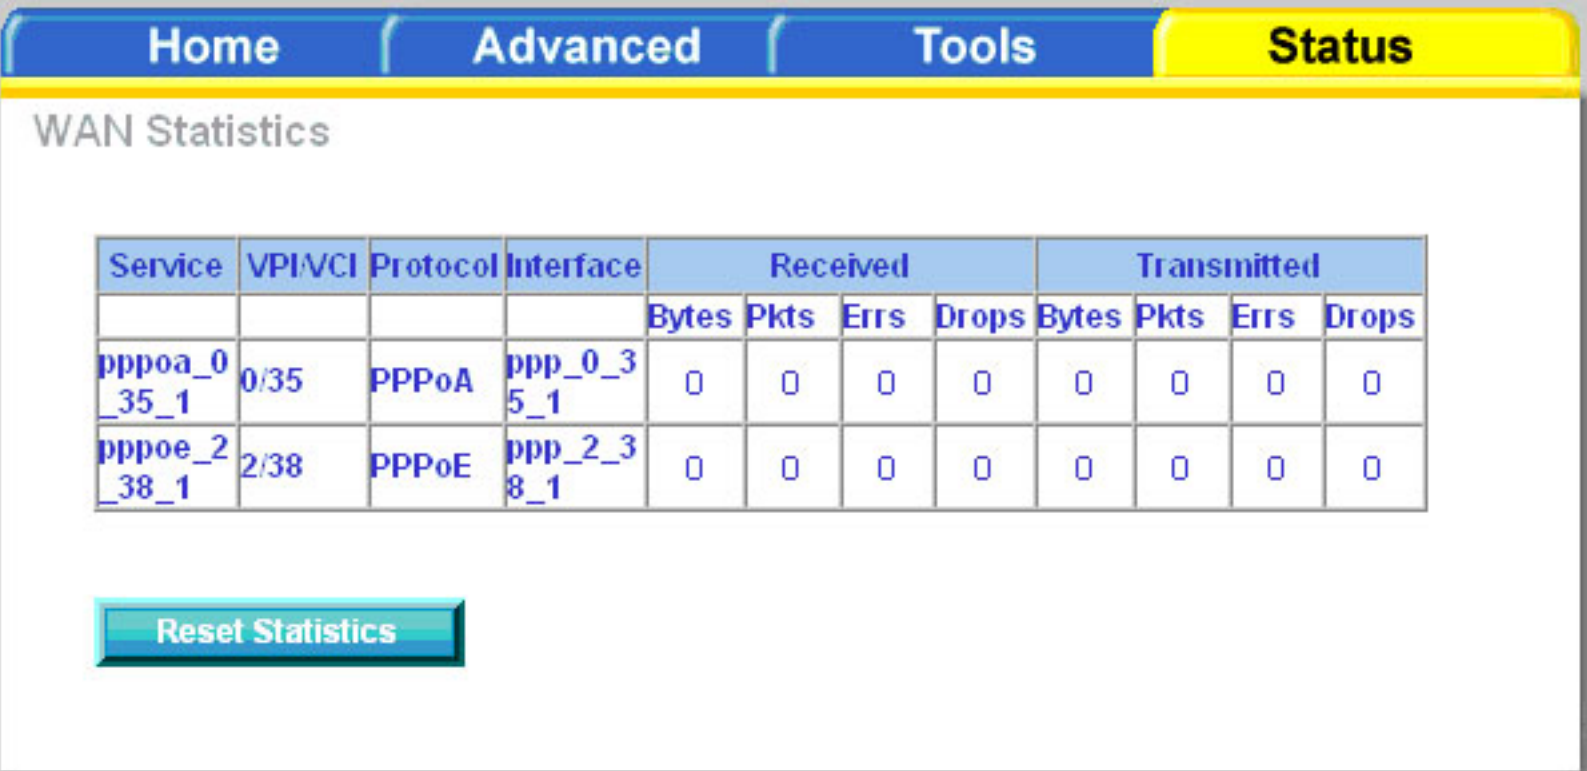

Home | Advanced | Tools | **Status**

WAN Statistics

Service	VPI/VCI	Protocol	Interface	Received				Transmitted			
				Bytes	Pkts	Errs	Drops	Bytes	Pkts	Errs	Drops
pppoa_0_35_1	0/35	PPPoA	ppp_0_35_1	0	0	0	0	0	0	0	0
pppoe_2_38_1	2/38	PPPoE	ppp_2_38_1	0	0	0	0	0	0	0	0

[Reset Statistics](#)

ATM

The ATM section displays statistical values for your ATM interface as well as for AAL5 and AAL5 VCC. Click on **Reset Statistics** to reset the values.

Home
Advanced
Tools
Status

Statistics -- ATM

ATM Interface Statistics

In Octets	2451
Out Octets	1412
In Errors	0
In Unknown	0
In Hec Errors	0
In Invalid Vpi Vci Errors	0
In Port Not Enable Errors	0
In PTI Errors	0
In Idle Cells	0
In Circuit Type Errors	0
In OAM RM CRC Errors	0
In GFC Errors	0

AAL5 Interface Statistics

In Octets	5195
Out Octets	1762
In Ucast Pkts	69
Out Ucast Pkts	19
In Errors	0
Out Errors	0
In Discards	0
Out Discards	0

AAL5 VCC Statistics

VPI/VCI	CRC Errors	SAR Timeouts	Oversized SDUs	Short Packet Errors	Length Errors
14/40	0	0	0	0	0

ADSL

Information contained in the ADSL screen is useful for troubleshooting and diagnosing connection problems.

Home
Advanced
Tools
Status

ADSL Statistics

Mode:	G.DMT	
Type:	Fast	
Line Coding:	Trellis On	
Status:	No Defect	
Link Power State:	LO	
Downstream Upstream		
SNR Margin (dB):	11.9	12.0
Attenuation (dB):	0.0	1.0
Output Power (dBm):	7.8	12.5
Attainable Rate (Kbps):	9568	1056
Rate (Kbps):	8000	800
K (number of bytes in DMT frame):	251	26
R (number of check bytes in RS code word):	0	0
S (RS code word size in DMT frame):	1	1
D (interleaver depth):	1	1
Delay (msec):	0	0
Super Frames:	18171	18169
Super Frame Errors:	1	200
RS Words:	0	0
RS Correctable Errors:	0	0
RS Uncorrectable Errors:	0	N/A
HEC Errors:	1	86
OCD Errors:	0	0
LCD Errors:	0	0
Total Cells:	5829071	0
Data Cells:	1040	0
Bit Errors:	0	0
Total ES:	2	0
Total SES:	1	0
Total UAS:	205	0

ADSL BER Test
Reset Statistics

ADSL BER Test

A Bit Error Rate Test (BER Test) is a test that reflects the ratio of error bits to the total number transmitted.

If you click on the **ADSL BER Test** button at the bottom of the ADSL Statistics page, the following pop-up screen will appear allowing you to set the tested time and to begin the test. Click **Start** to begin the test.



When you start the ADSL BER Test, the following progress window will display the connection speed as well as the length of time that the test will run for. At any time during the test, click on the **Stop** button to terminate the test.



When the test is complete, the following window will display the test results showing the test time, total transferred bits, total error bits and error ratio. Click **Exit** to close the window.



Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DSL-2320B. Read the following descriptions if you are having problems. (The examples below are illustrated in Windows® XP. If you have a different operating system, the screenshots on your computer will look similar to the following examples.)

1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link modem (192.168.1.1 for example), you are not connecting to a website on the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Internet Explorer 6.0 or higher
 - Netscape 8 or higher
 - Mozilla 1.7.12 (5.0) or higher
 - Opera 8.5 or higher
 - Safari 1.2 or higher (with Java 1.3.1 or higher)
 - Camino 0.8.4 or higher
 - Firefox 1.5 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any internet security software running on the computer. Software firewalls such as Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
 - Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** Icon. From the **Security** tab, click the button to restore the settings to their defaults.
 - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
 - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
 - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link modem in the address bar. This should open the login page for your the web management.
- If you still cannot access the configuration, unplug the power to the modem for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your modem. Unfortunately this process will change all your settings back to the factory defaults.

To reset the modem, locate the reset button (hole) on the rear panel of the unit. With the modem powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the modem will go through its reboot process. Wait about 30 seconds to access the modem. For information about logging into the modem see page 16.

Networking Basics

Check your IP address


After you install your new D-Link device, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless modem) automatically. To verify your IP address, please follow the steps below.

Click on **Start > Run**. In the run box type **cmd** and click **OK**.

At the prompt, type **ipconfig** and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your device installation, security settings, and the settings on your modem. Some firewall software programs may block a DHCP request on newly installed device.

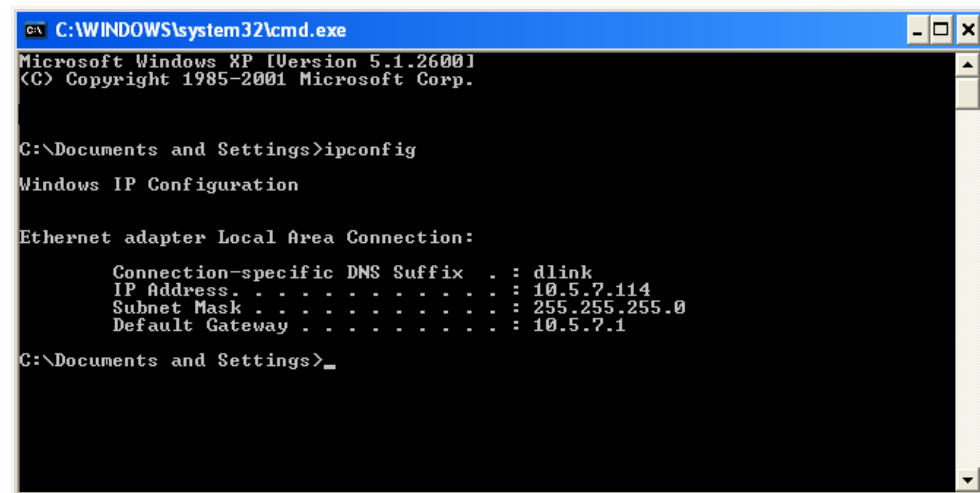

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address. . . . .                : 10.5.7.114
    Subnet Mask . . . . .              : 255.255.255.0
    Default Gateway . . . . .          : 10.5.7.1

C:\Documents and Settings>_
```

If you are connecting to a wireless network at a hotspot (e.g. hotel, coffee shop, airport), please contact an employee or administrator to verify their wireless network settings.

Check your MAC address

Click on **Start > Run**. In the run box type **cmd** and click **OK**.

At the prompt, type **ipconfig /all** and press **Enter**.

This will display information about all installed adapters on your computer. Your MAC address is listed as the “Physical Address” and should look like xx-xx-xx-xx-xx-xx or xx:xx:xx:xx:xx:xx

Statically Assign an IP address

If you are not using a DHCP capable gateway/modem, or you need to assign a static IP address, please follow the steps below:

Step 1

Windows® XP - Click on **Start > Control Panel > Network Connections**.

Windows® 2000 - From the desktop, right-click **My Network Places > Properties**.

Step 2

Right-click on the **Local Area Connection** which represents your D-Link network adapter and select **Properties**.

Step 3

Highlight **Internet Protocol (TCP/IP)** and click **Properties**.

Step 4


Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your modem.

Example: If the modem's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your modem (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your modem (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

Step 5

Click OK twice to save your settings.

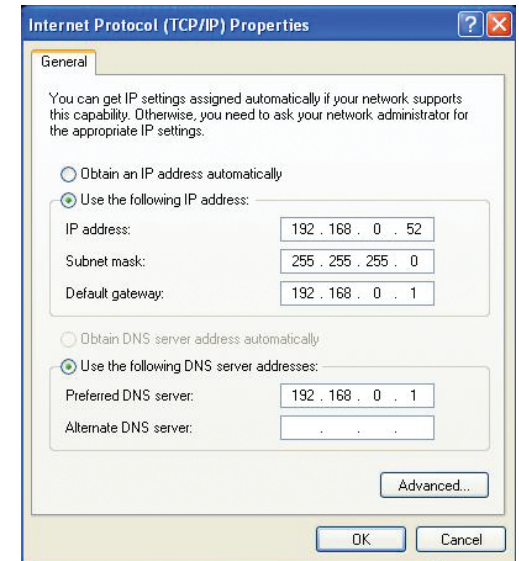

Contacting Technical Support

U.S. and Canadian customers can contact D-Link technical support through our web site or by phone.

Before you contact technical support, please have the following ready:

- Model number of the product (e.g. DSL-2320B)
- Hardware Revision (located on the label on the bottom of the modem (e.g. rev A1))
- Serial Number (s/n number located on the label on the bottom of the modem).

You can find software updates and user documentation on the D-Link website as well as frequently asked questions and answers to technical issues.

For customers within the United States:

Phone Support:
(877) 453-5465

Internet Support:
<http://support.dlink.com>

For customers within Canada:

Phone Support:
(800) 361-5265

Internet Support:
<http://support.dlink.ca>

Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. (“D-Link”) provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

Limited Warranty: D-Link warrants that the hardware portion of the D-Link product described below (“Hardware”) will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below (“Warranty Period”), except as otherwise stated herein.

- Hardware (excluding power supplies and fans): One (1) year
- Power supplies and fans: One (1) year
- Spare parts and spare kits: Ninety (90) days

The customer’s sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link’s option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product (“Software”) will substantially conform to D-Link’s then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days (“Software Warranty Period”), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer’s sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link’s option, to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link’s functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty: The Limited Warranty provided hereunder for Hardware and Software portions of D-Link’s products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold “As-Is” without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim: The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-877-453-5465, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization (“RMA”) number by completing the RMA form and entering the assigned Case ID Number at <https://rma.dlink.com/>.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery (“COD”) is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to **D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708**. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer.

Appendix C - Warranty

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered: The Limited Warranty provided herein by D-Link does not cover: Products that, in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

Disclaimer of Other Warranties: EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

Governing Law: This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

Trademarks: D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

Copyright Statement: No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice. Copyright 2006 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning: This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

Registration



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.

Version 1.0
September 26, 2006